



EVOTECH[®]
P E R F O R M A N C E


www.evotech-performance.com


Triumph Trident Tail Tidy
Installation Instructions




Kit Contents PRN015578


(A) 1 x M8 x 20mm Button Head Bolt	(K) 4 x Grub Screw
(B) 1 x M5 x 16mm Button Head Bolt	(L) 4 x M5 x 35 Black Button Head Bolt
(C) 1 x M5 Washer	(M) 6 x M4 x 8 Black Button Head Bolt
(D) 1 x Back Spacer	
(E) 1 x Front Spacer	Optional
(F) 2 x M6 x 16 Black Button Head Bolt	(aa) 1 x Wire Cover
(G) 2 x M6 Flange Nut	(bb) 2 x Top Hat Washer
(H) 2 x M4 x 6 Black Button Head Bolt	(cc) 2 x M4 x 12mm Button Head Bolt
(I) 2 x P-Clip (No.2)	
(J) 4 x Undertray Spacer	

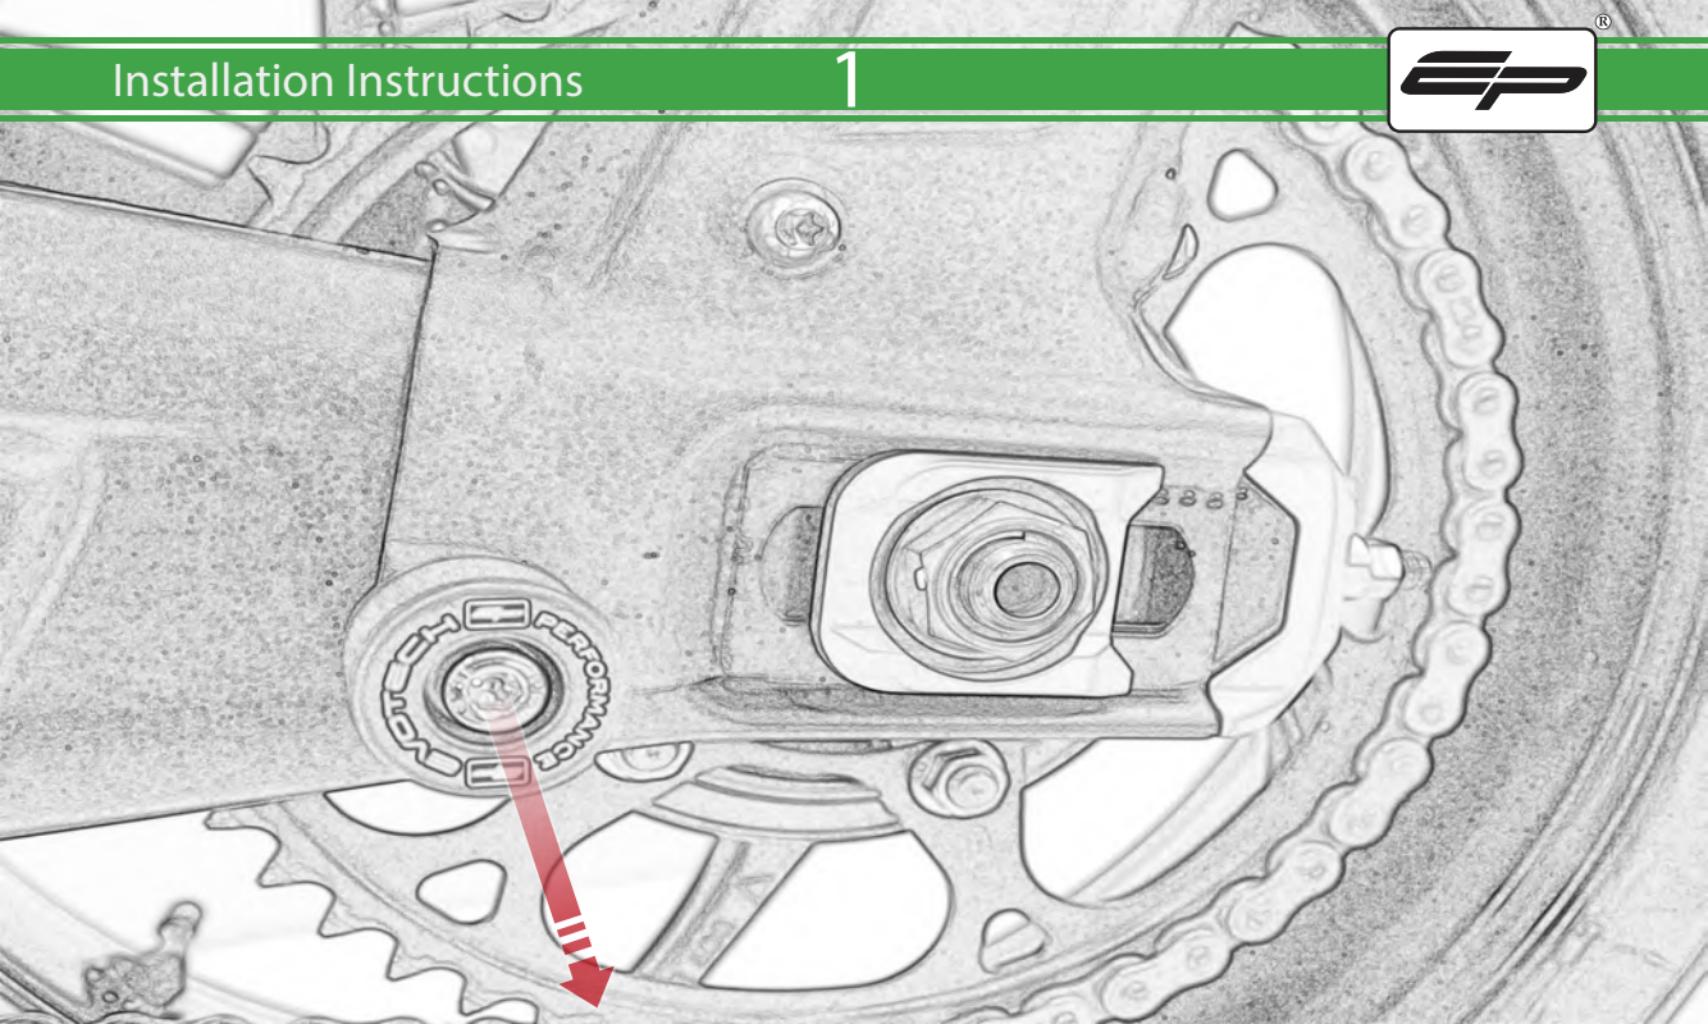


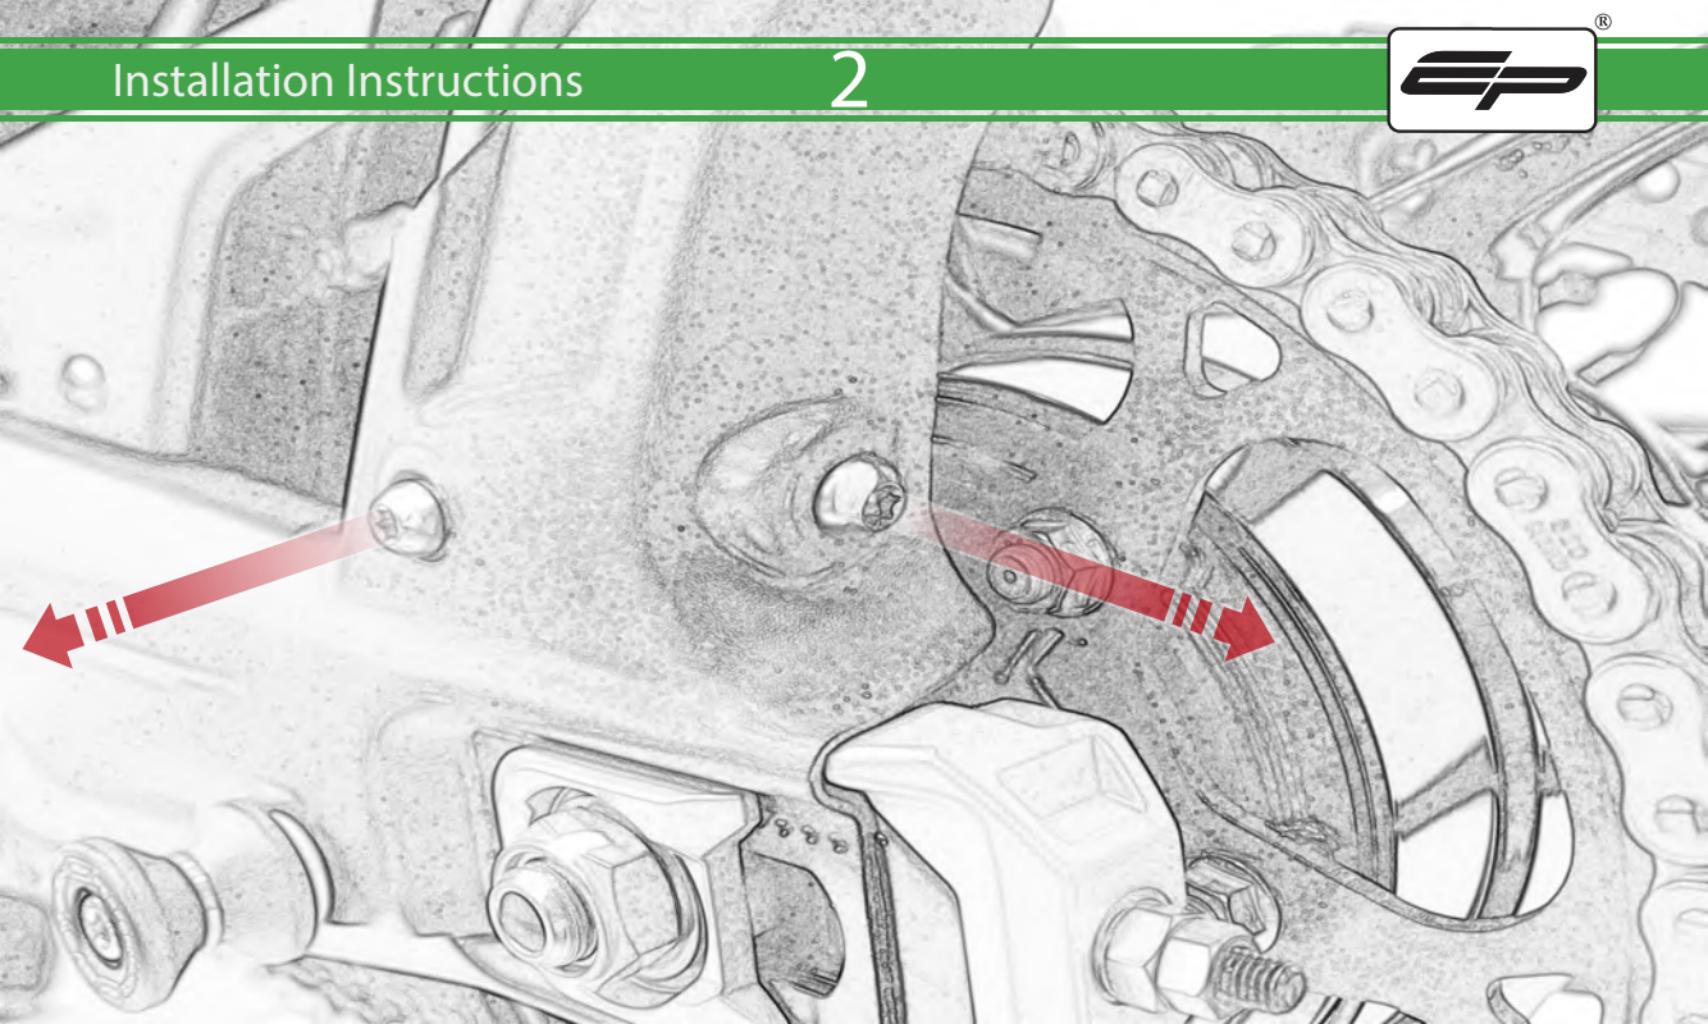





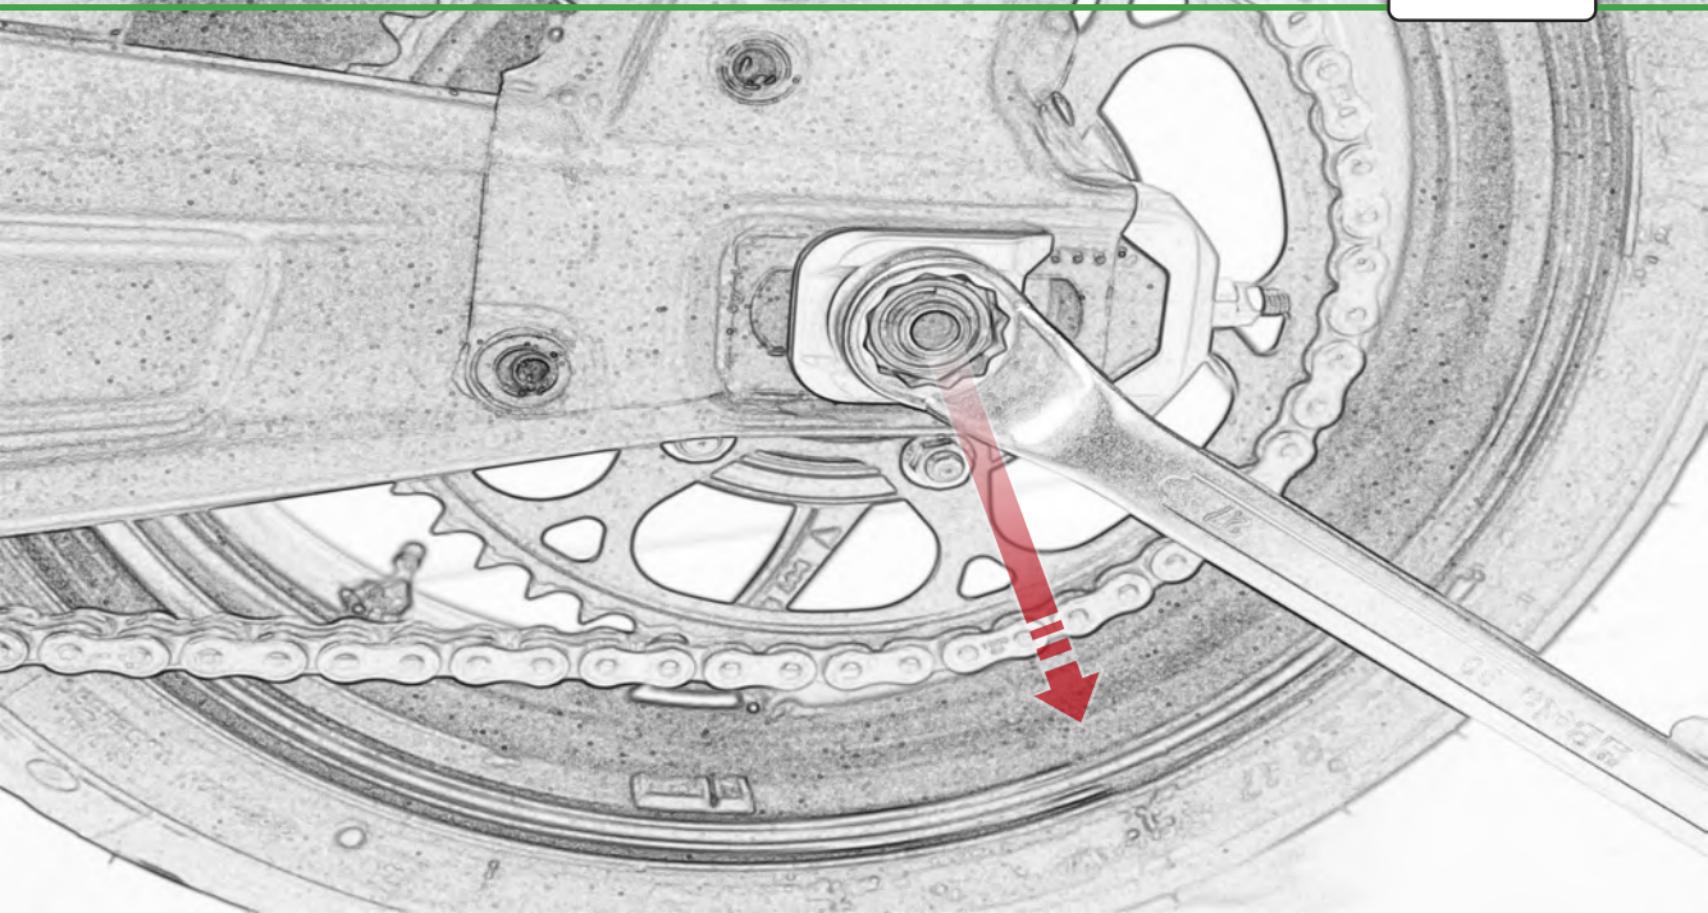


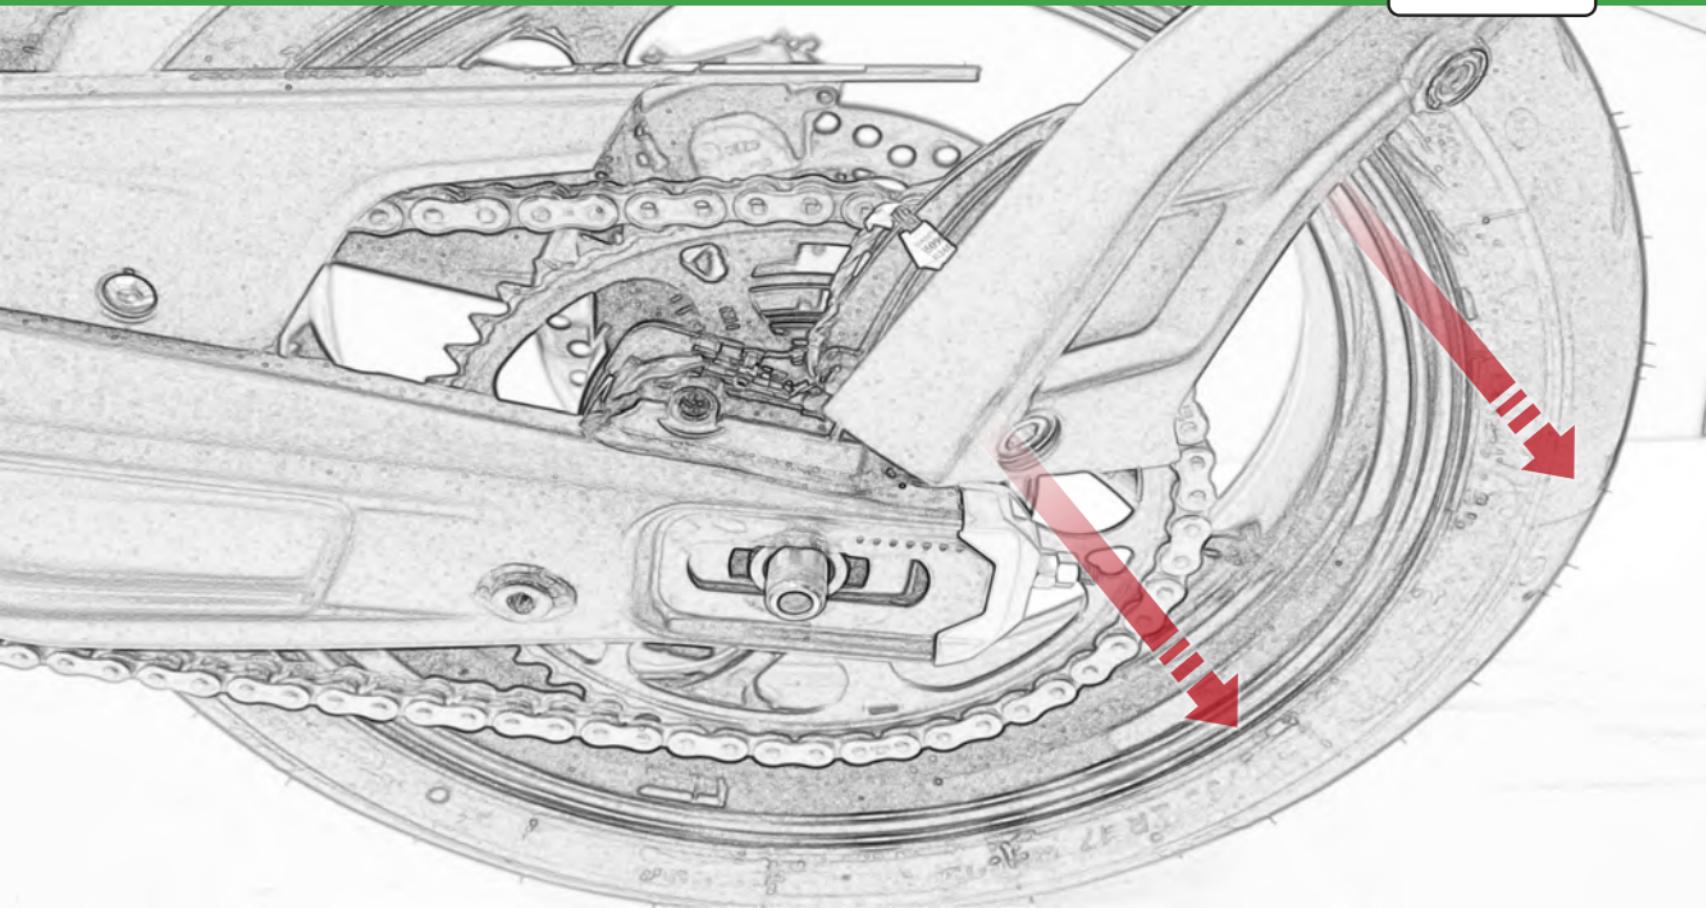


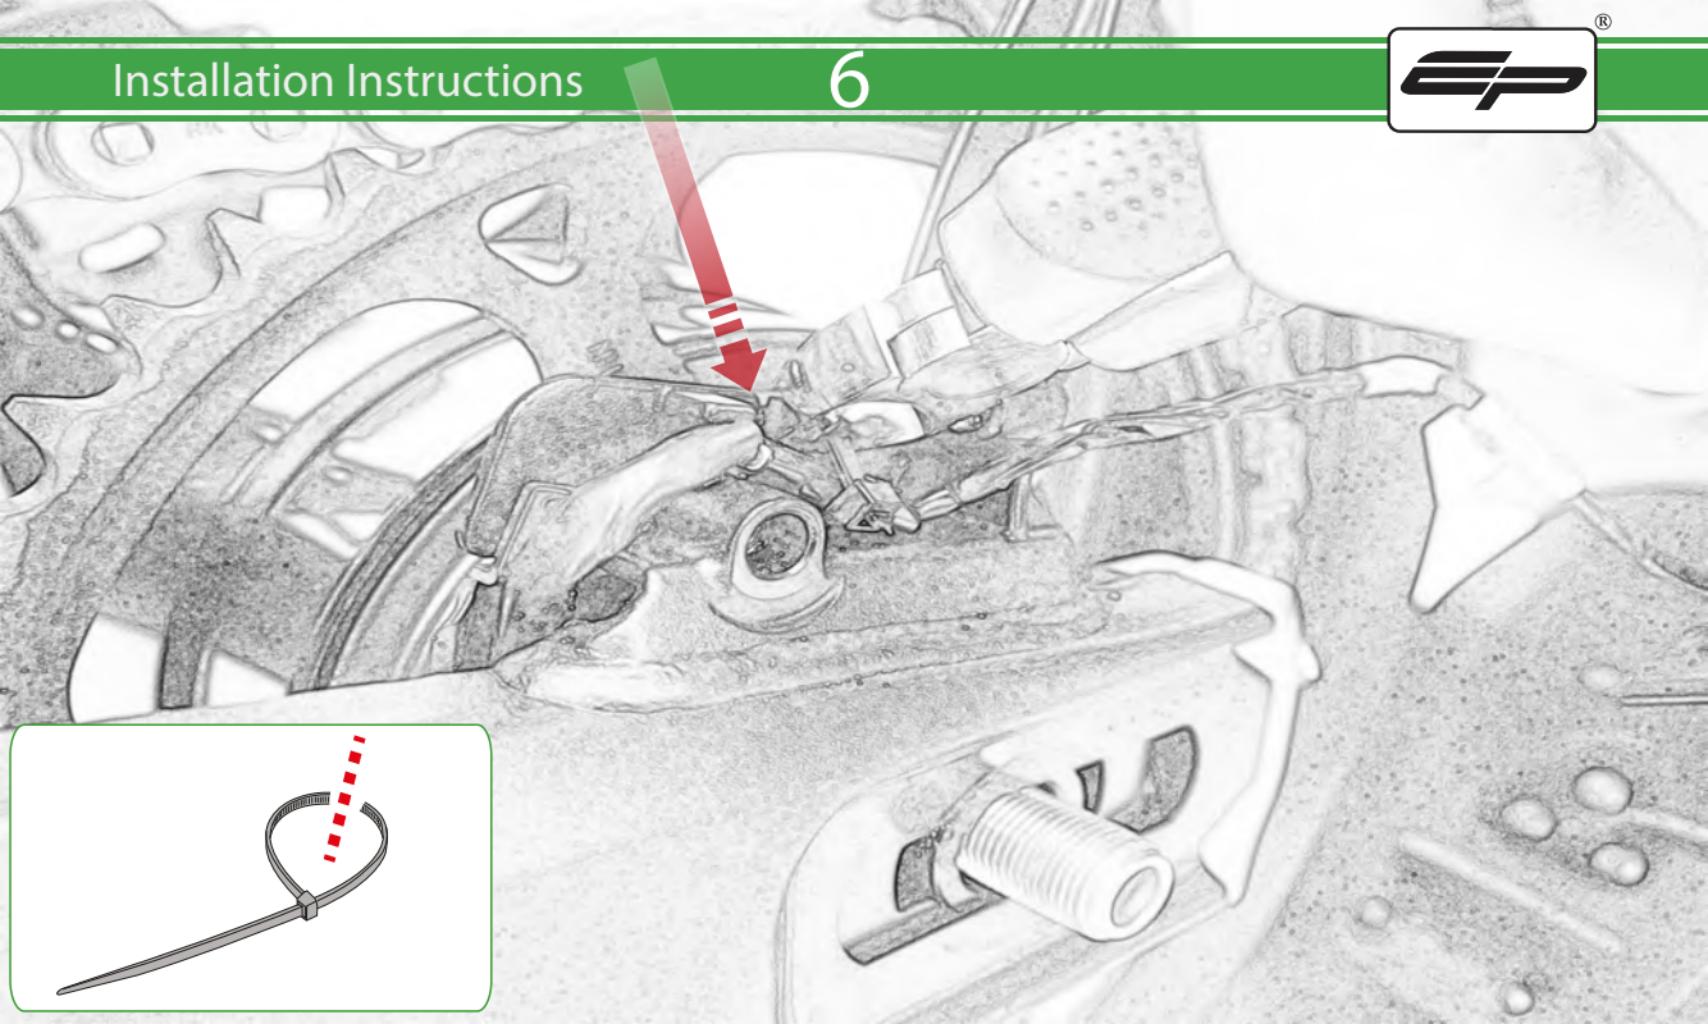


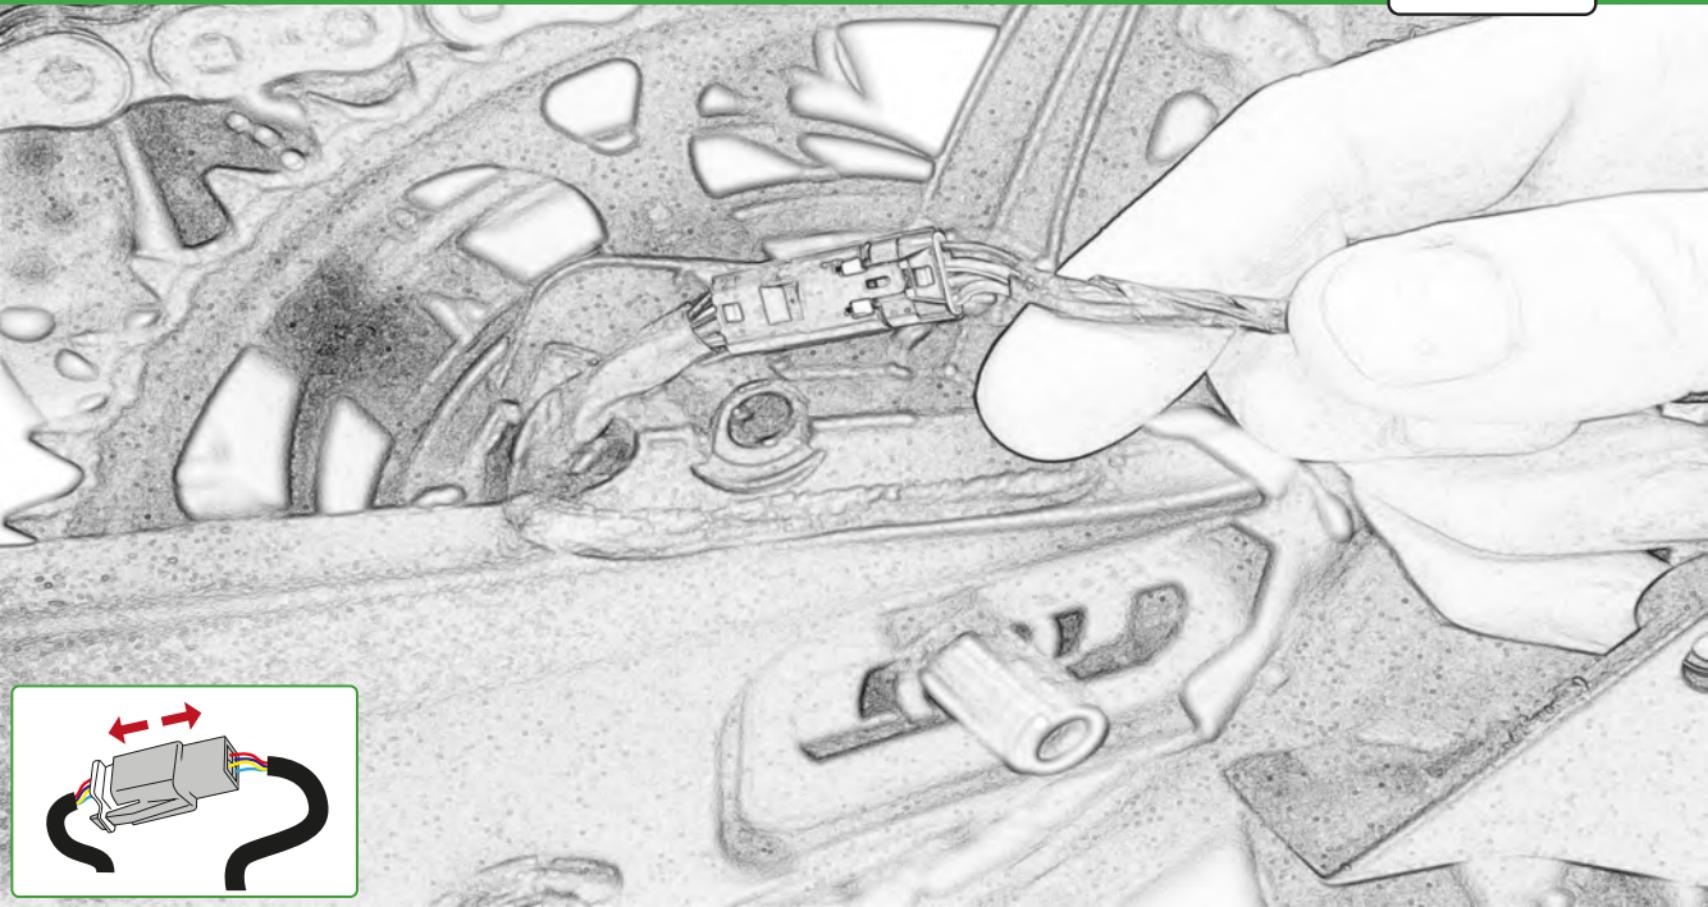


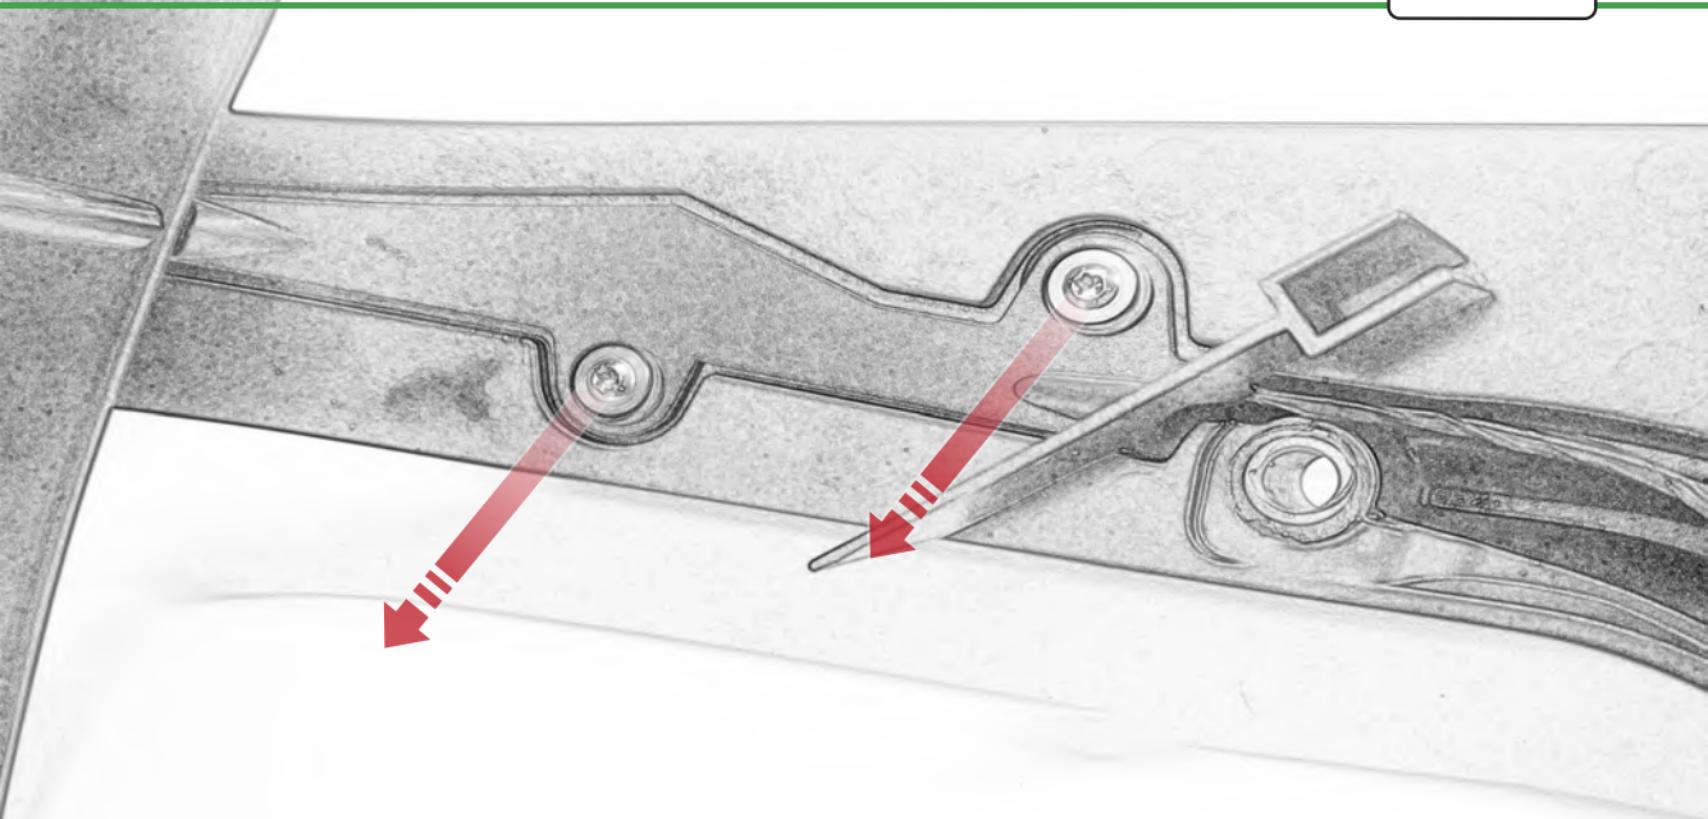


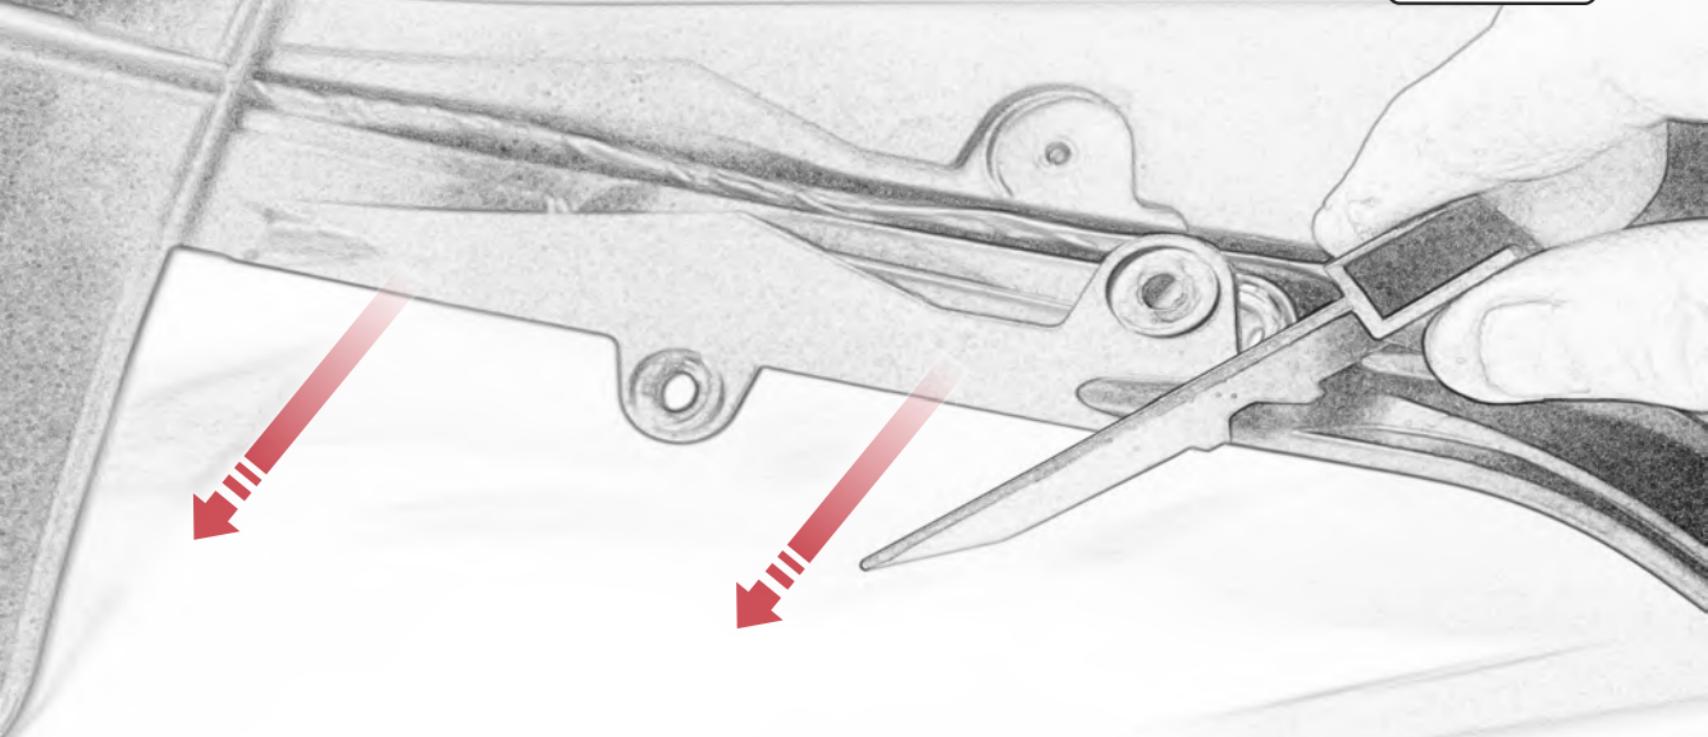


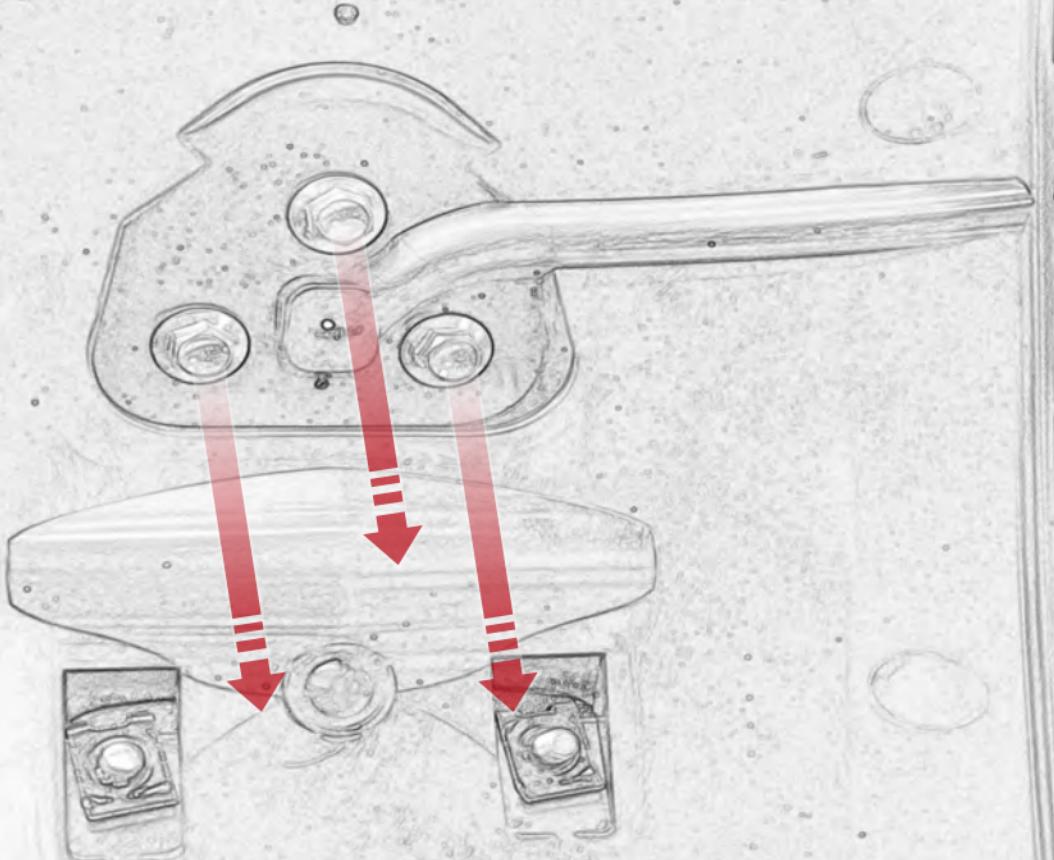

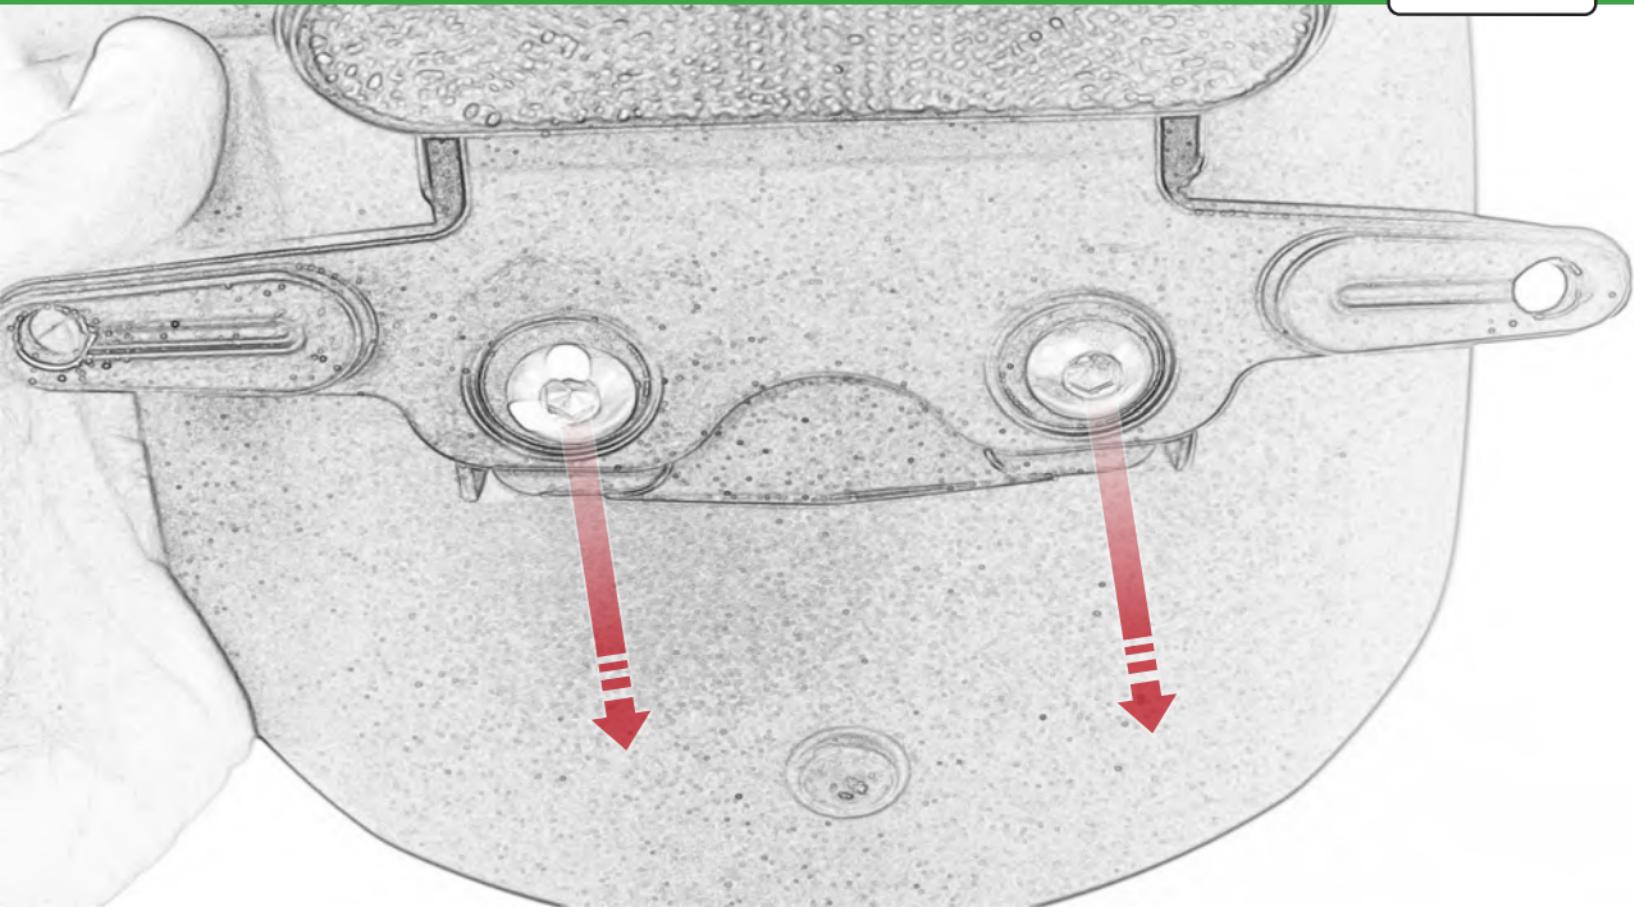


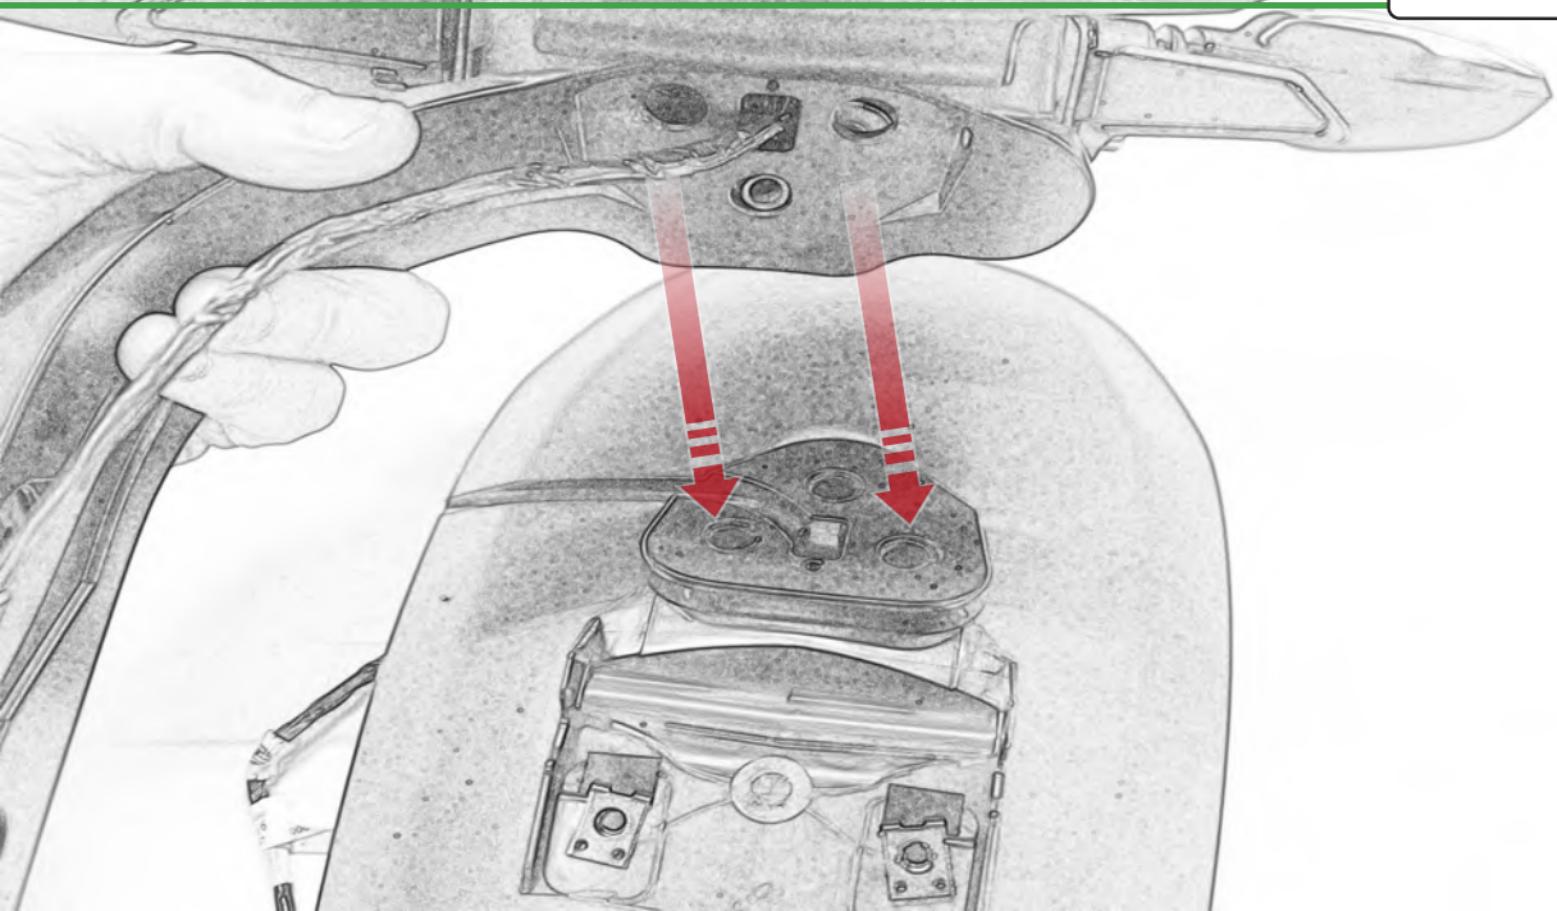


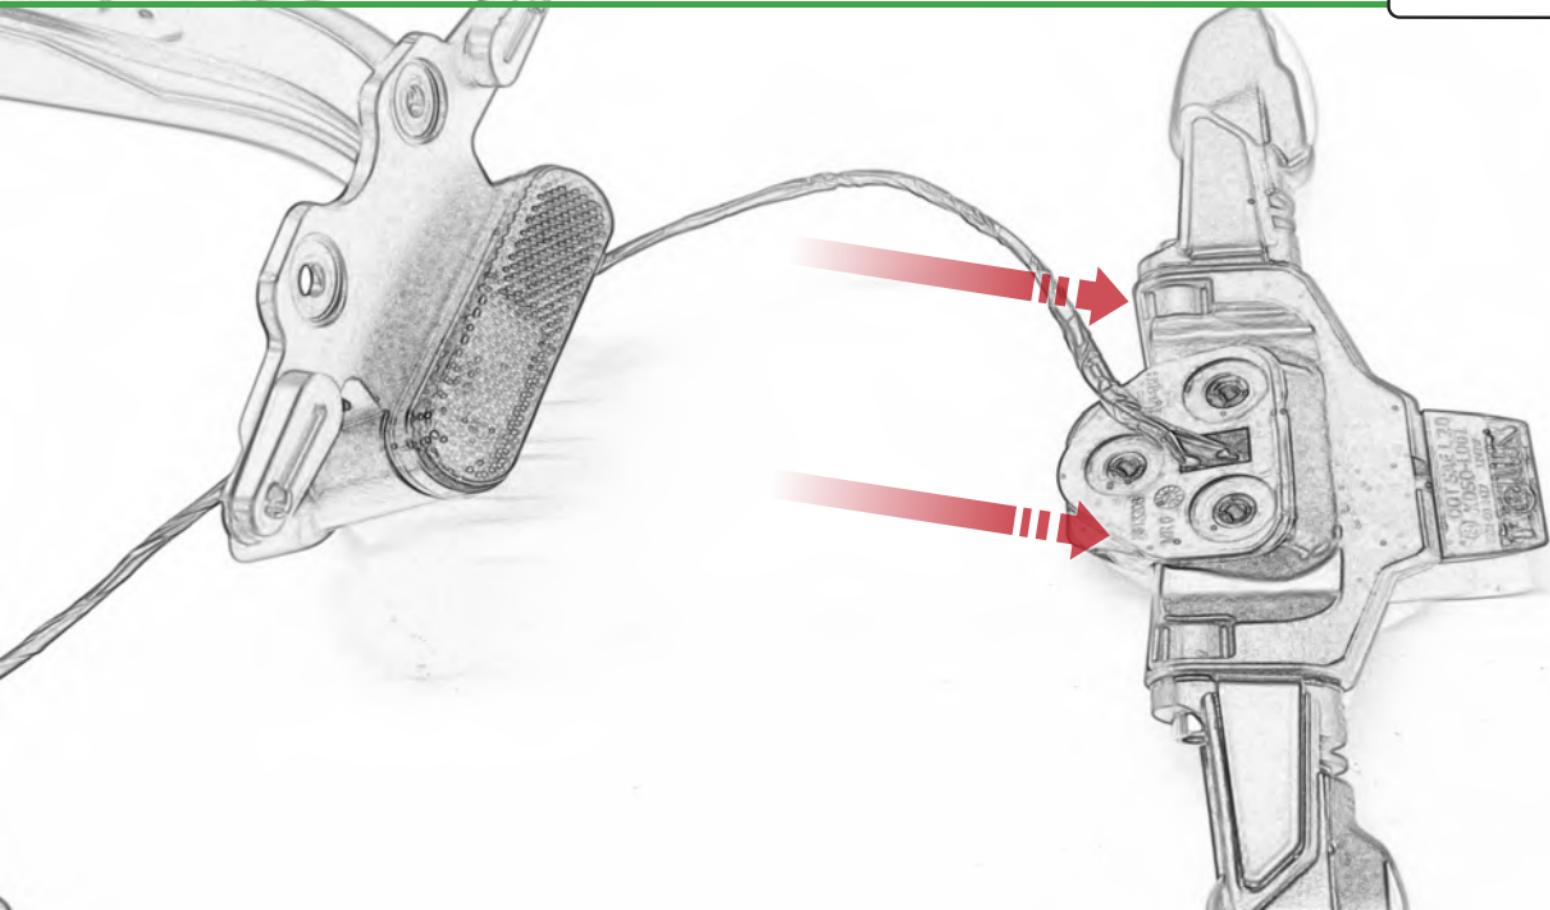


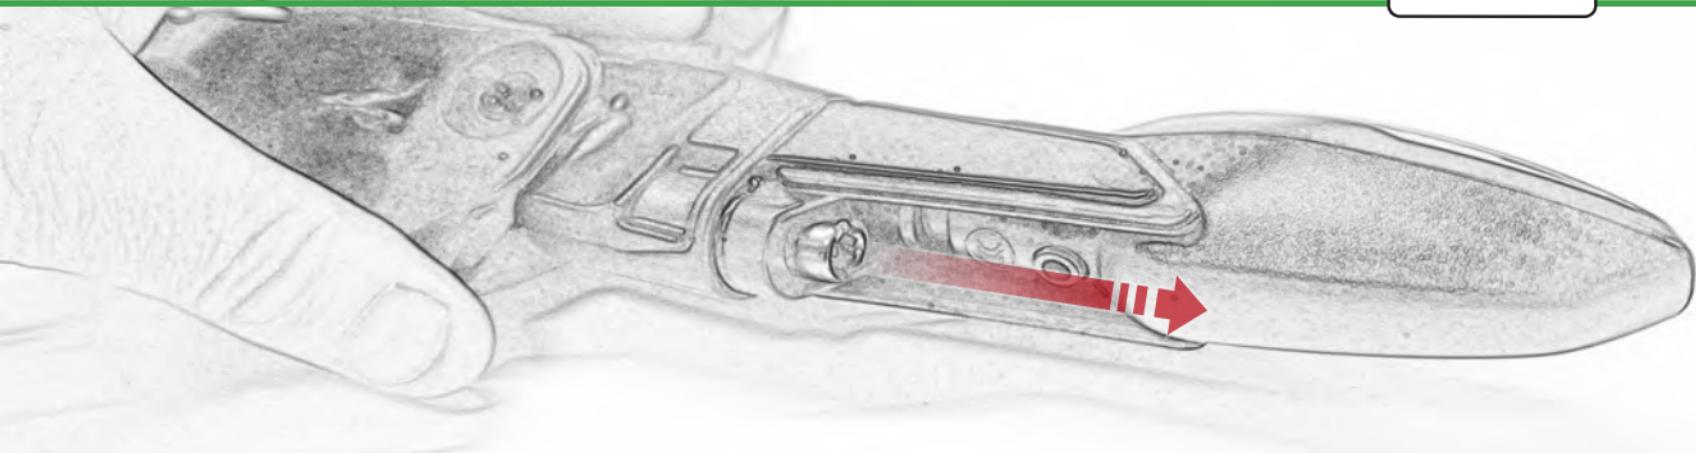


Repeat
Both Sides

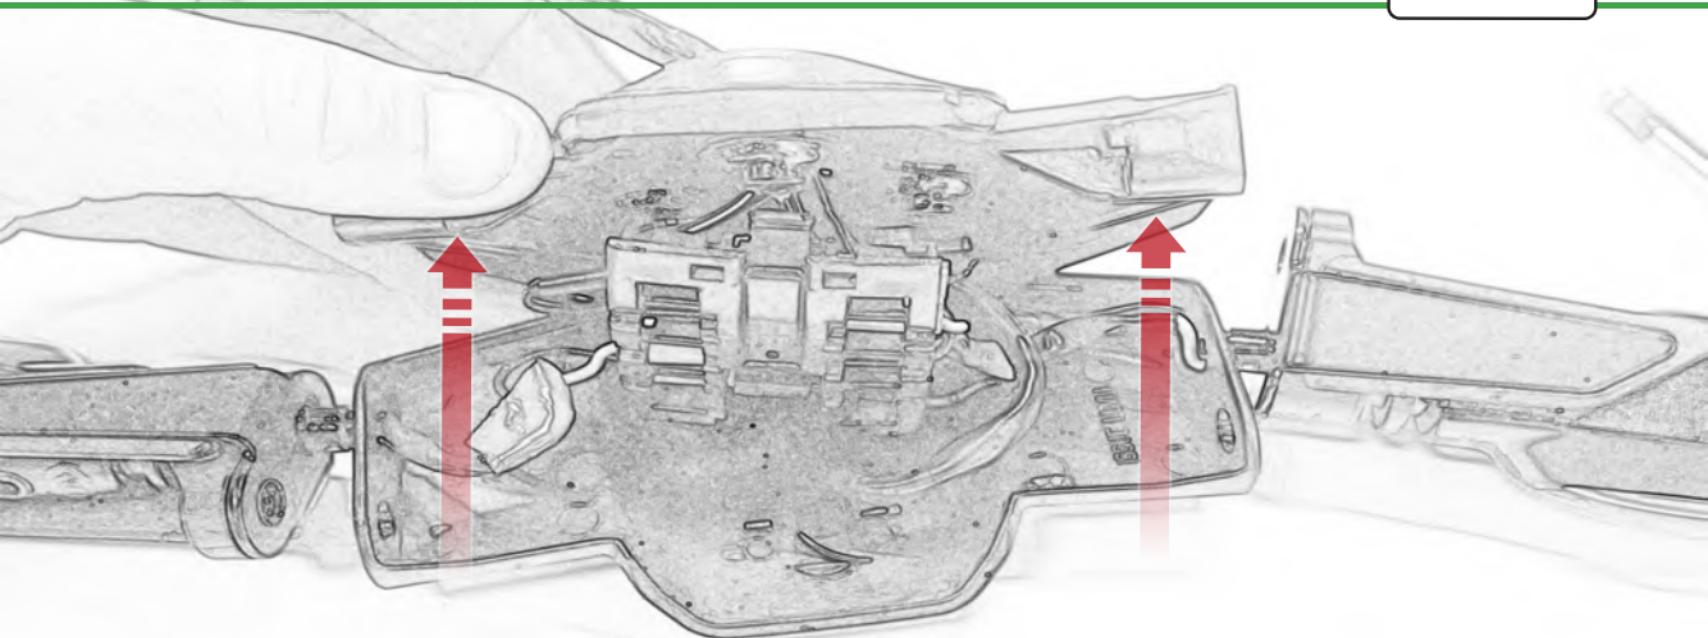


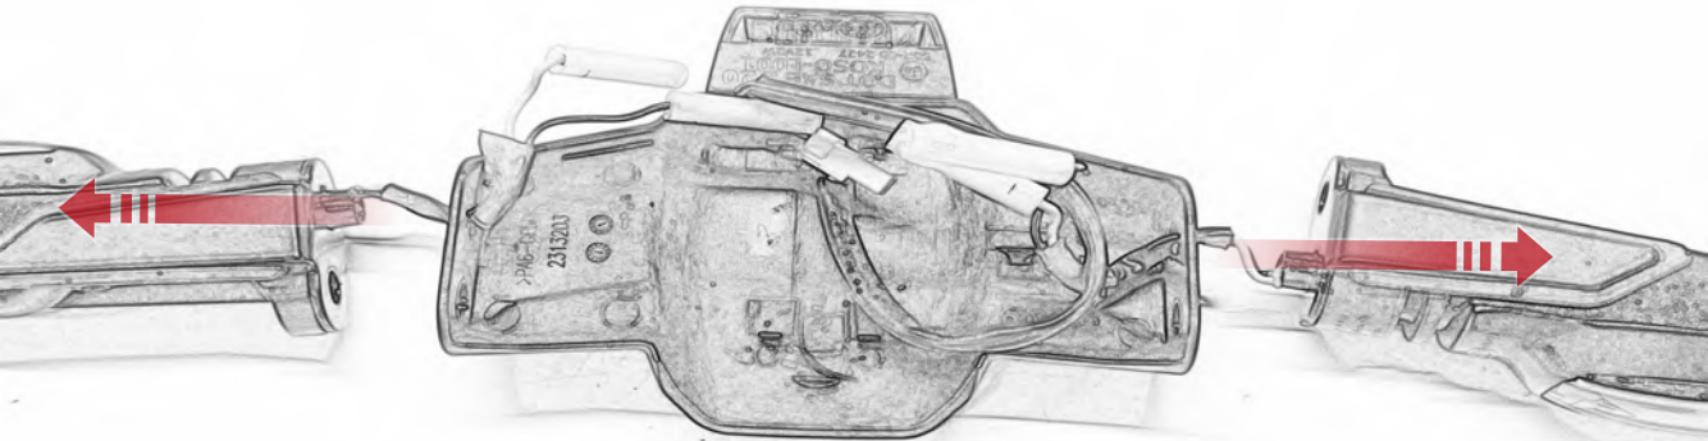


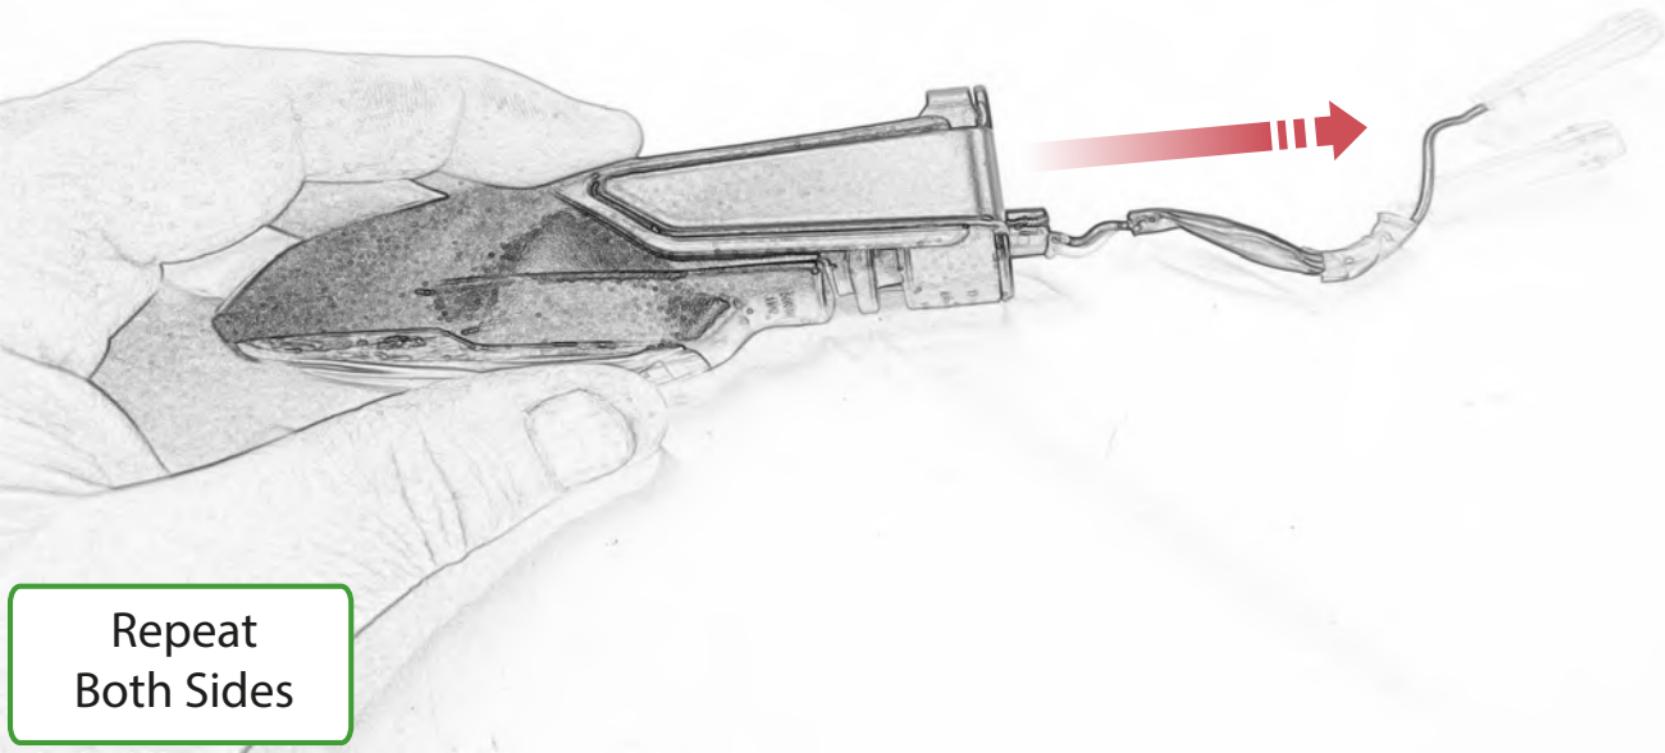



Repeat
Both Sides

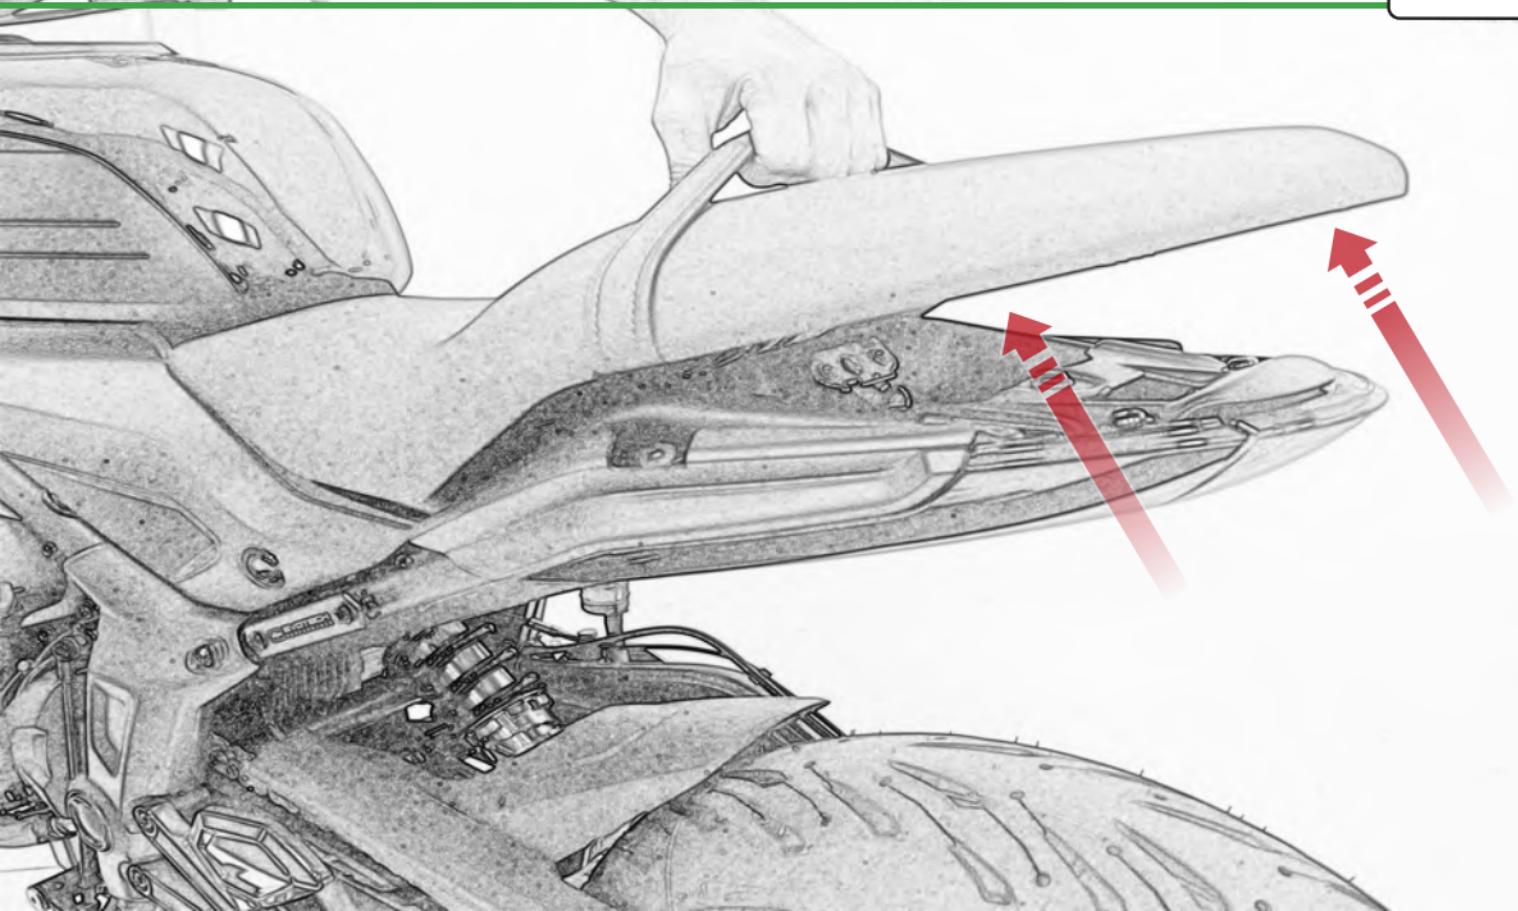


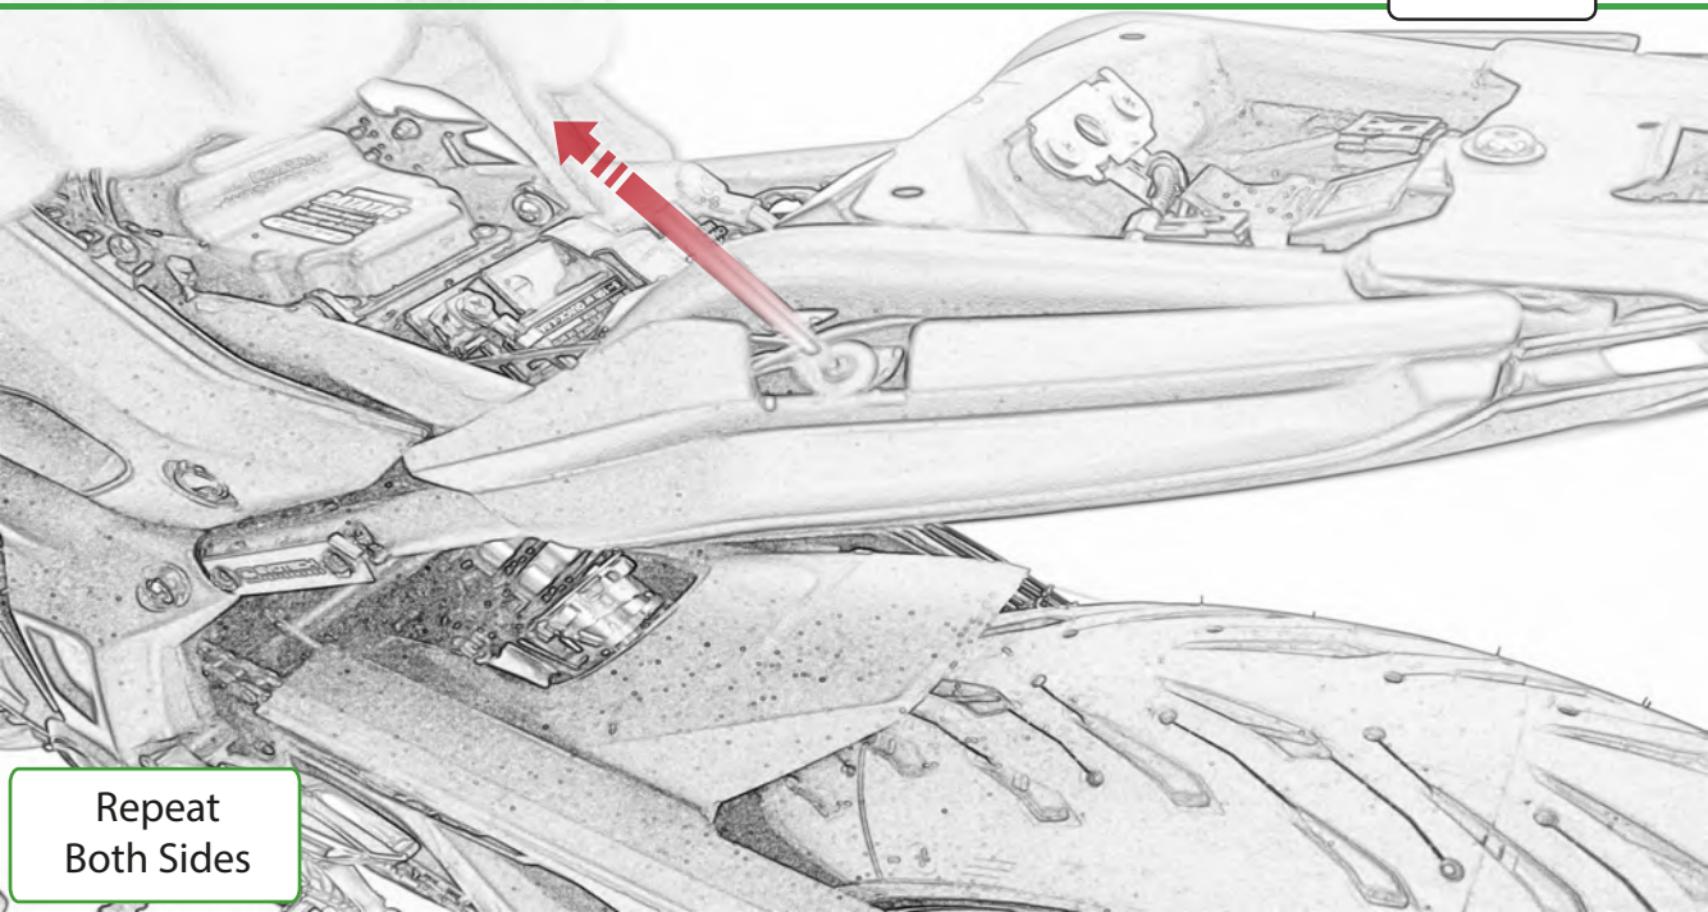


Repeat
Both Sides

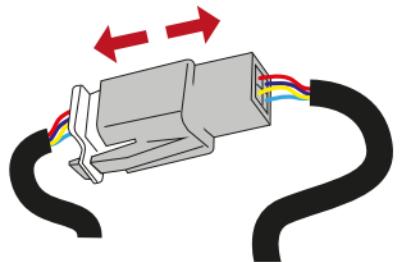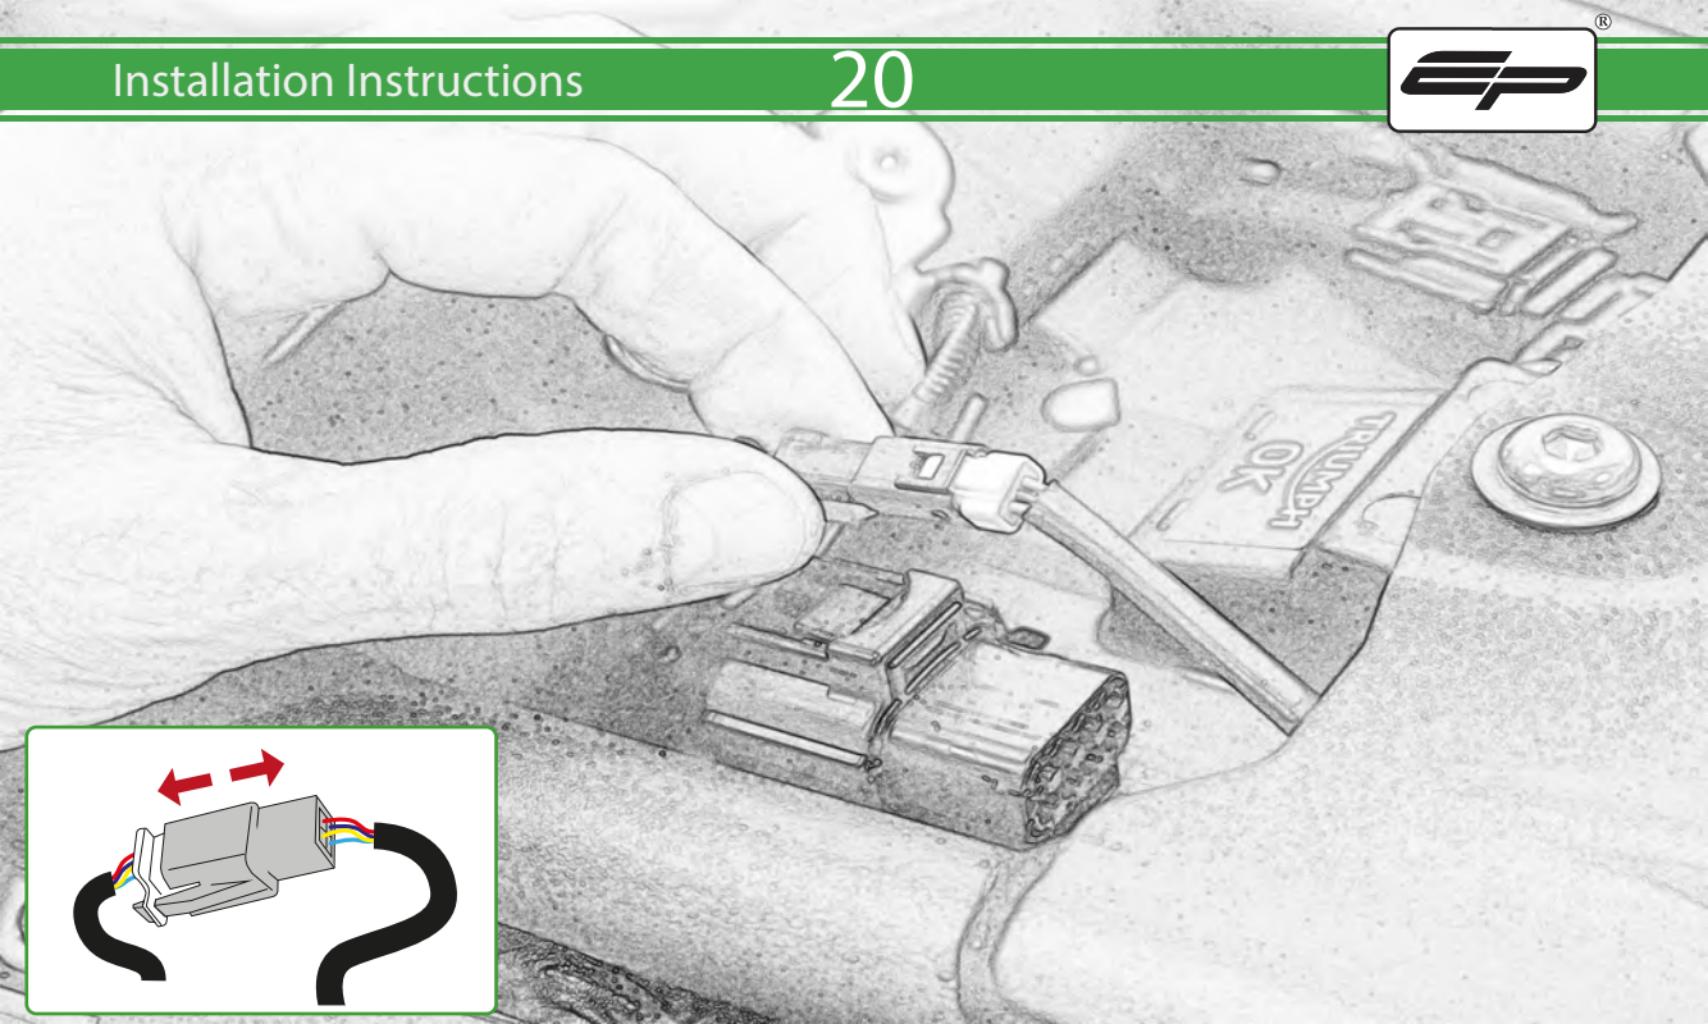

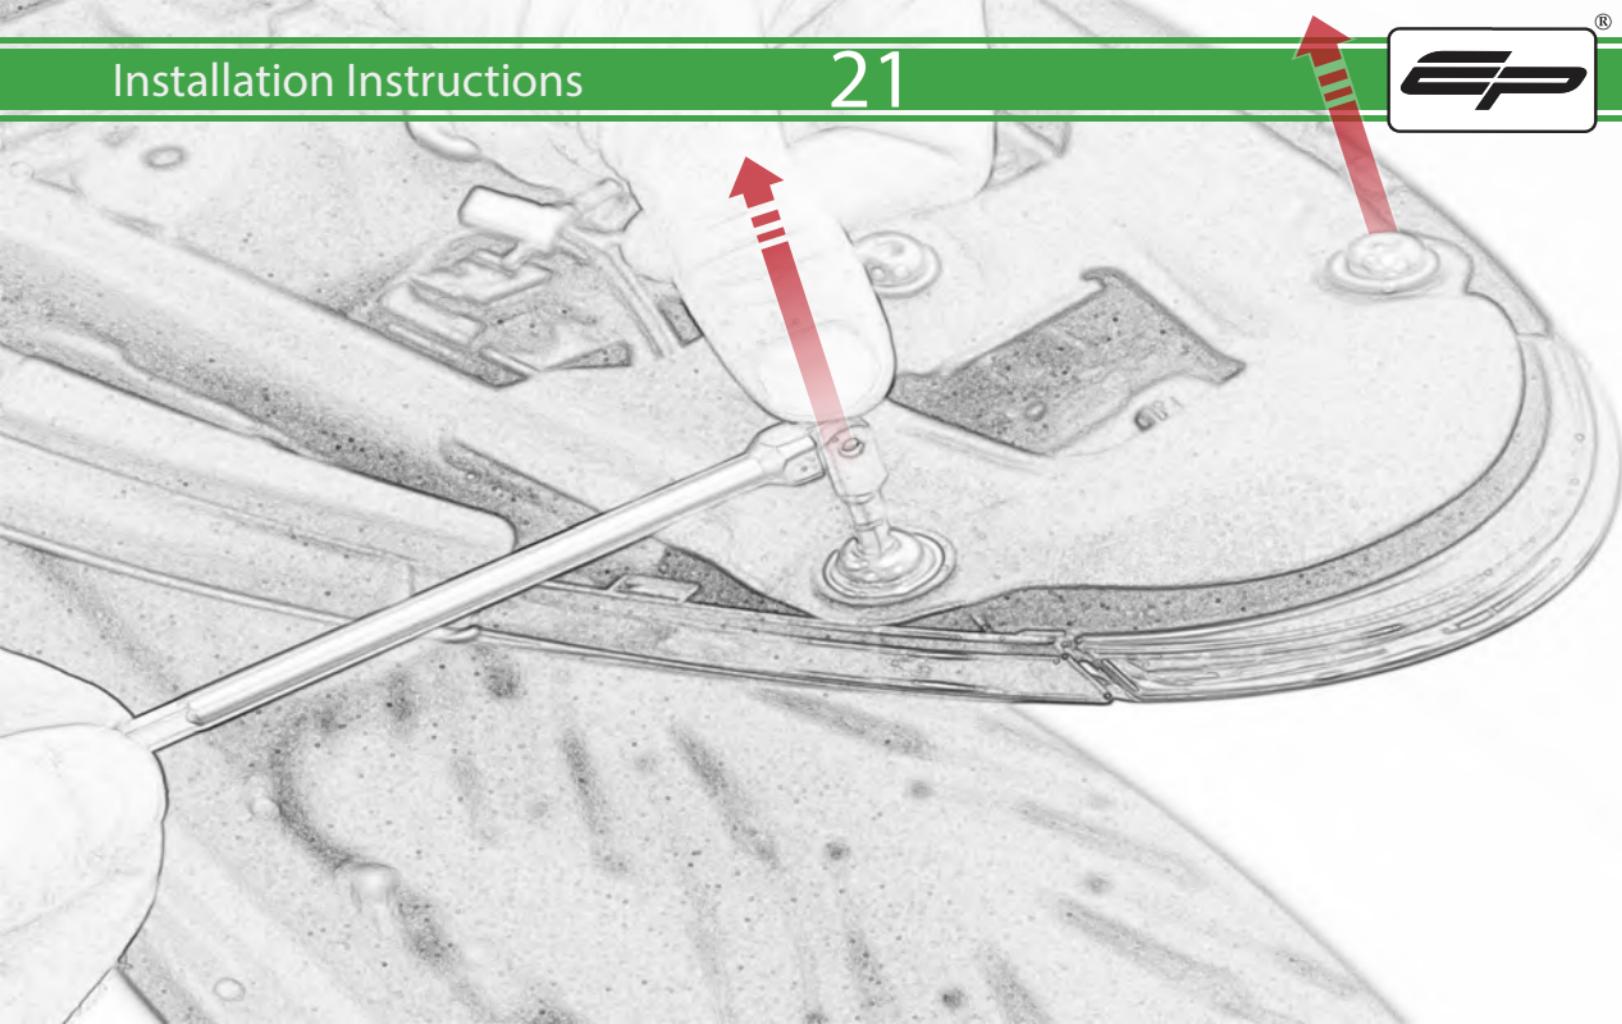


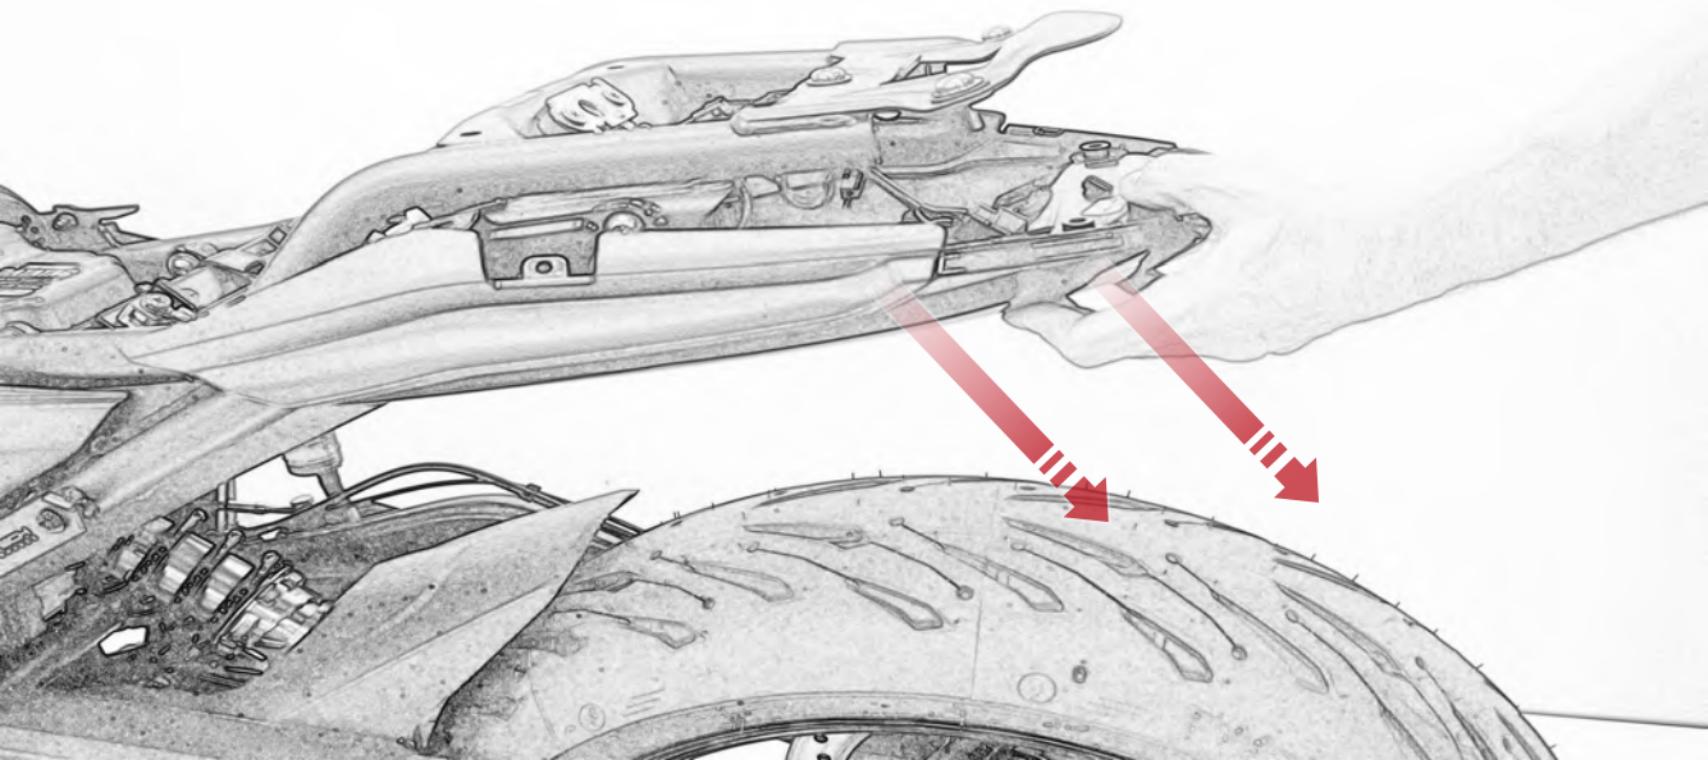


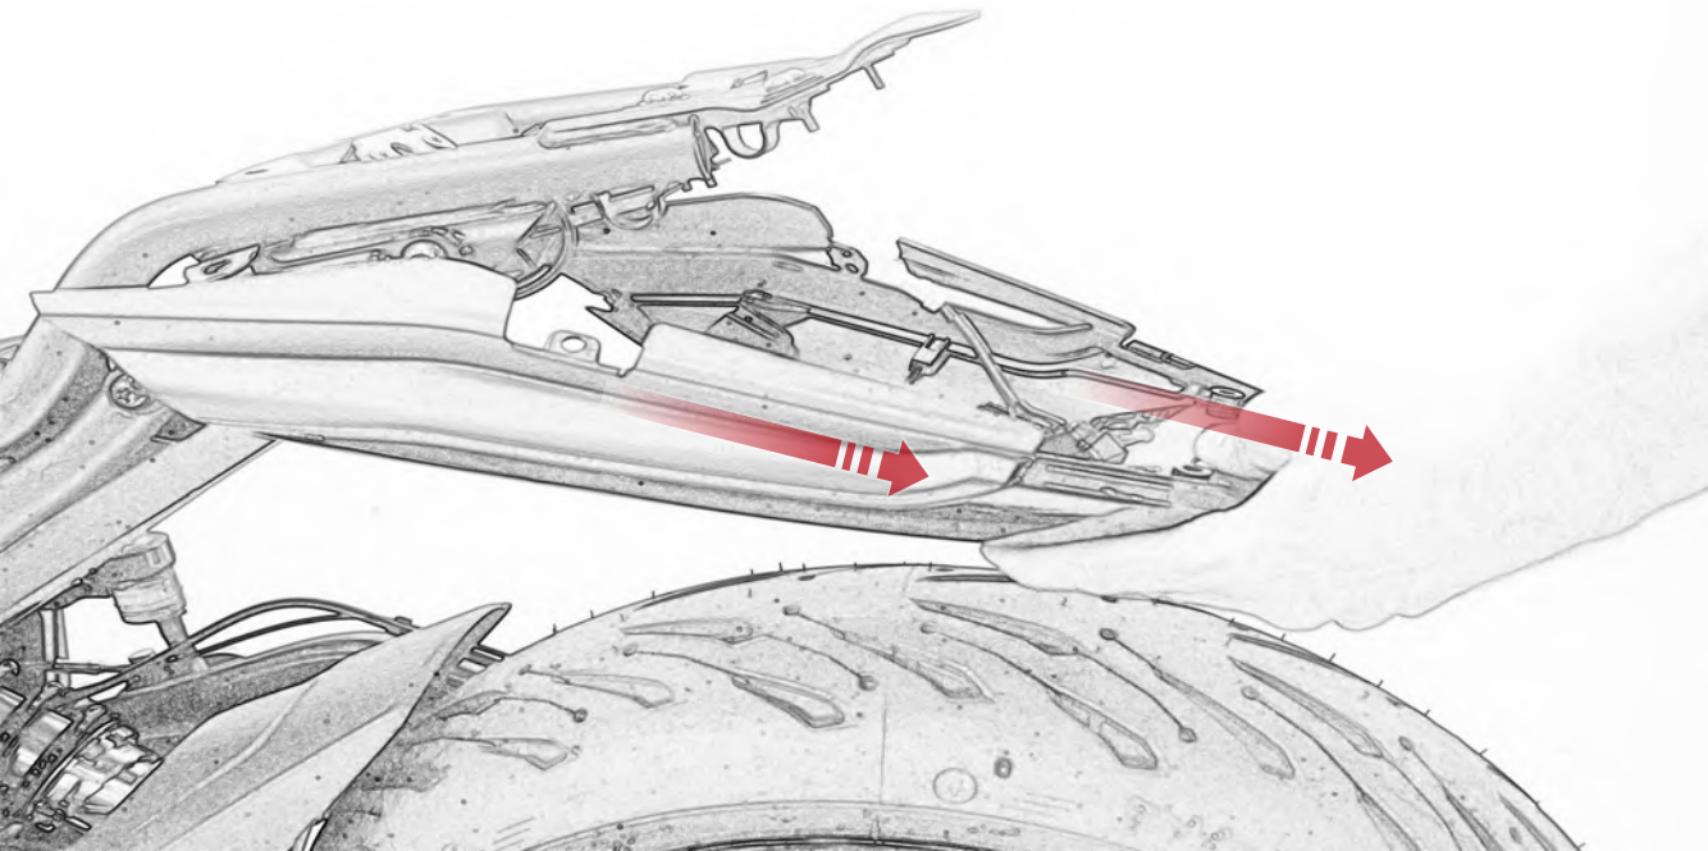





Release
Tab

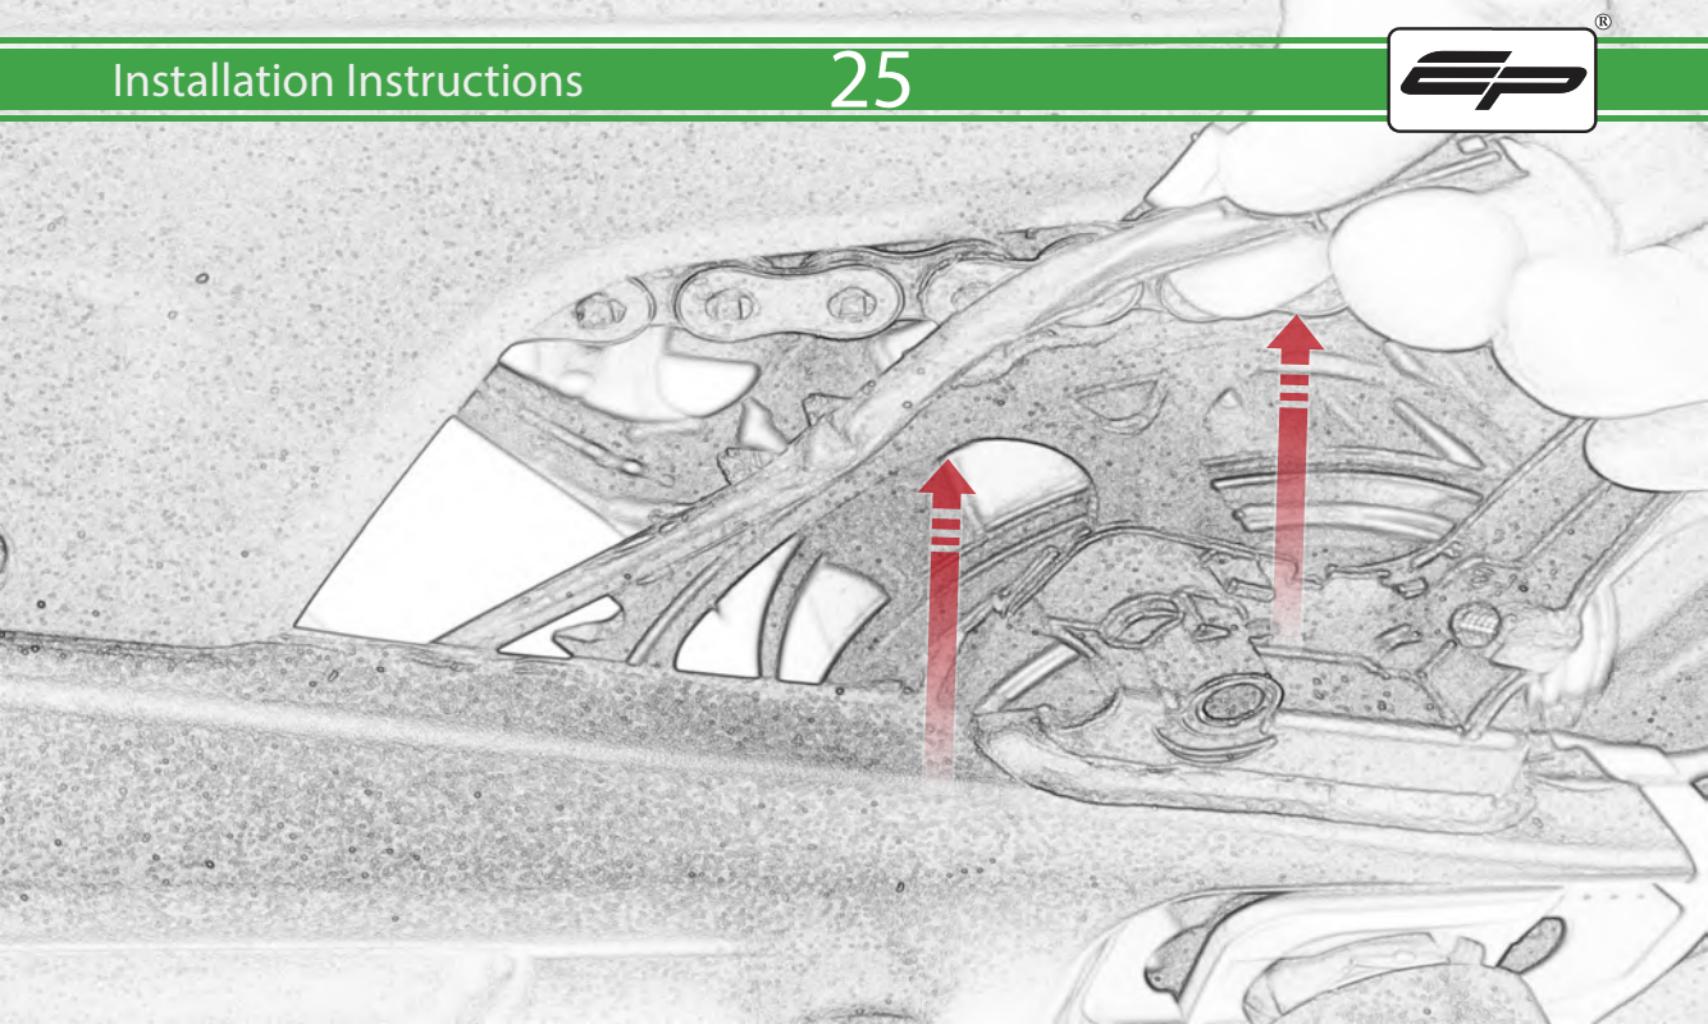


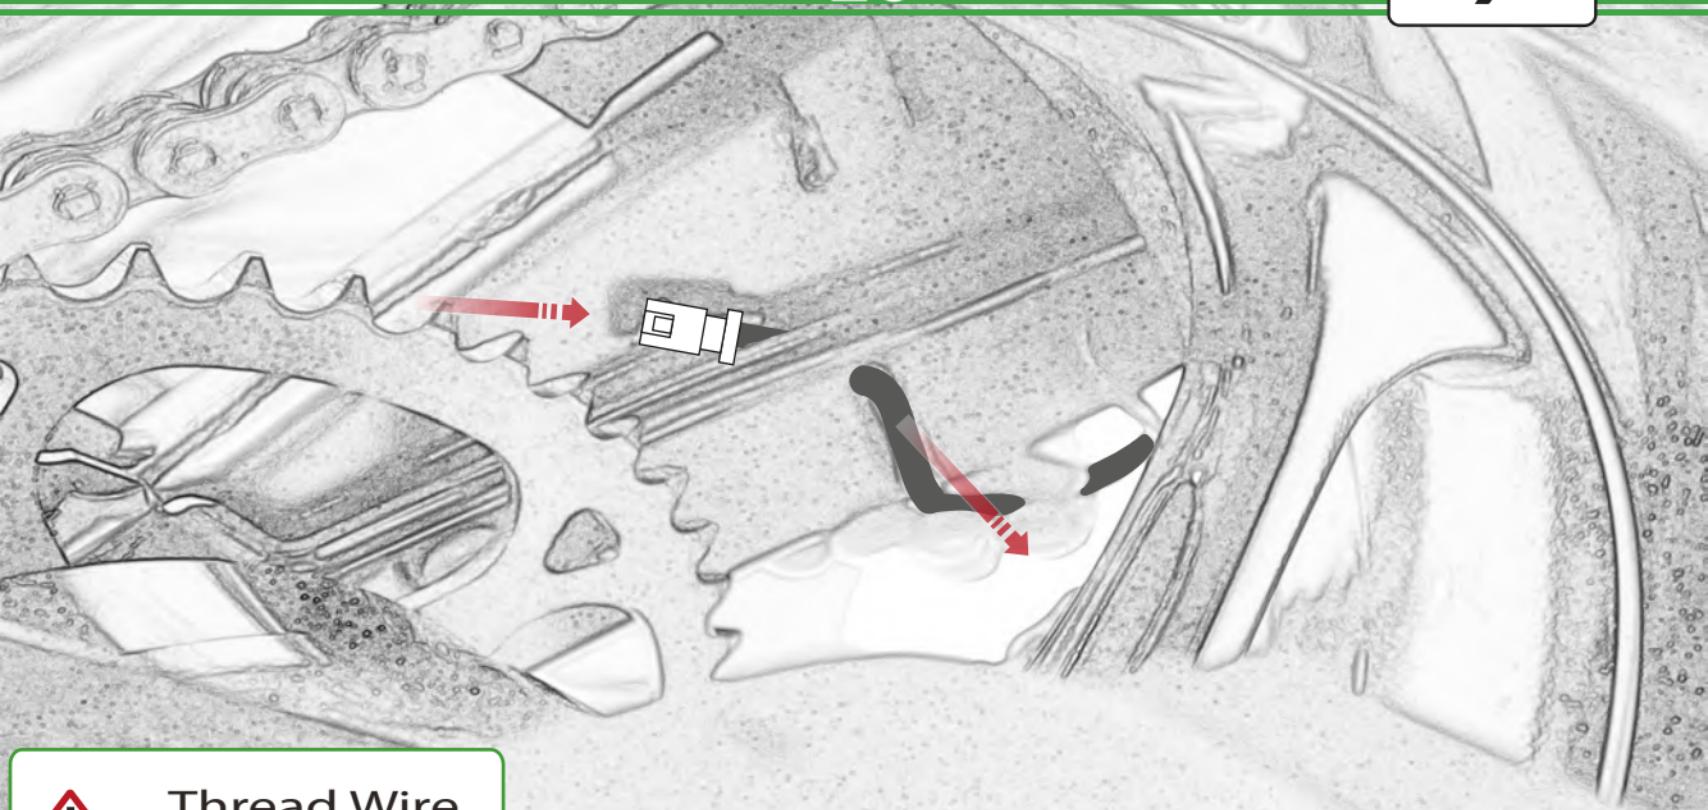

Caution
Thread Wire
Behind Cover

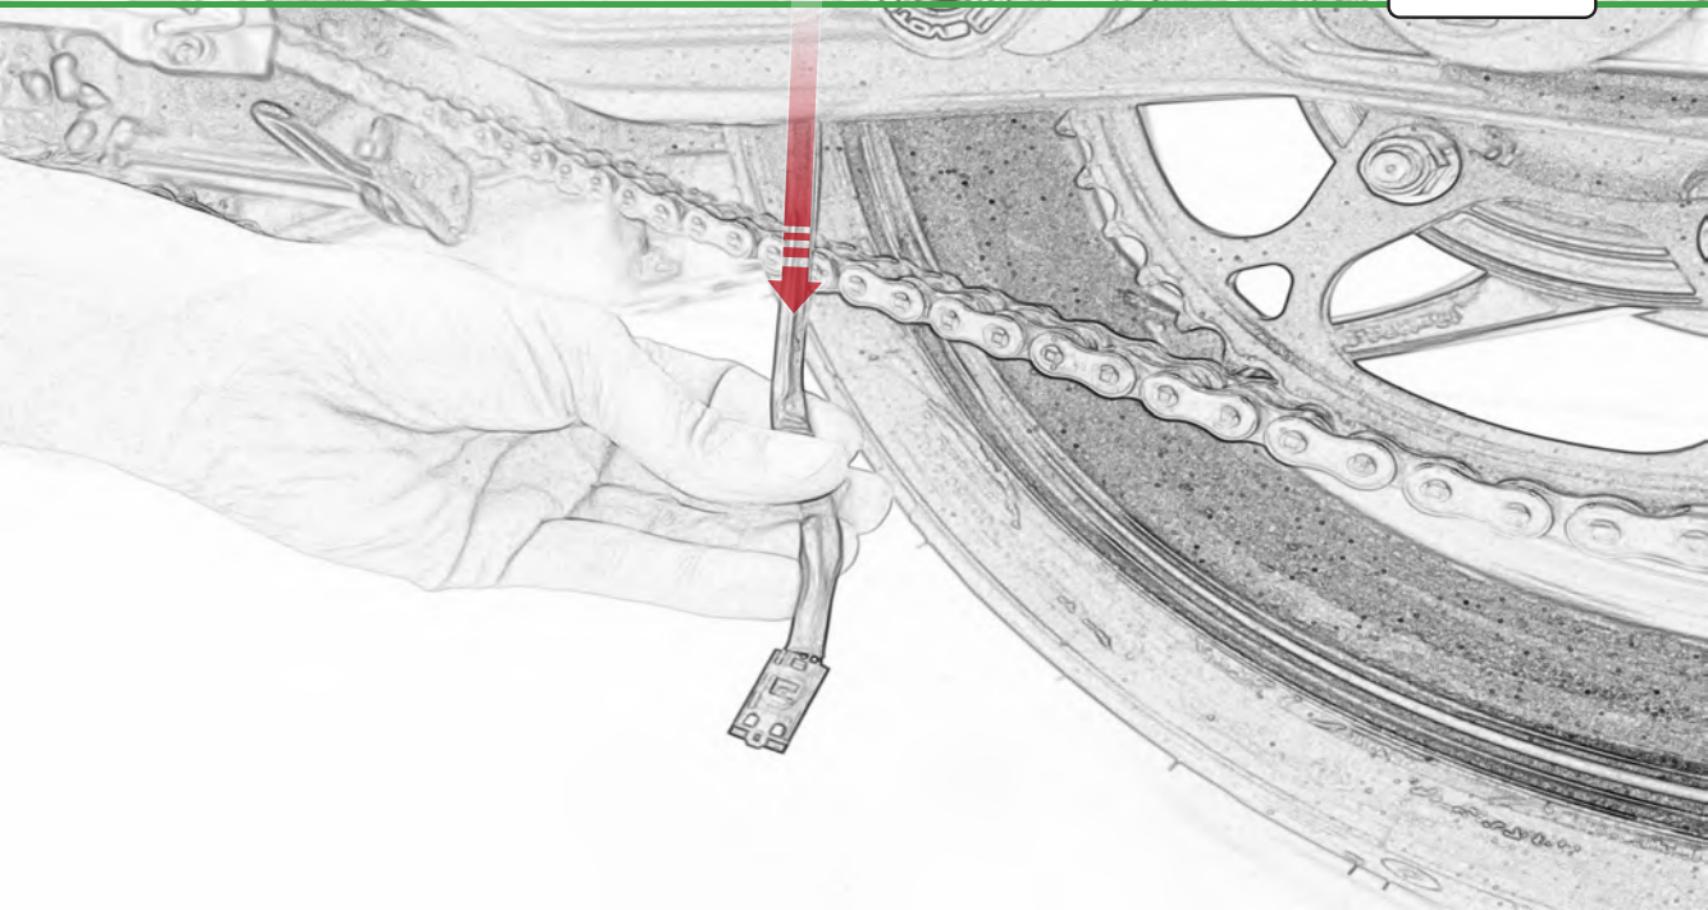


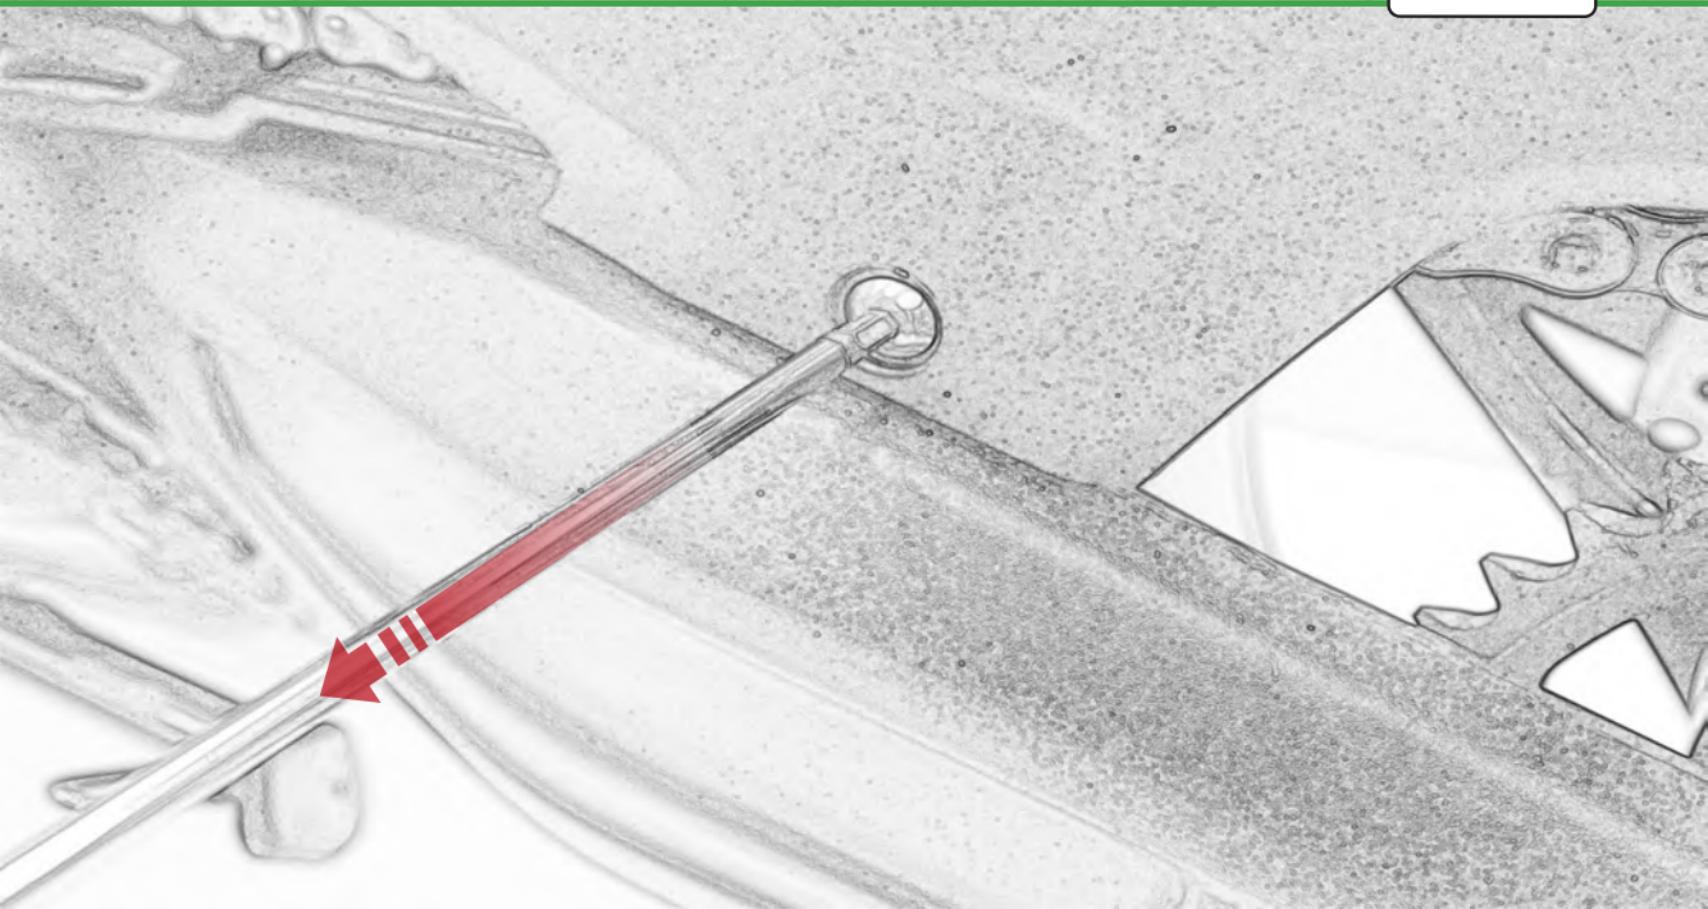


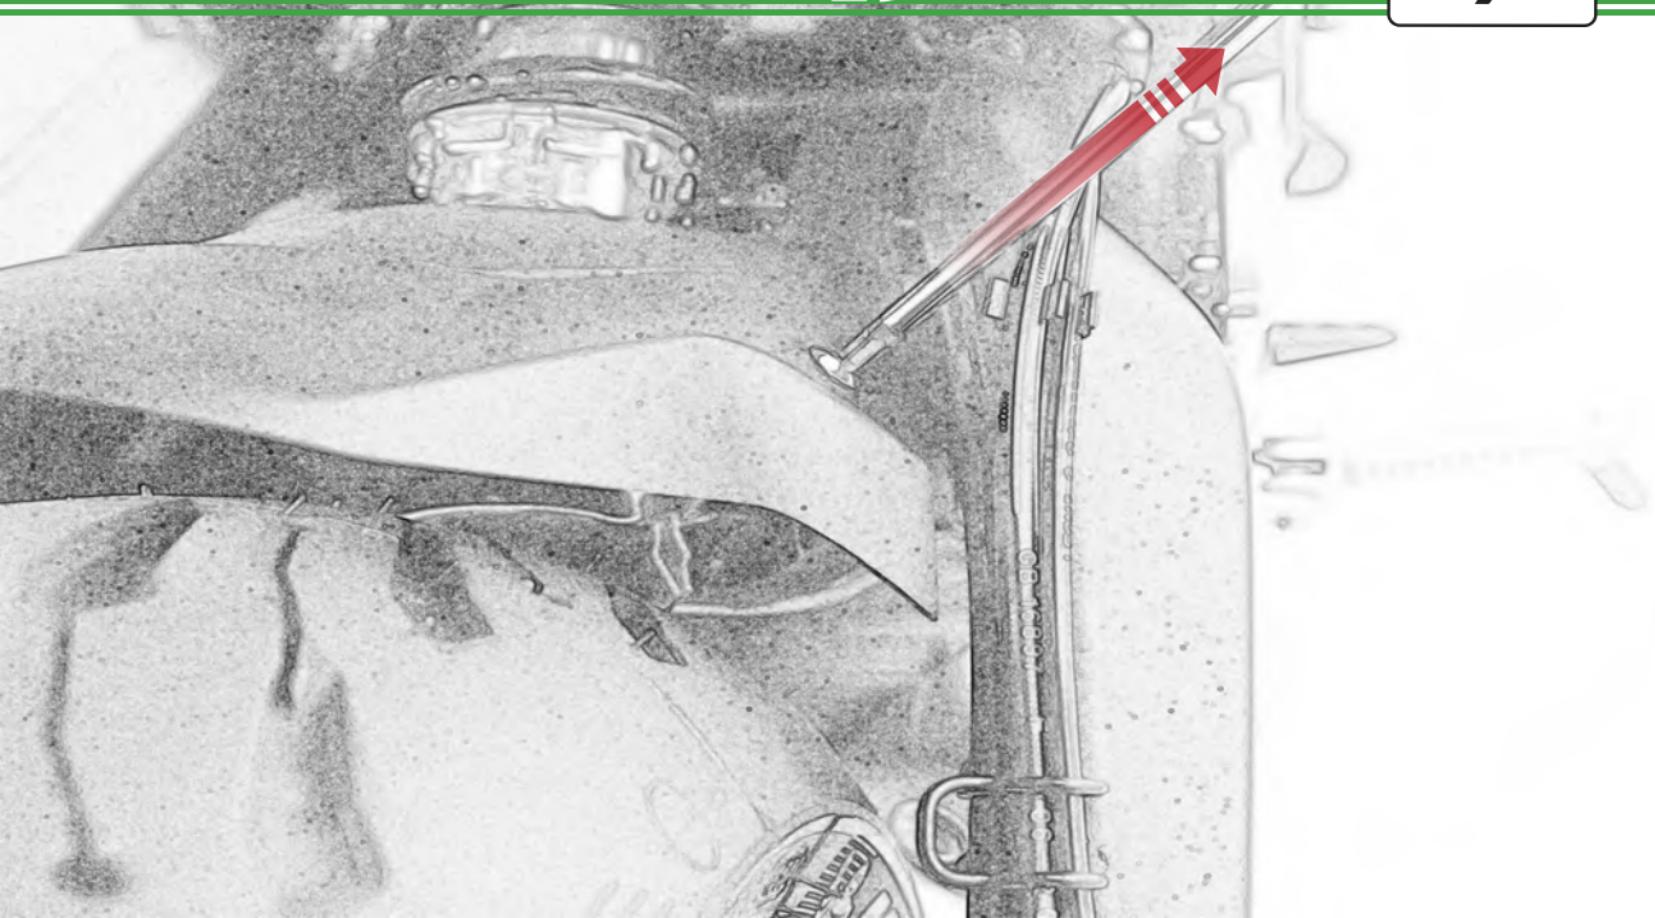



Installation Instructions



30

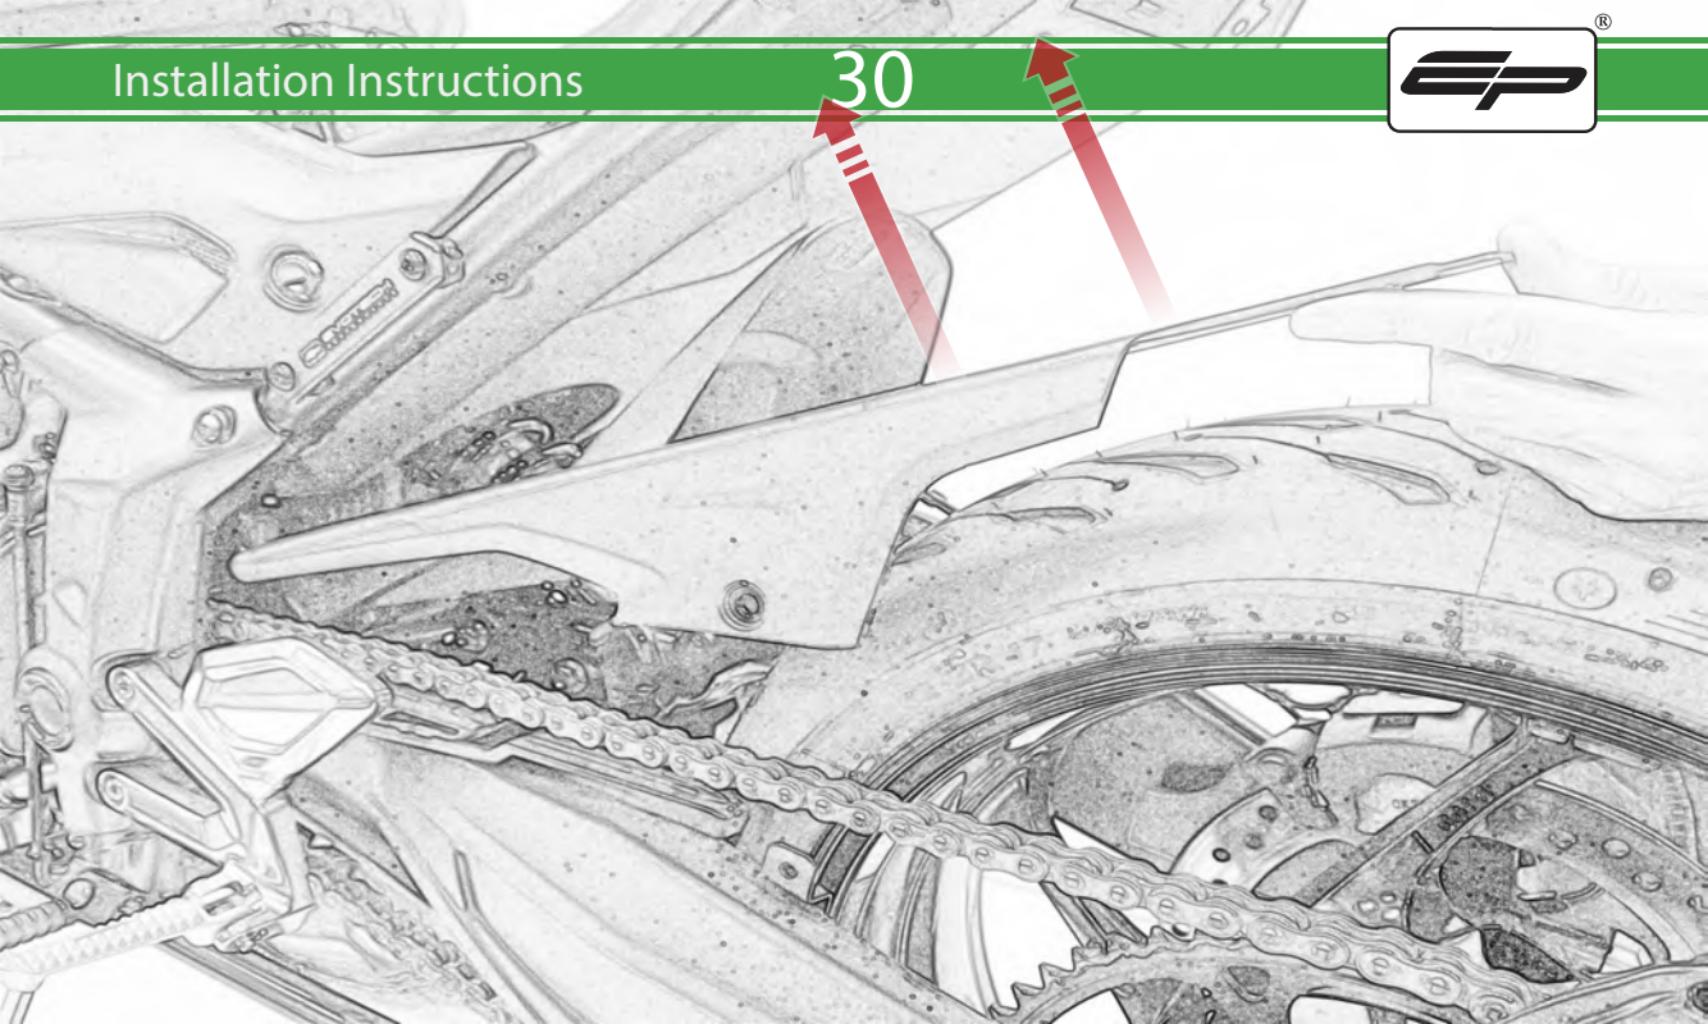


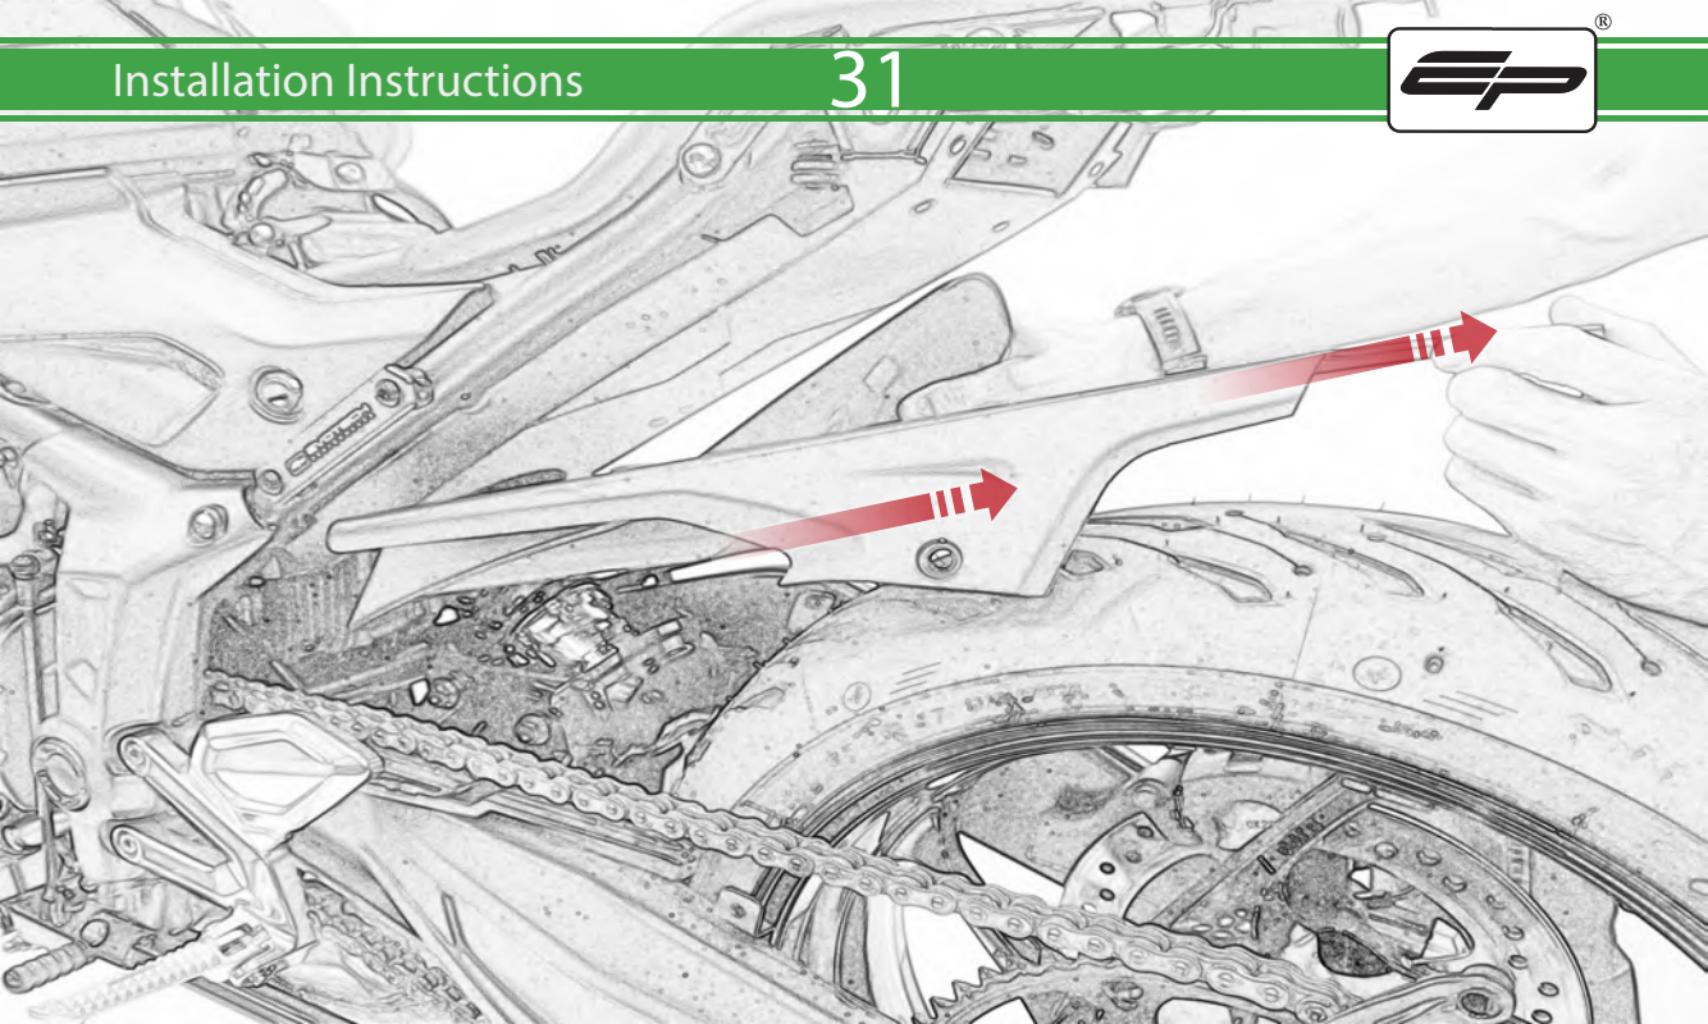

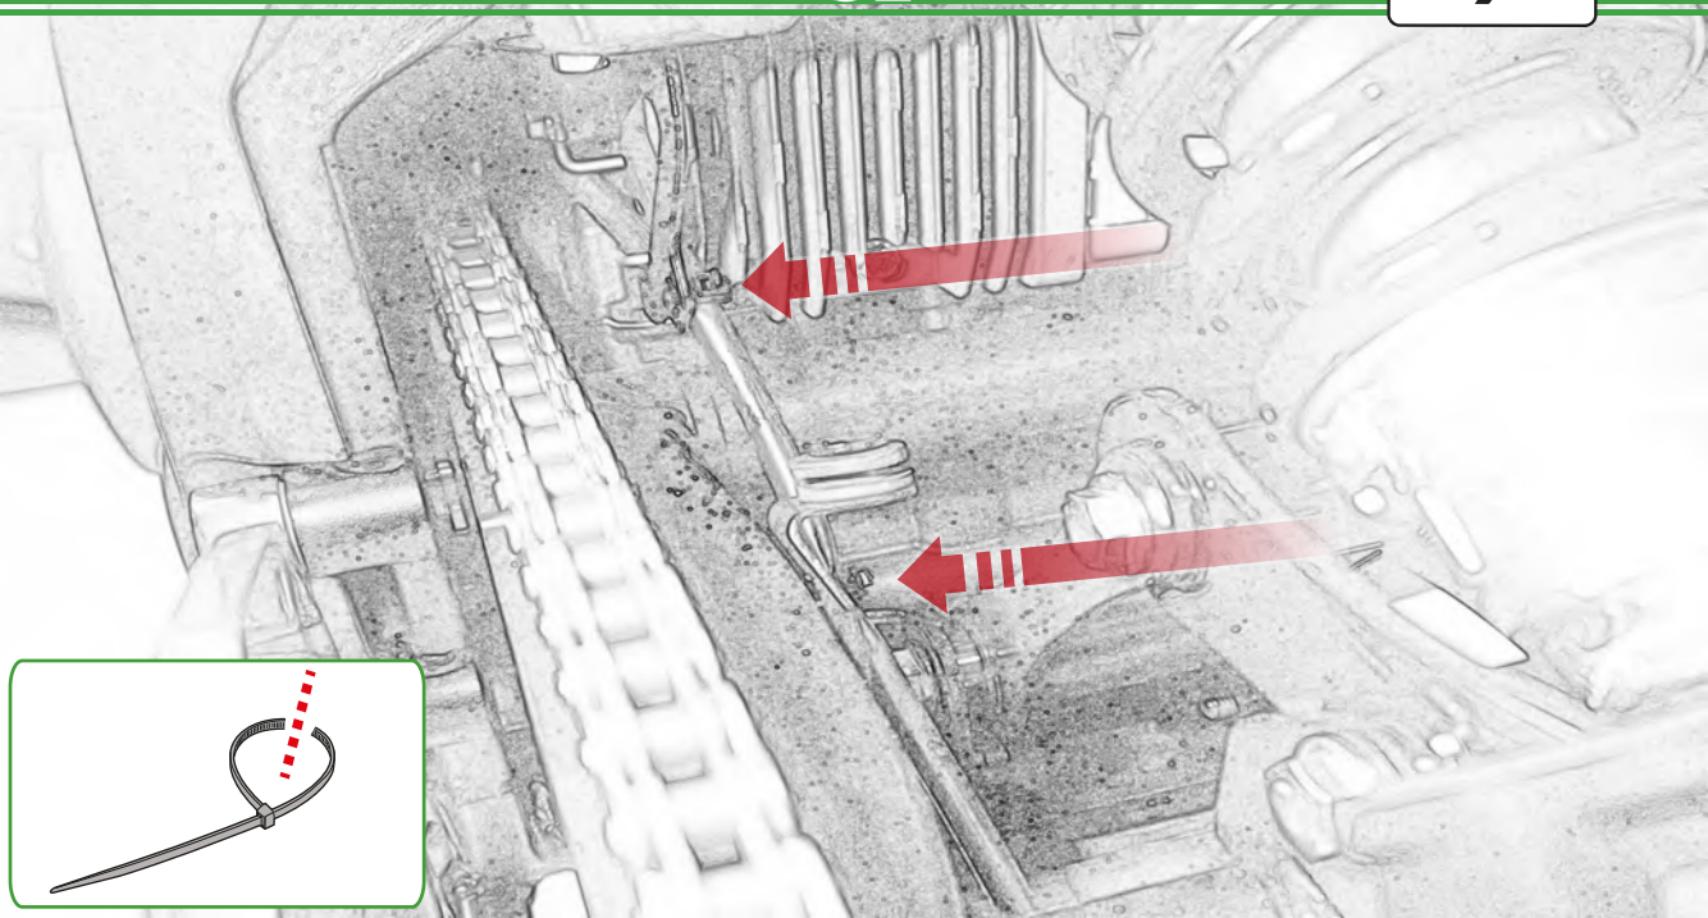


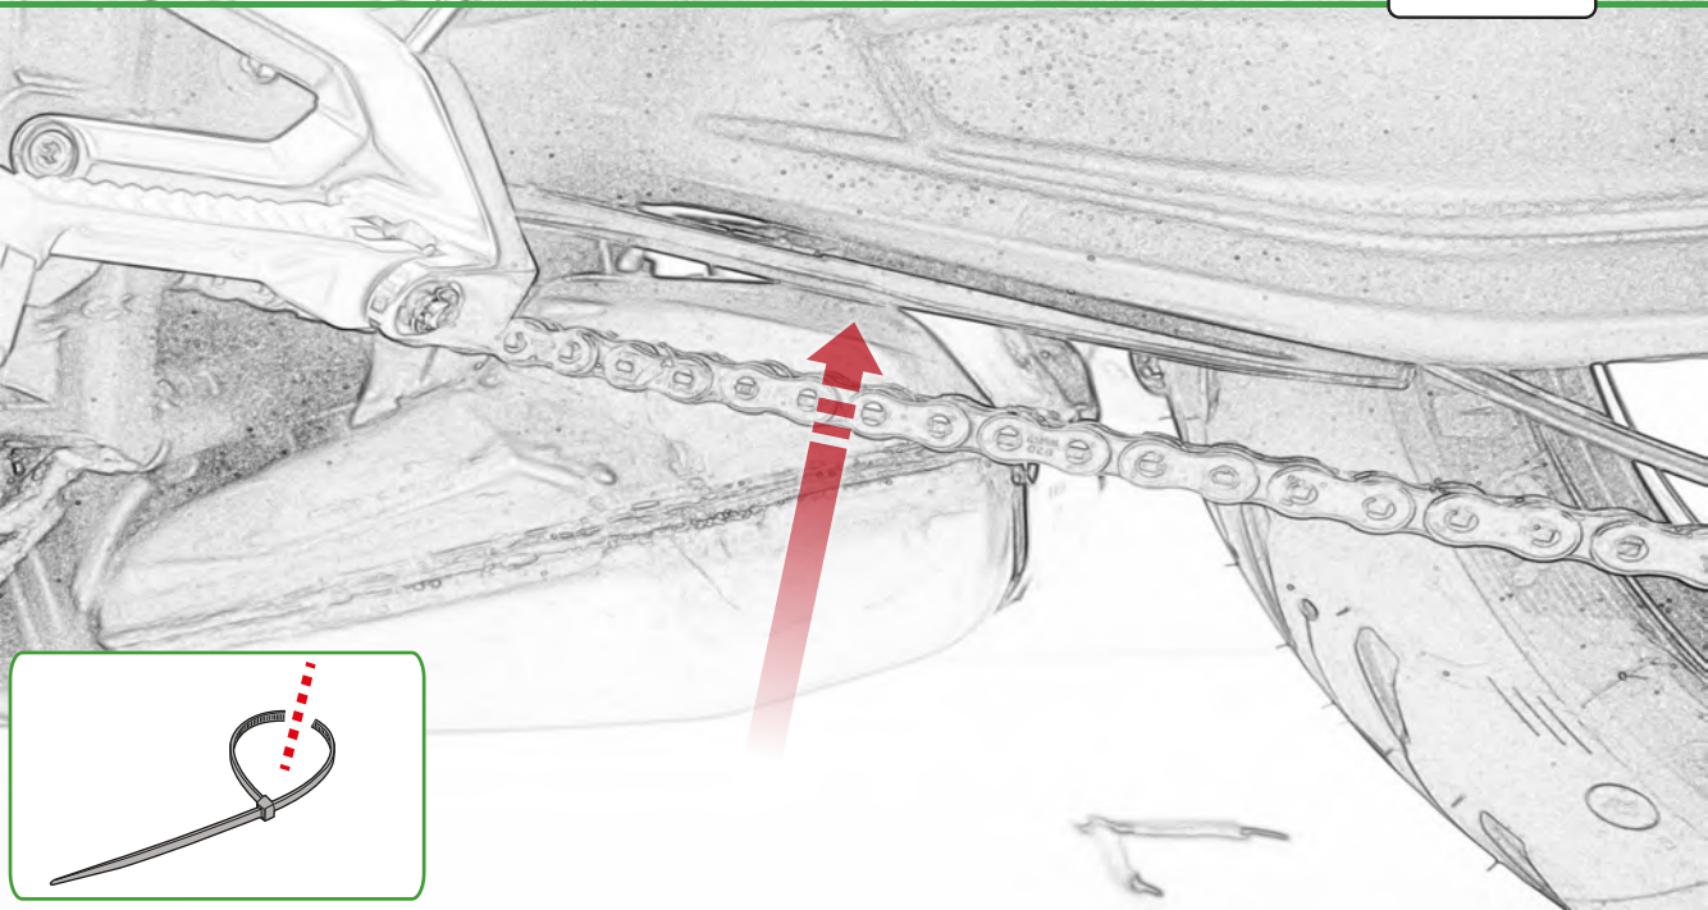


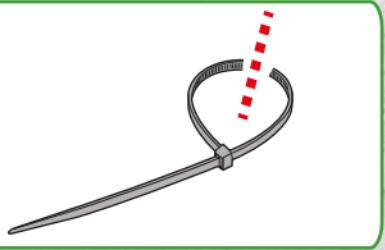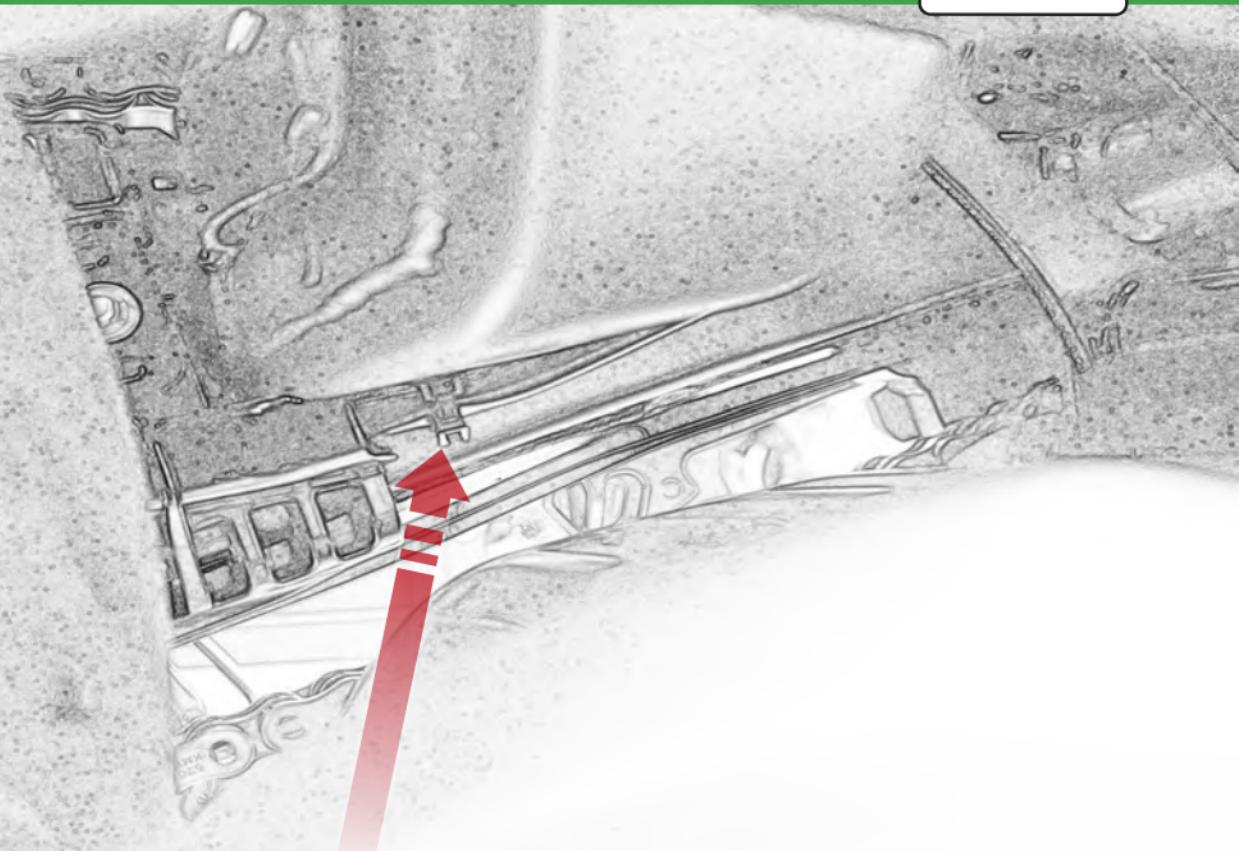


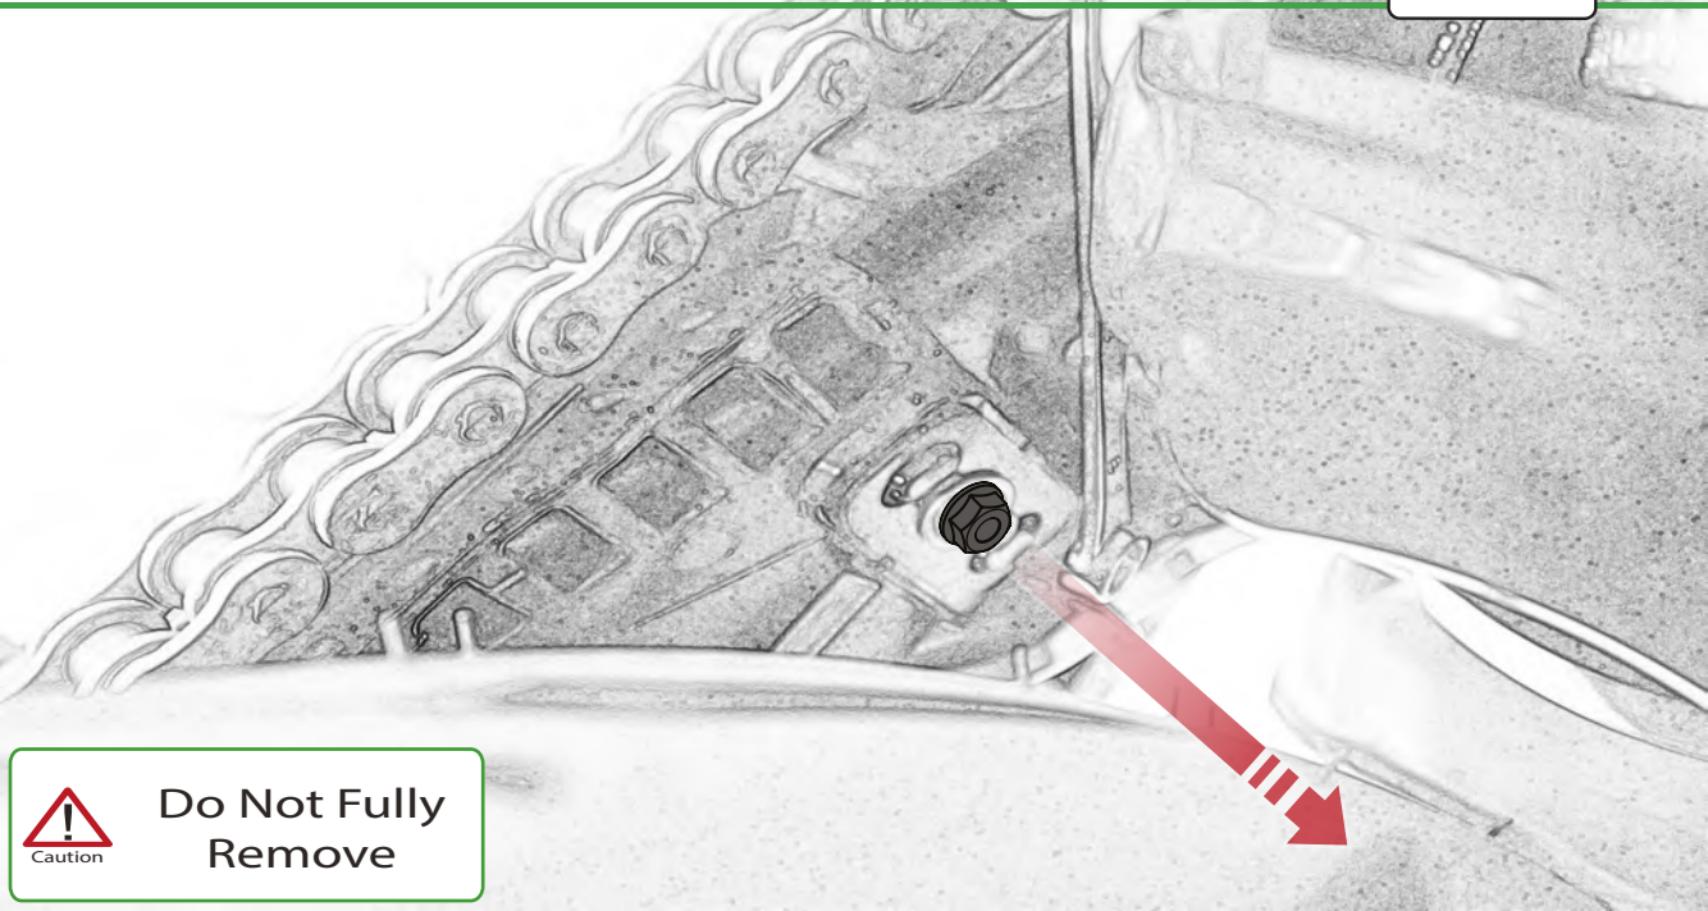

Caution
Do Not Fully Remove

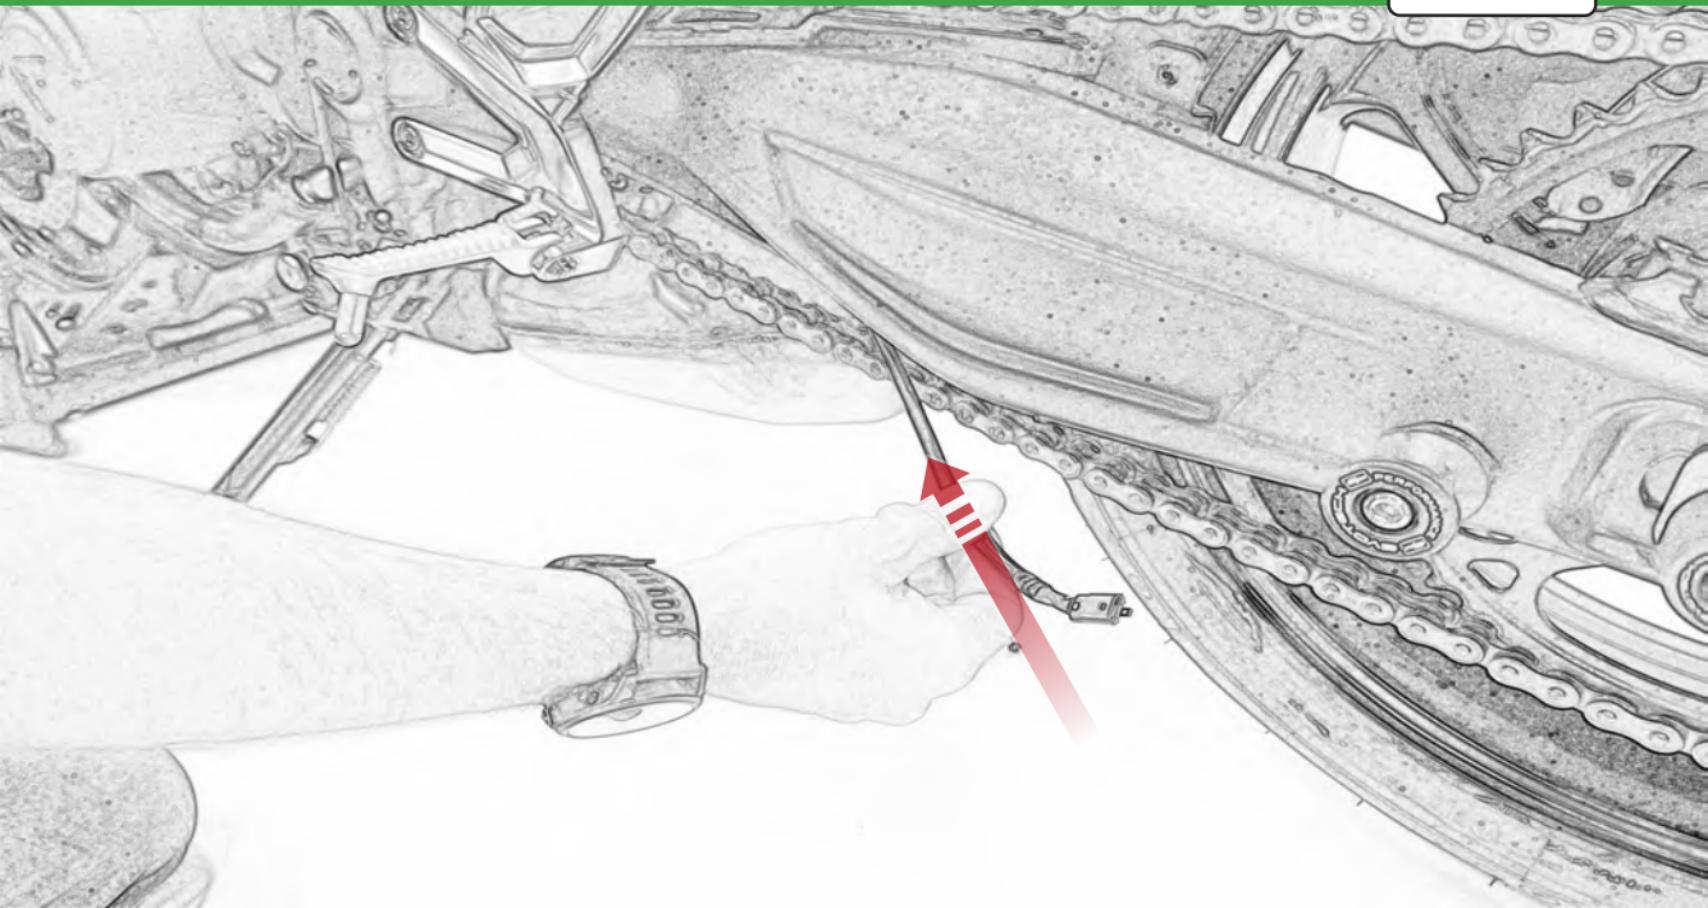

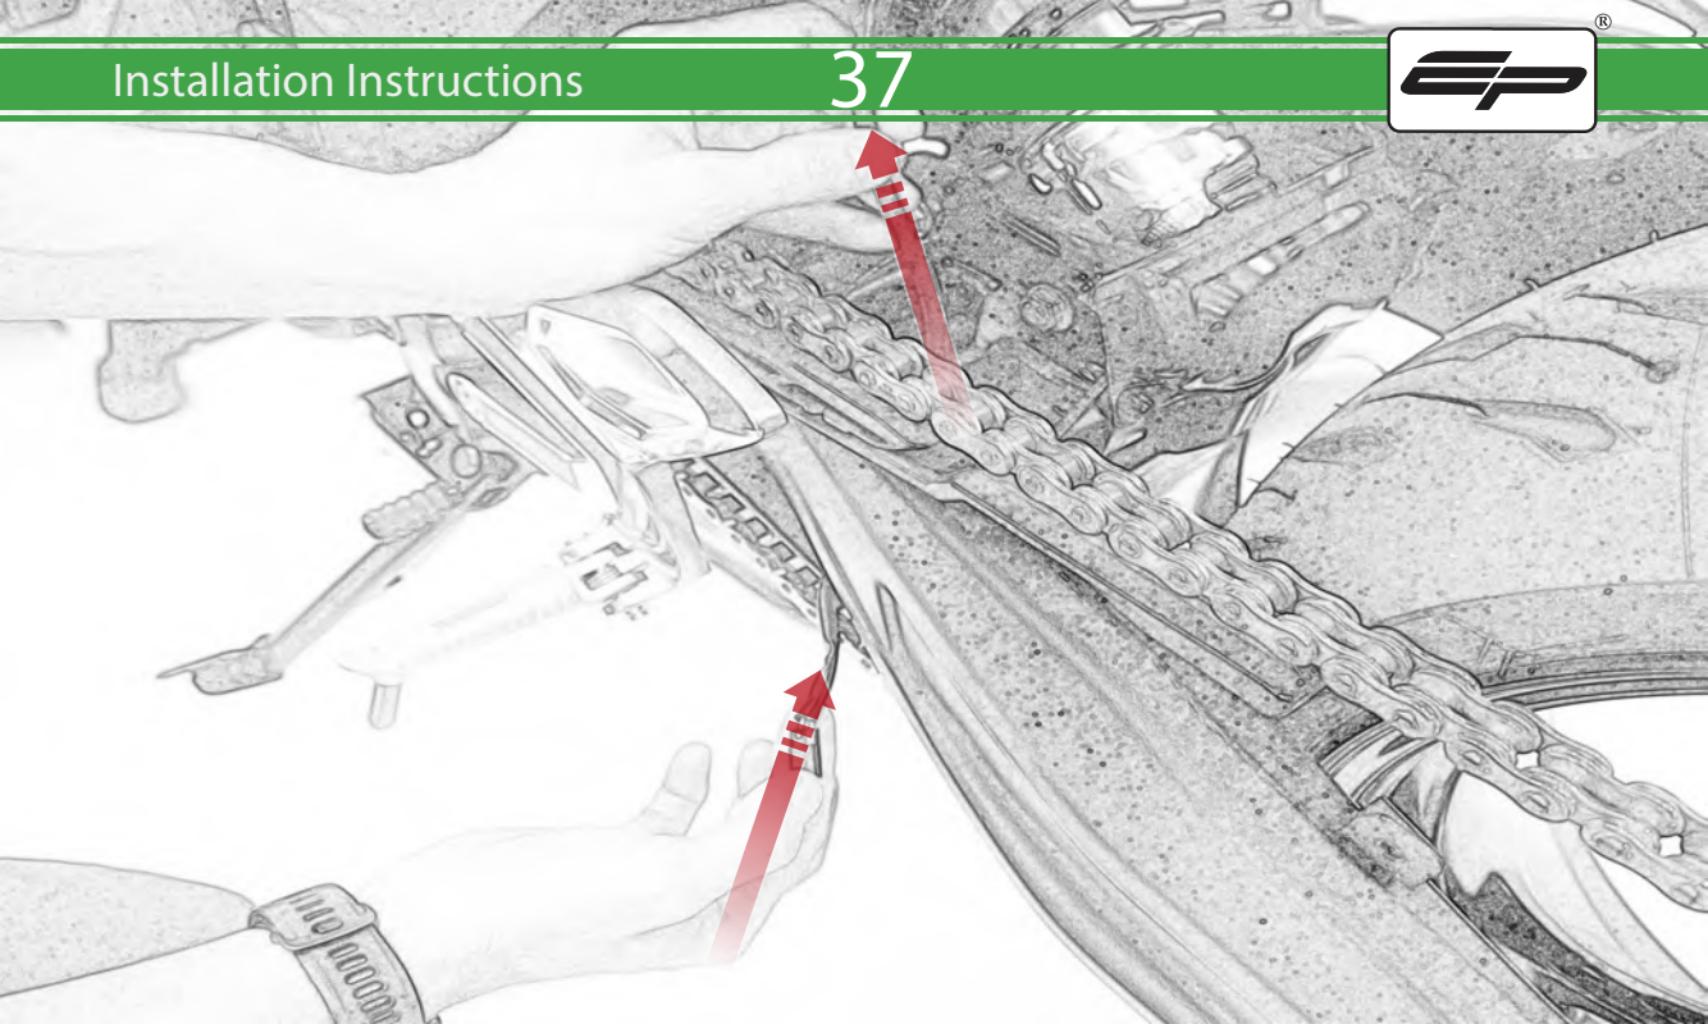

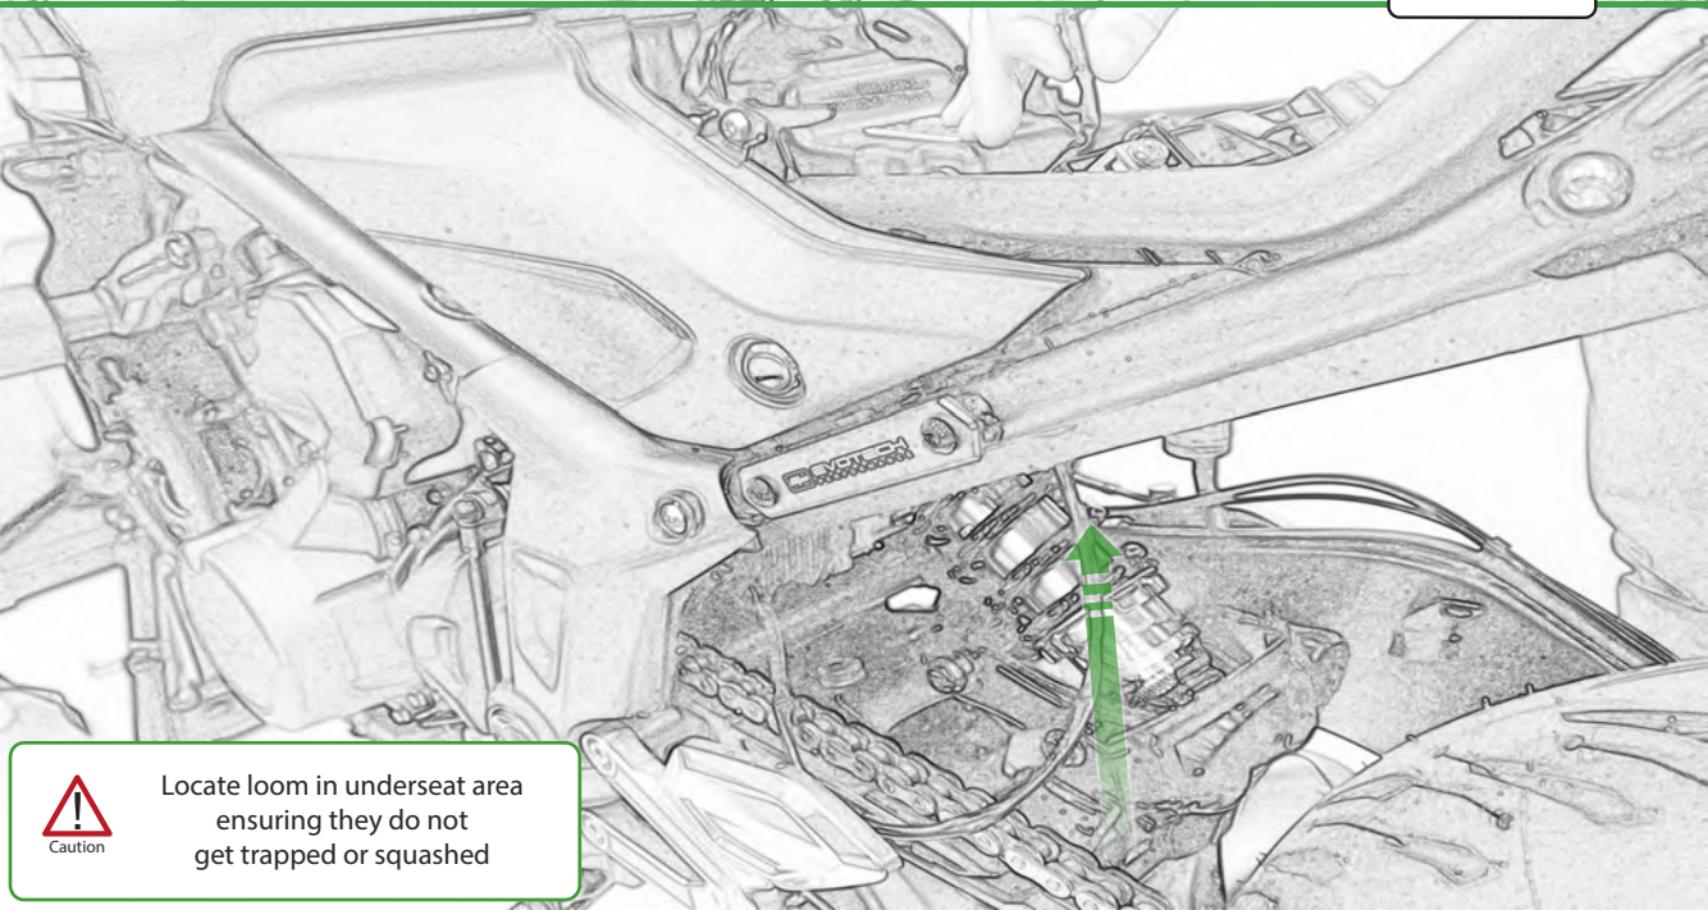

Caution
Locate loom in underseat area
ensuring they do not
get trapped or squashed





**Locate Wire
Behind Tab**









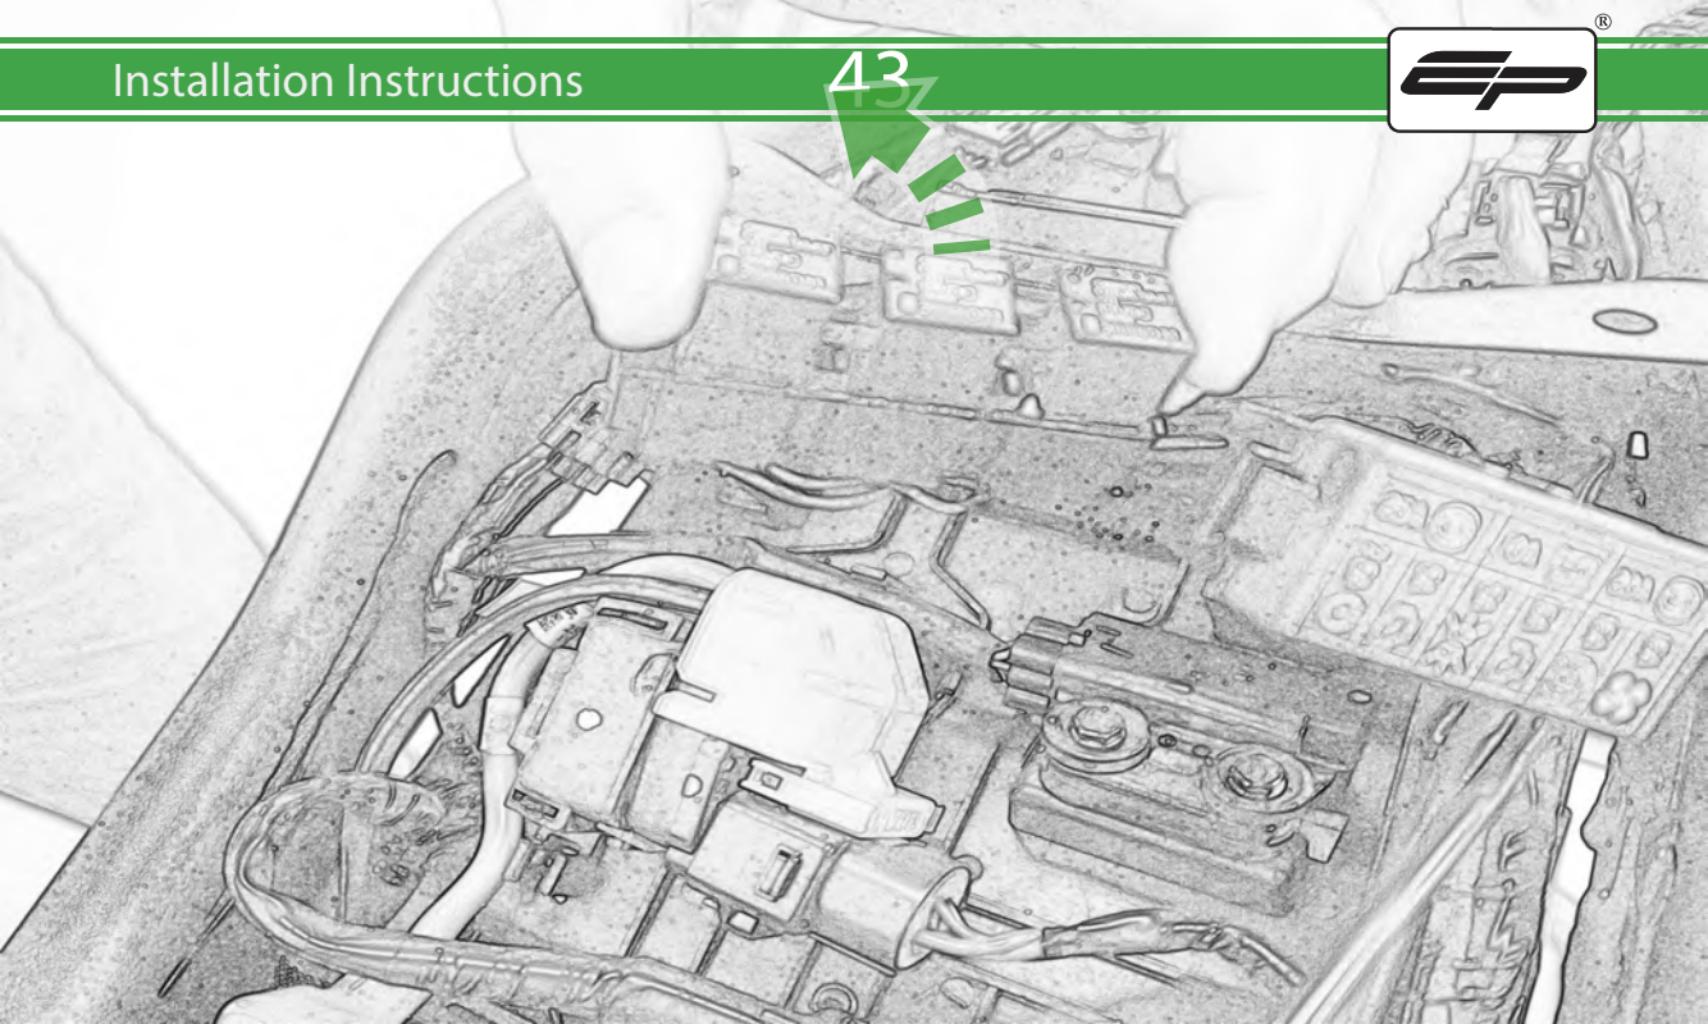


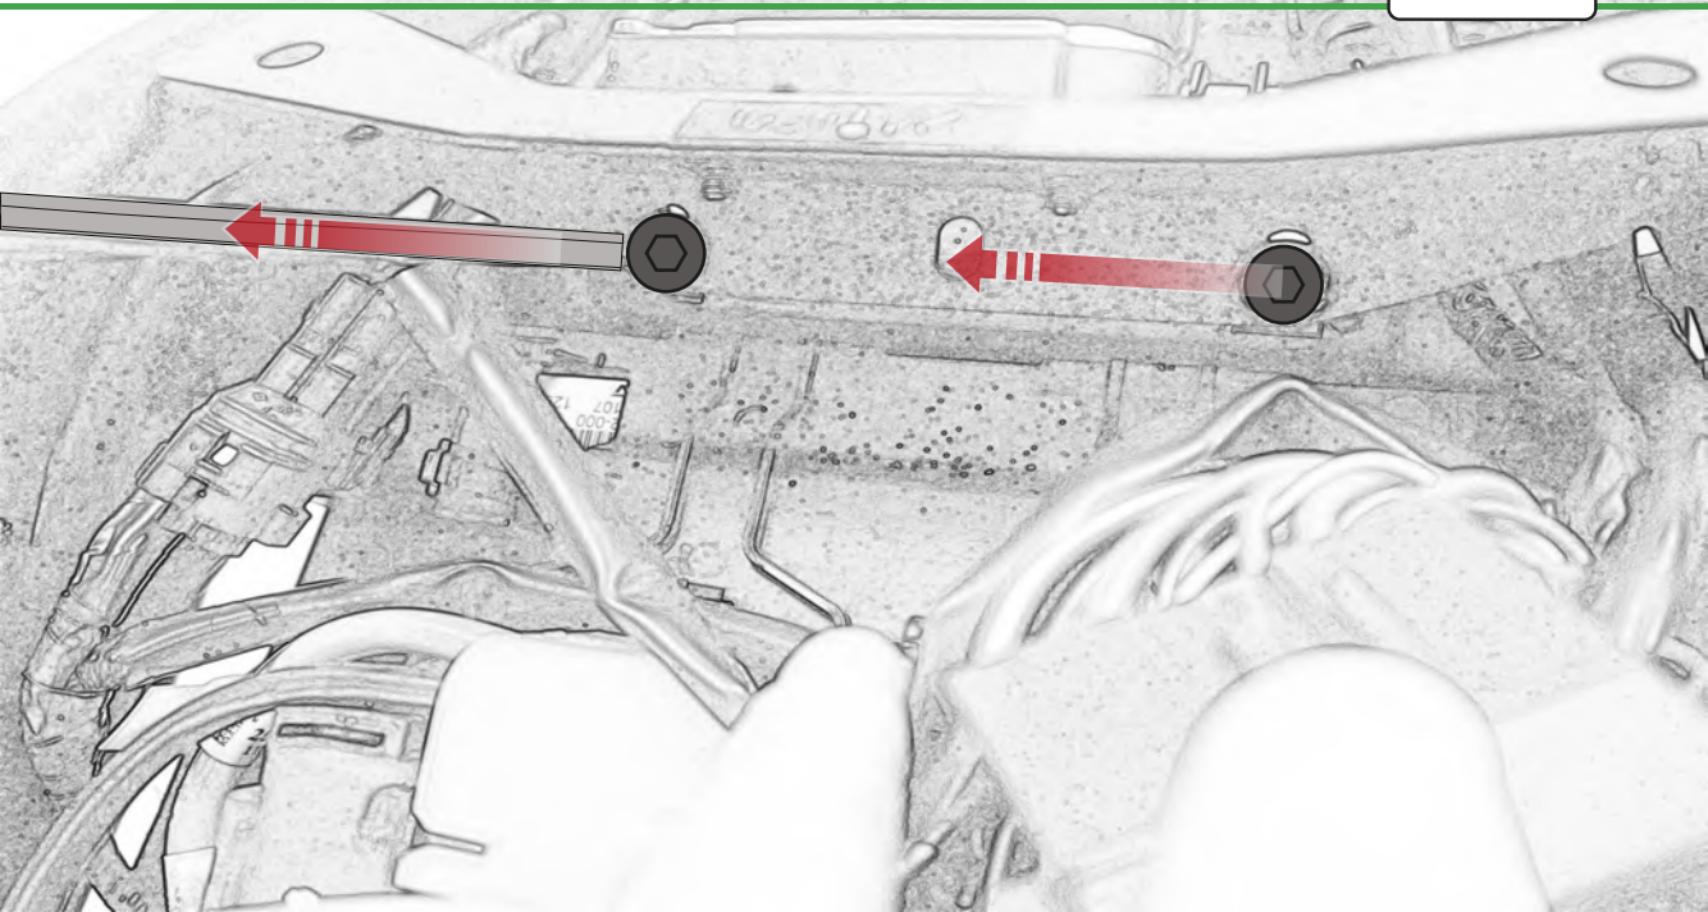

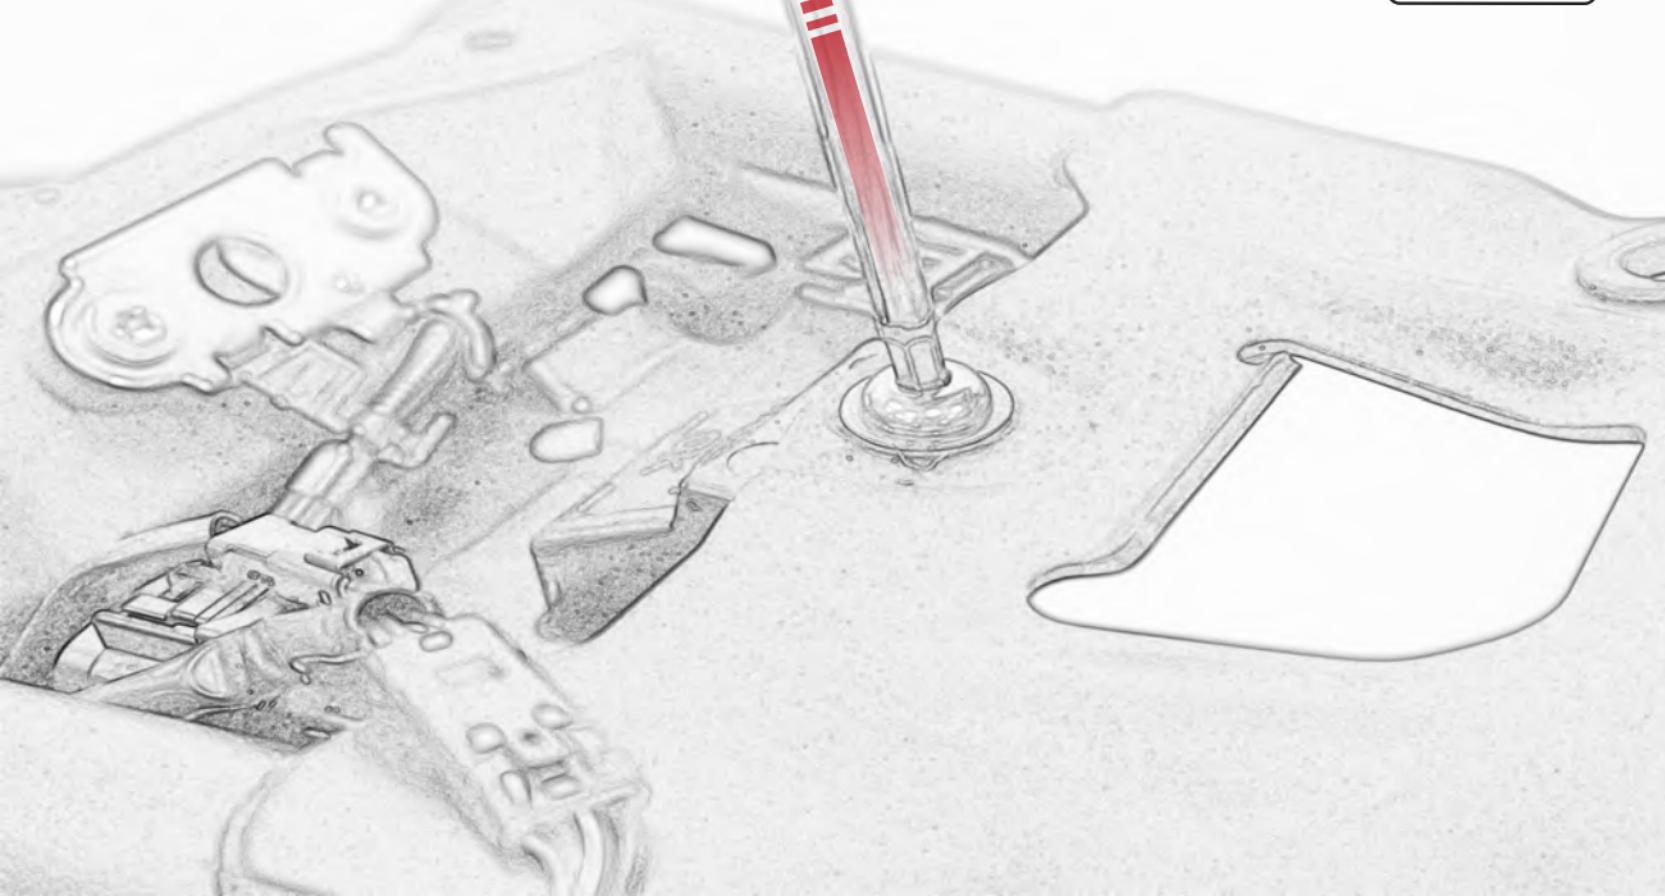


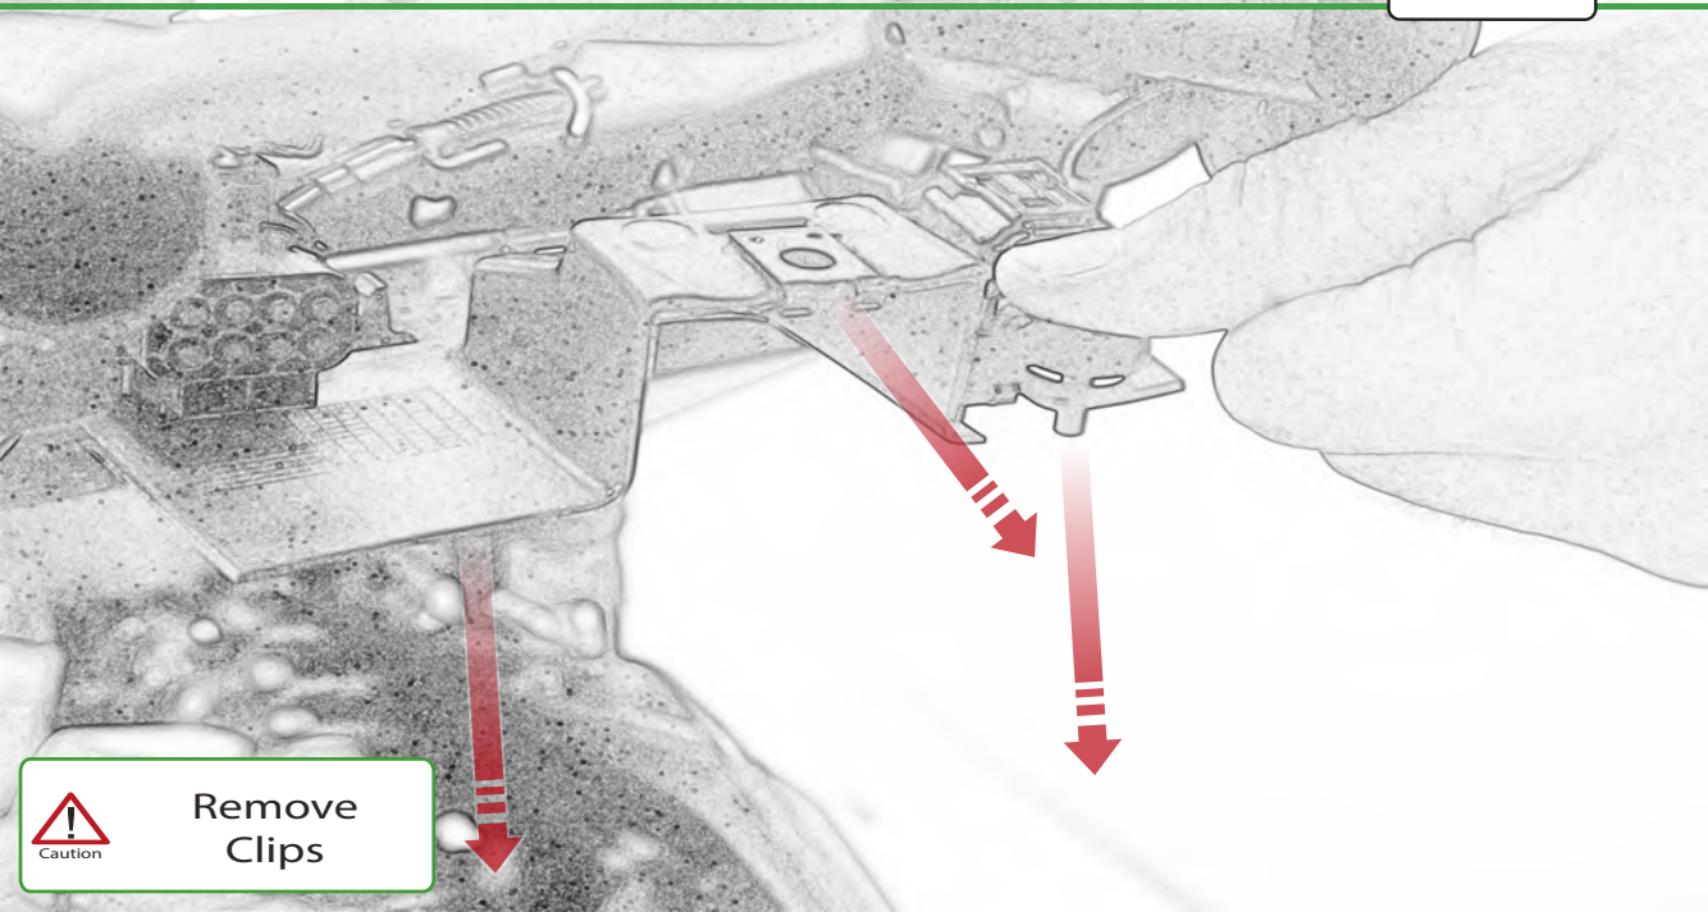



Caution
Remove
Clips

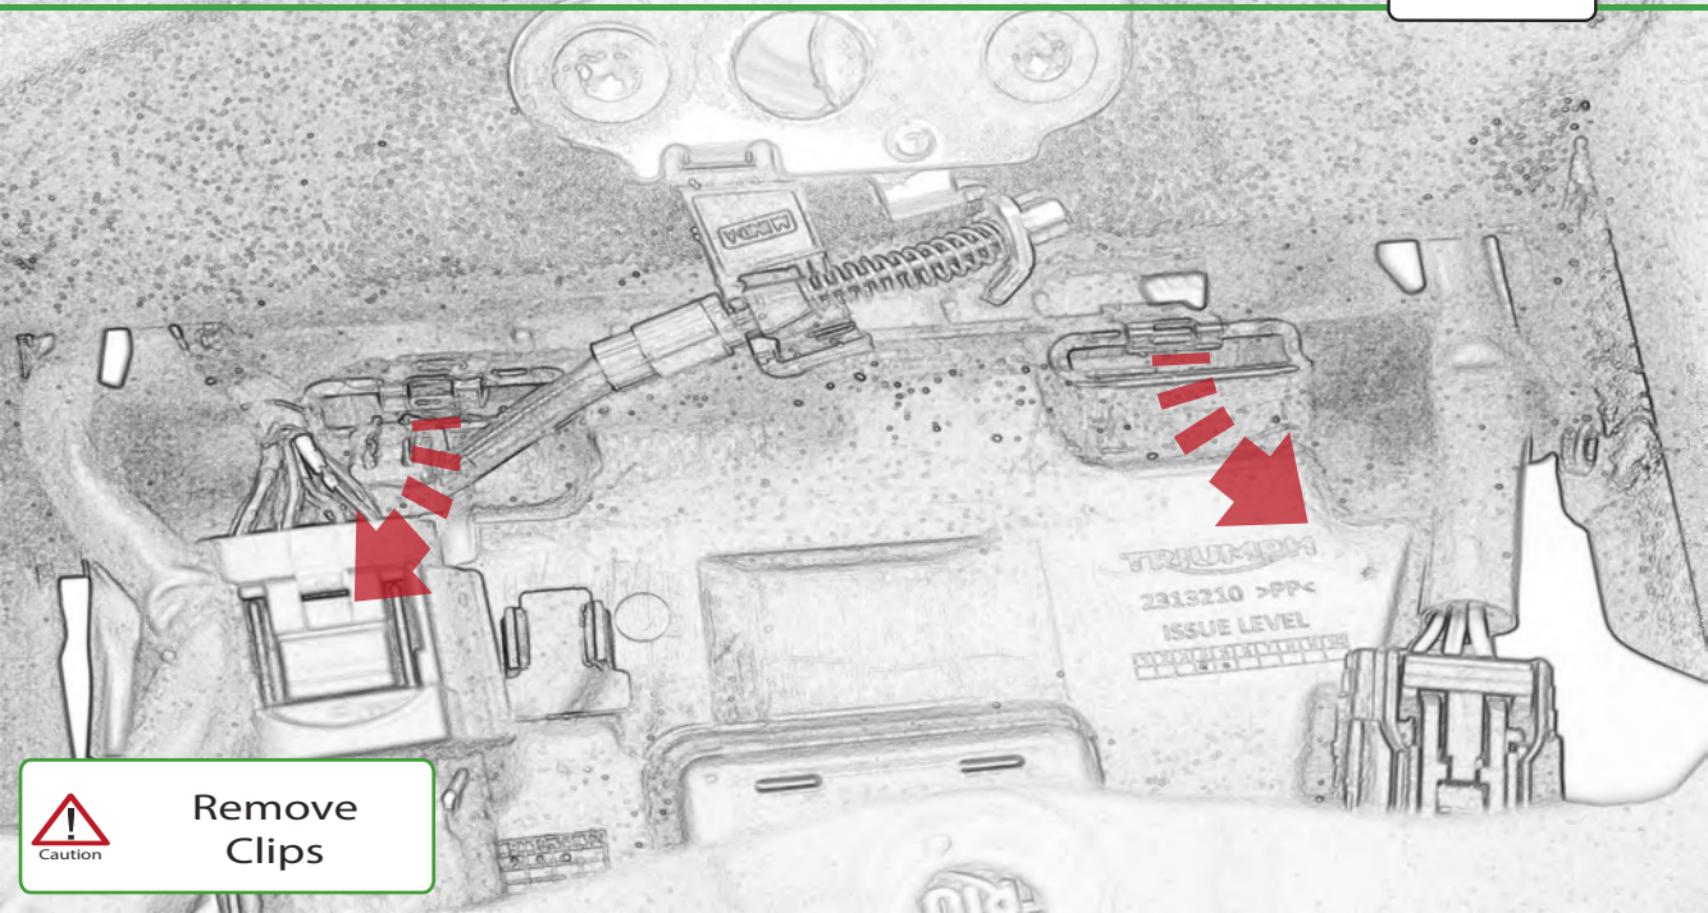



Remove
Clips

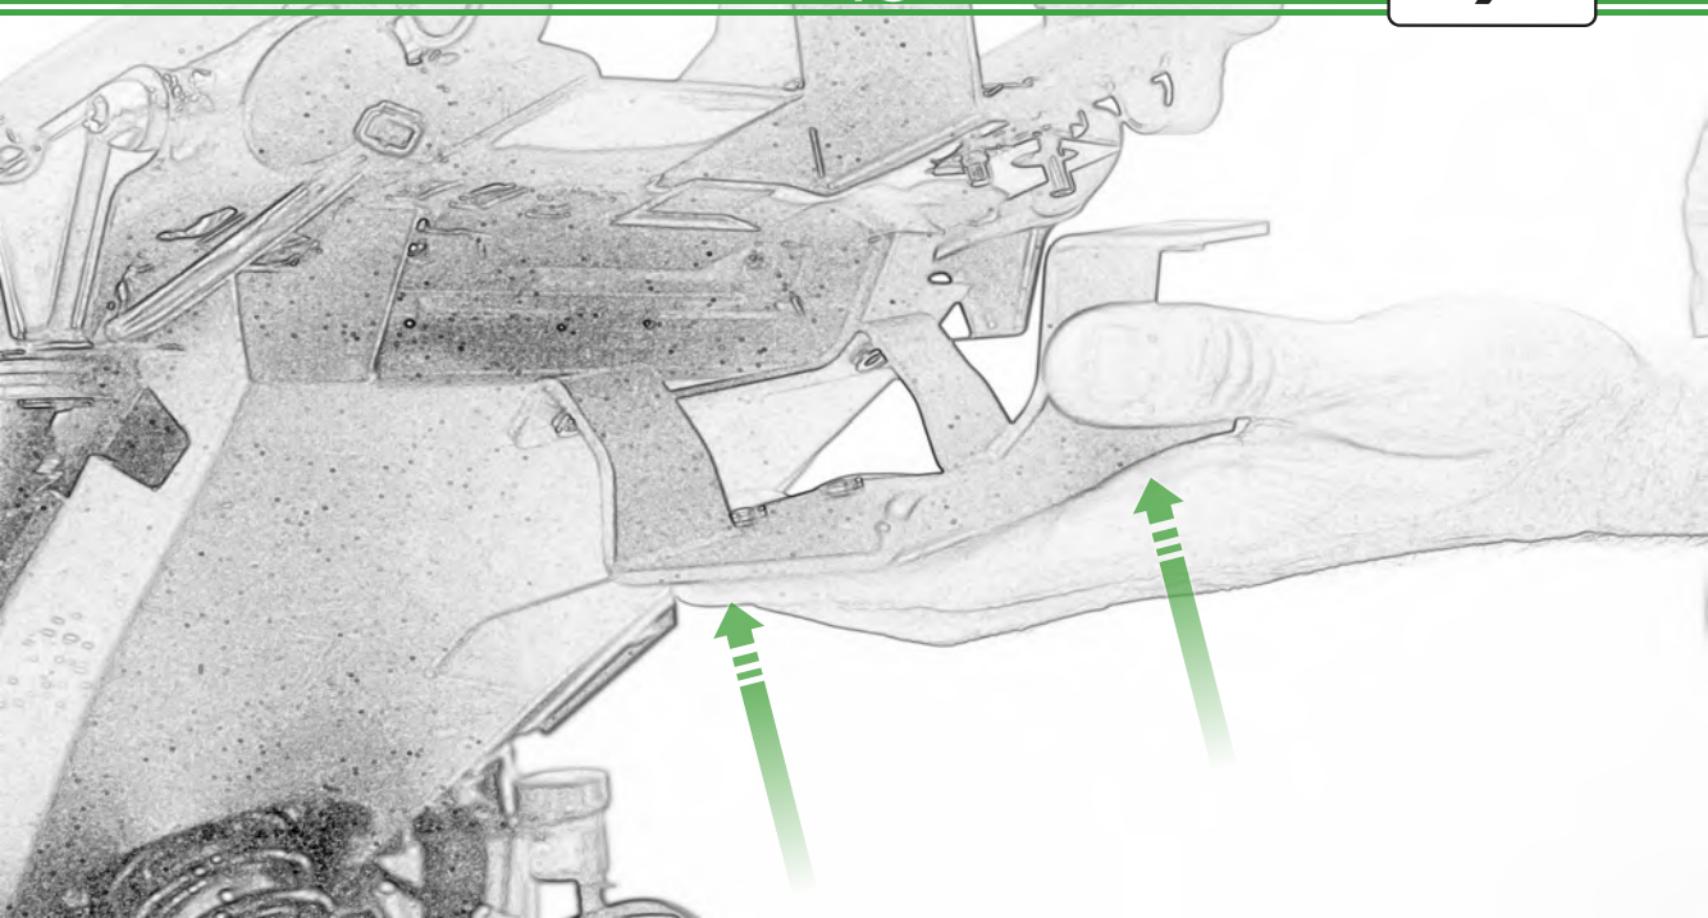

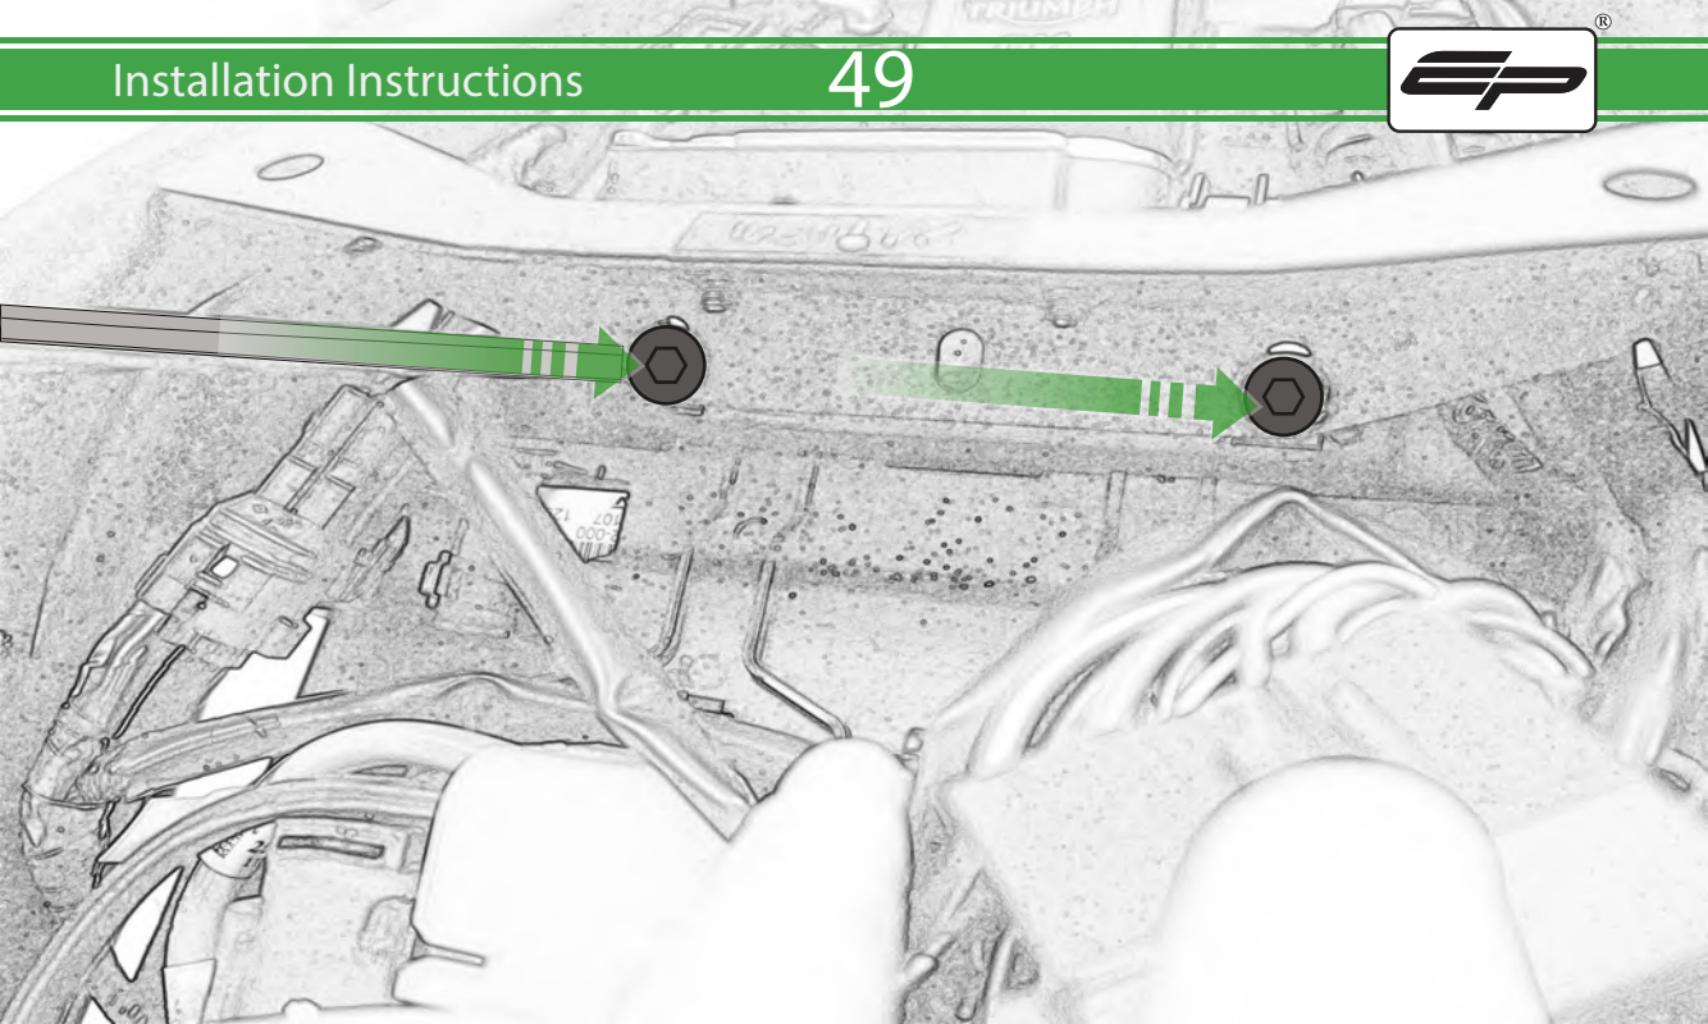


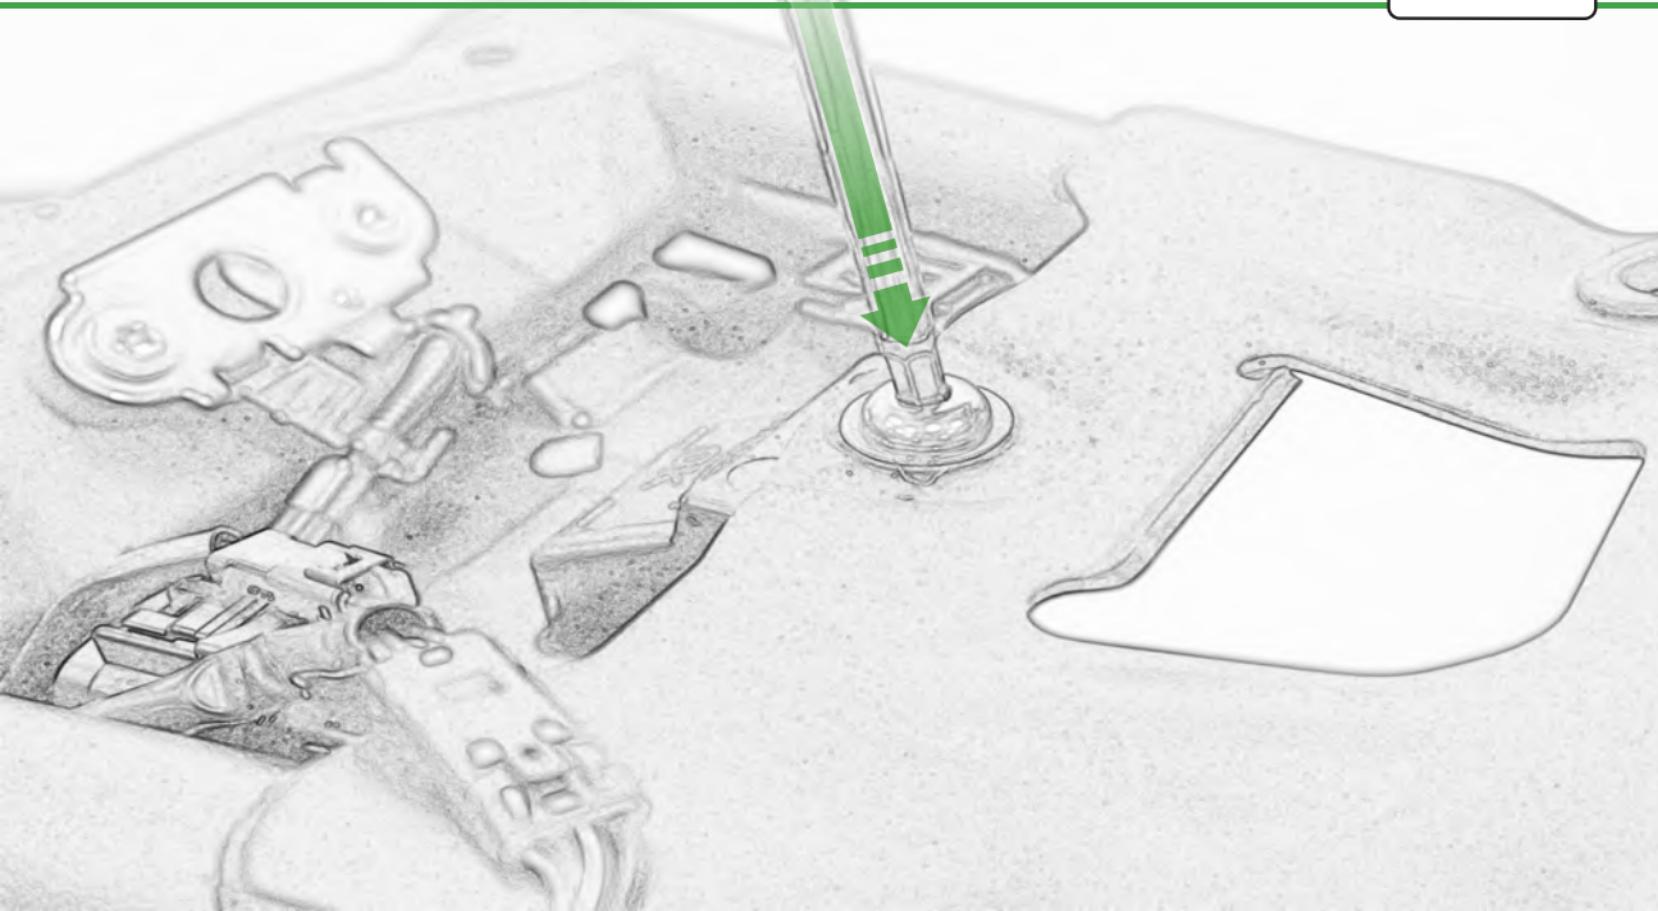


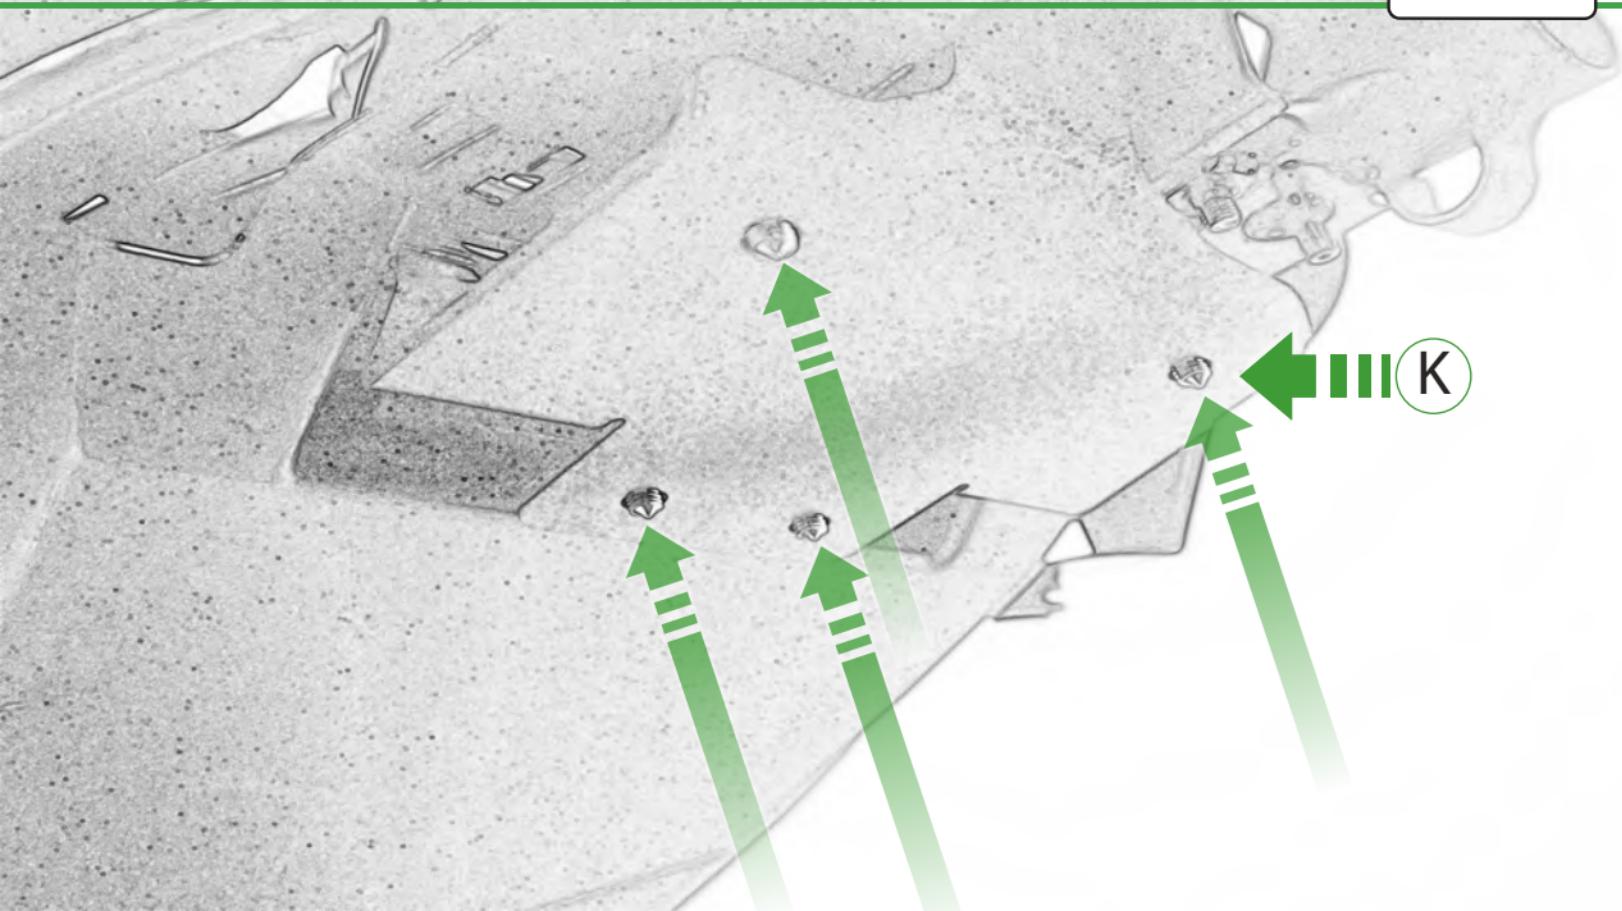


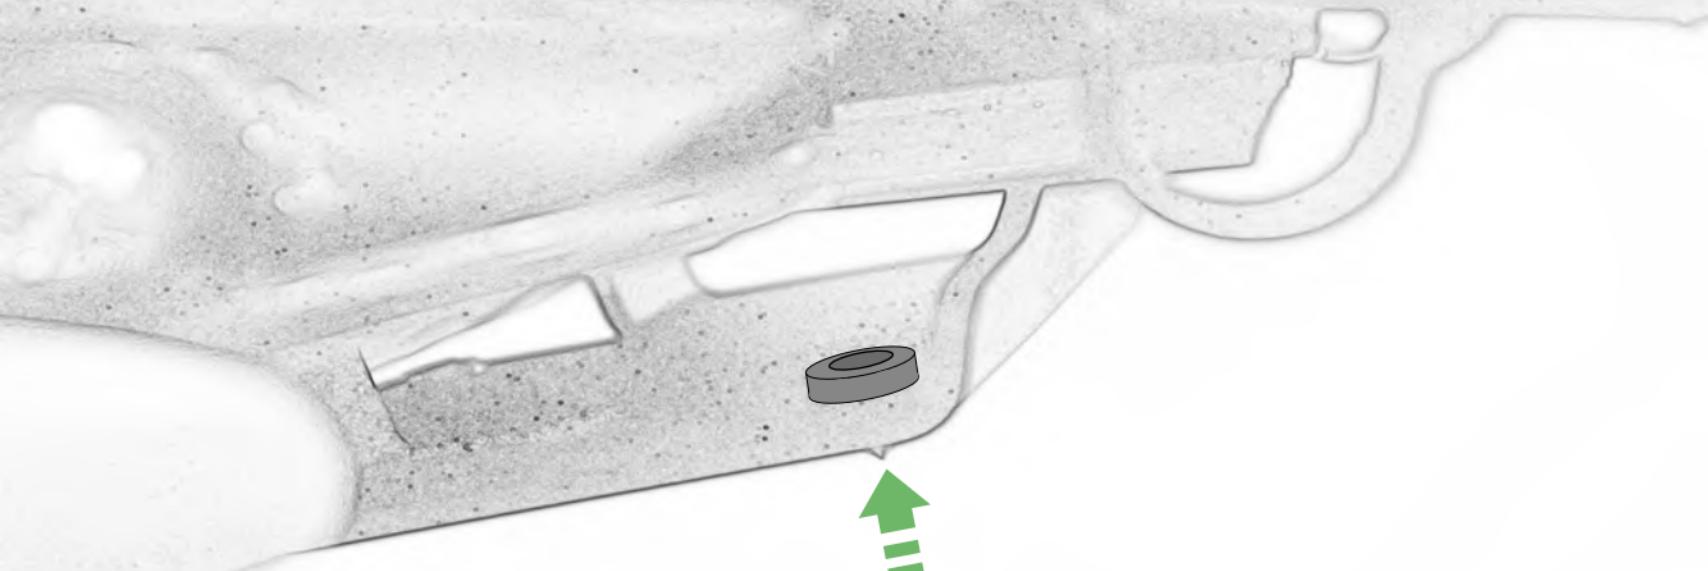

Caution
Set Screw Level
With Top Edge

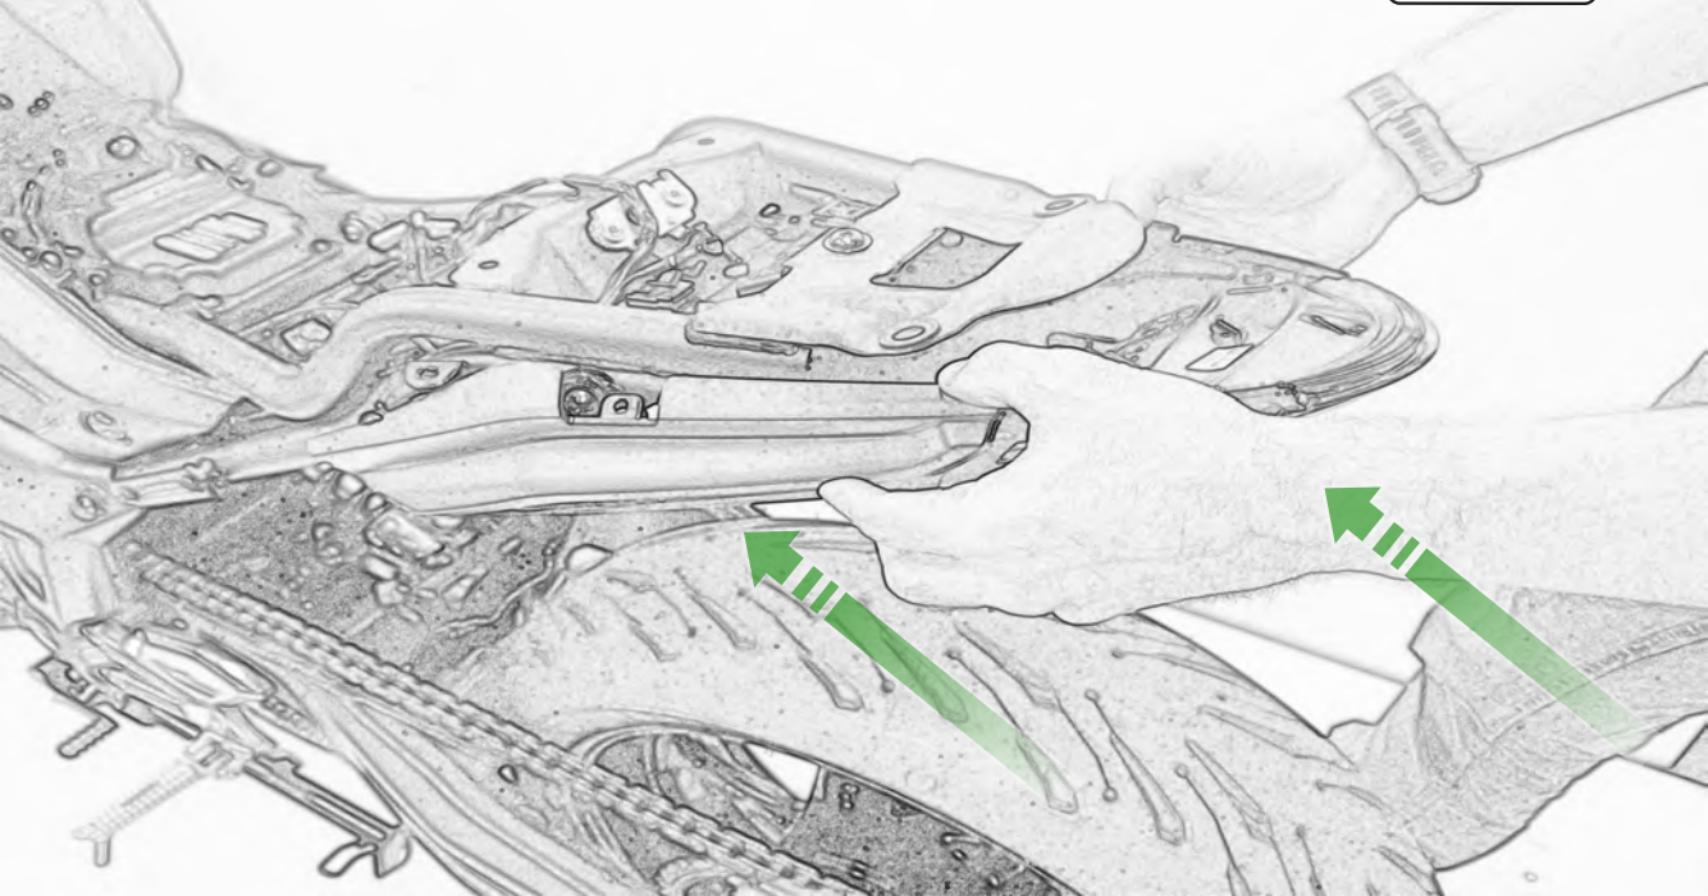


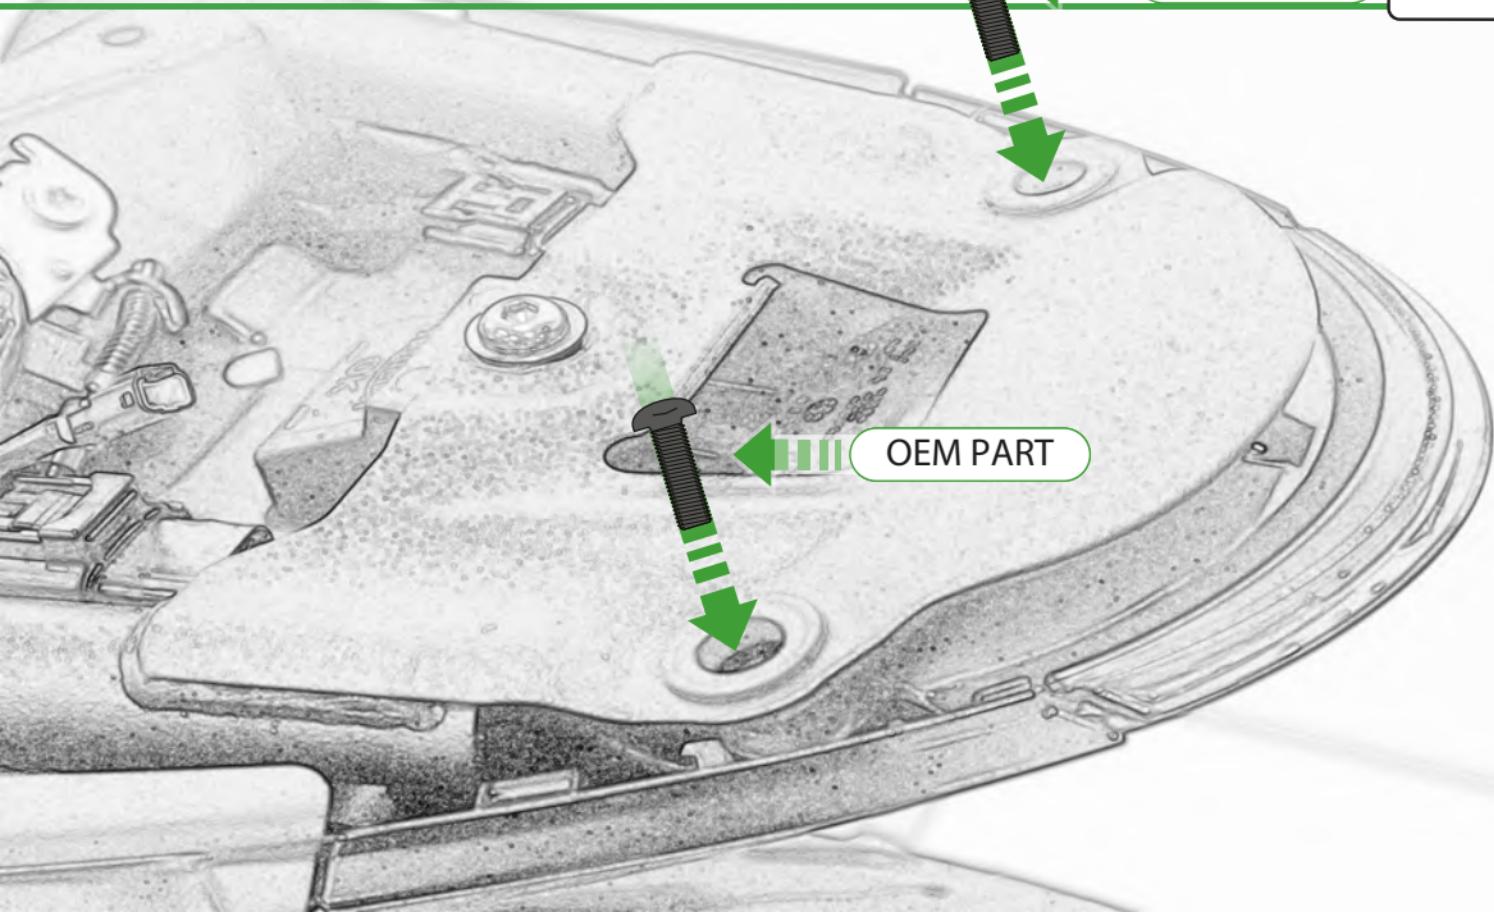


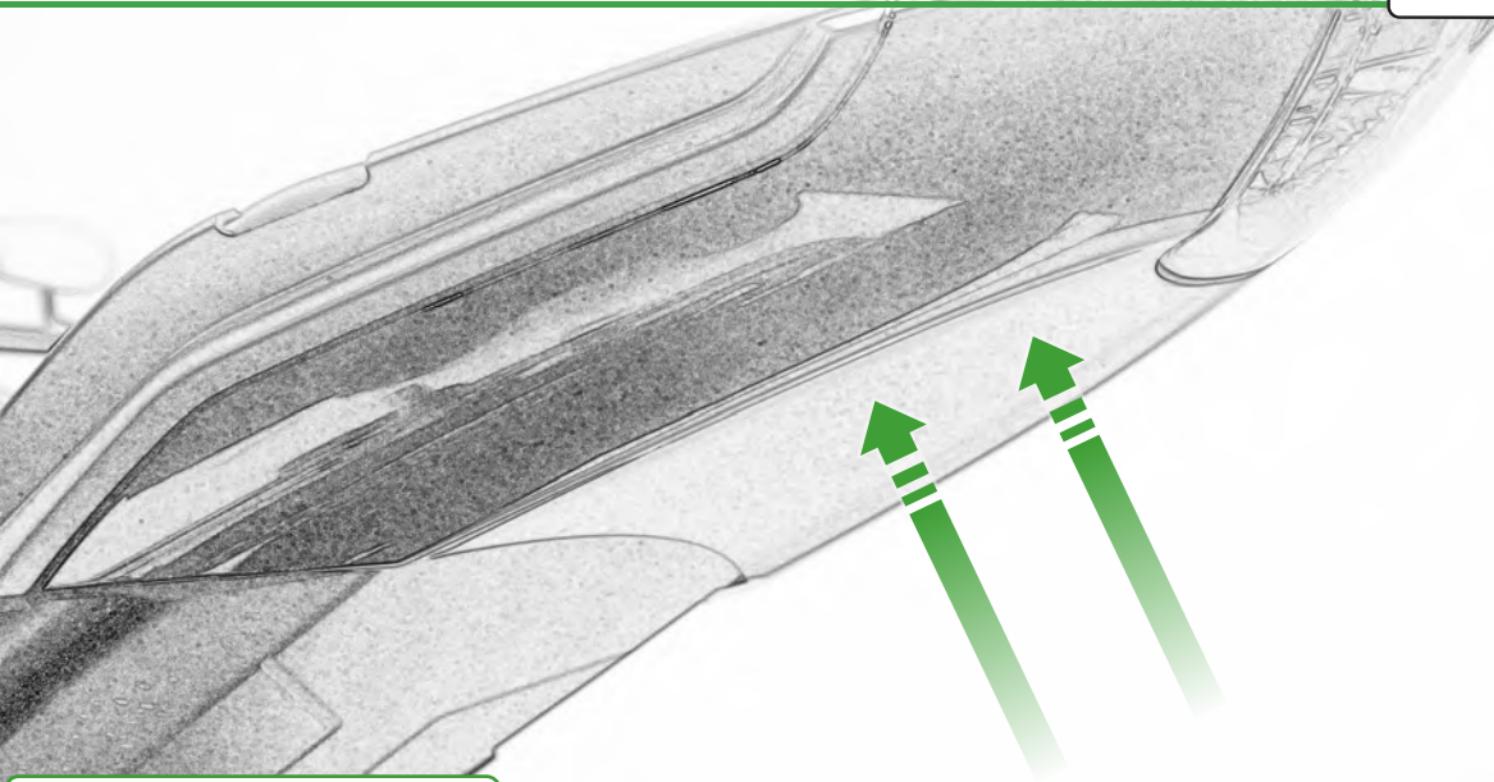


Caution

Press The Undertray
Against Marking Pins

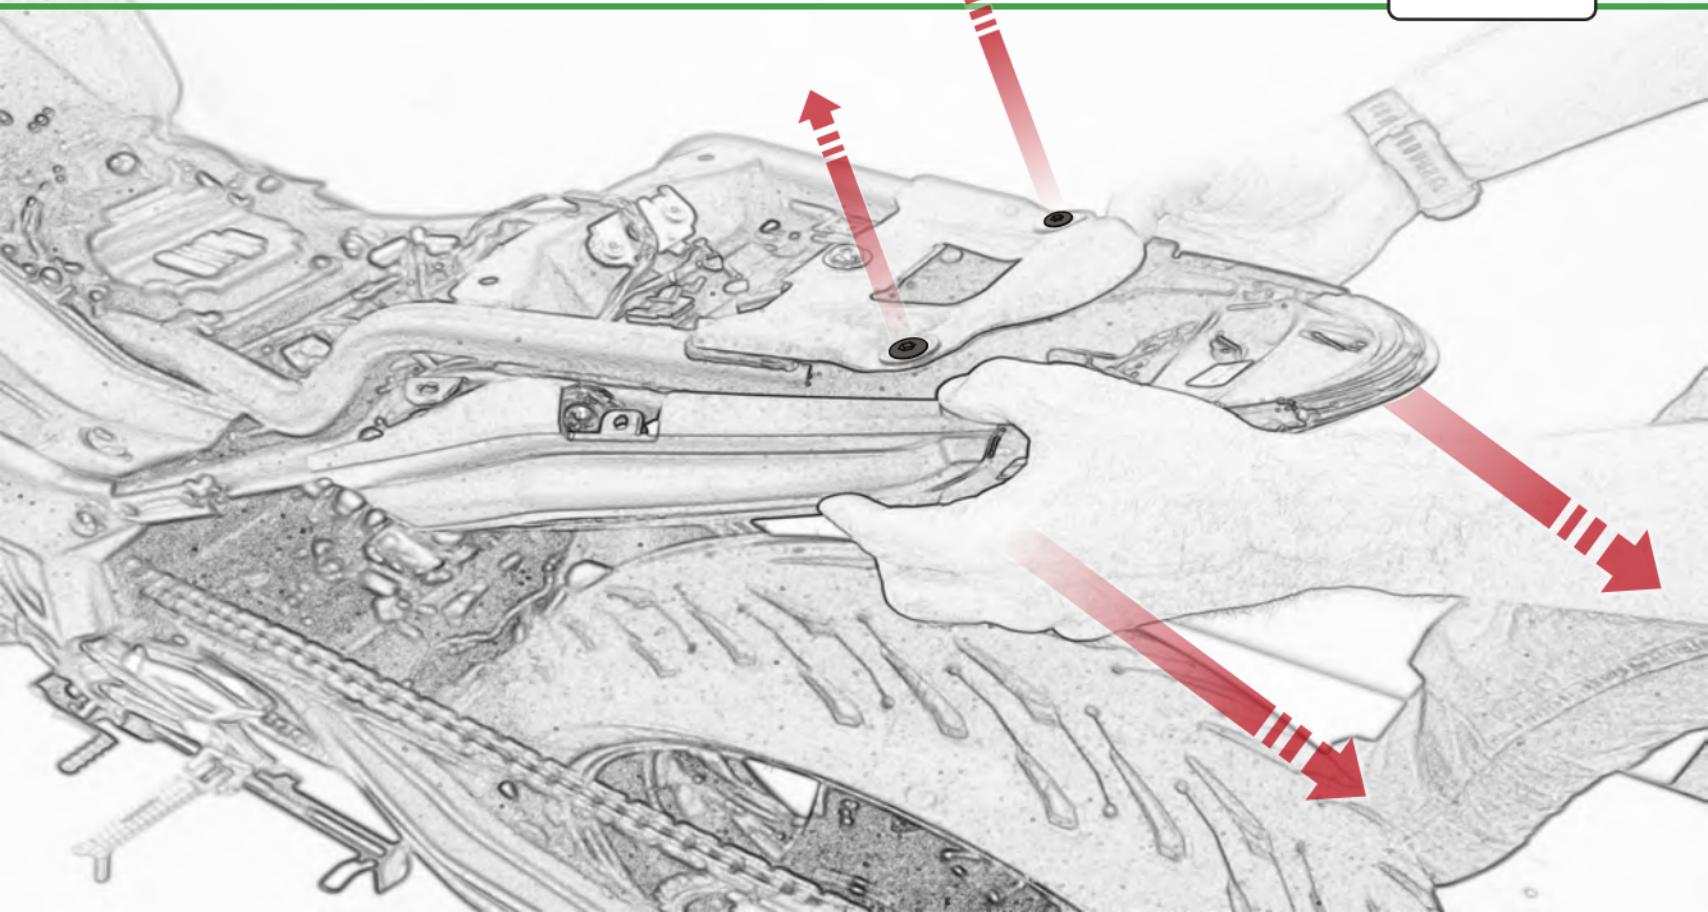


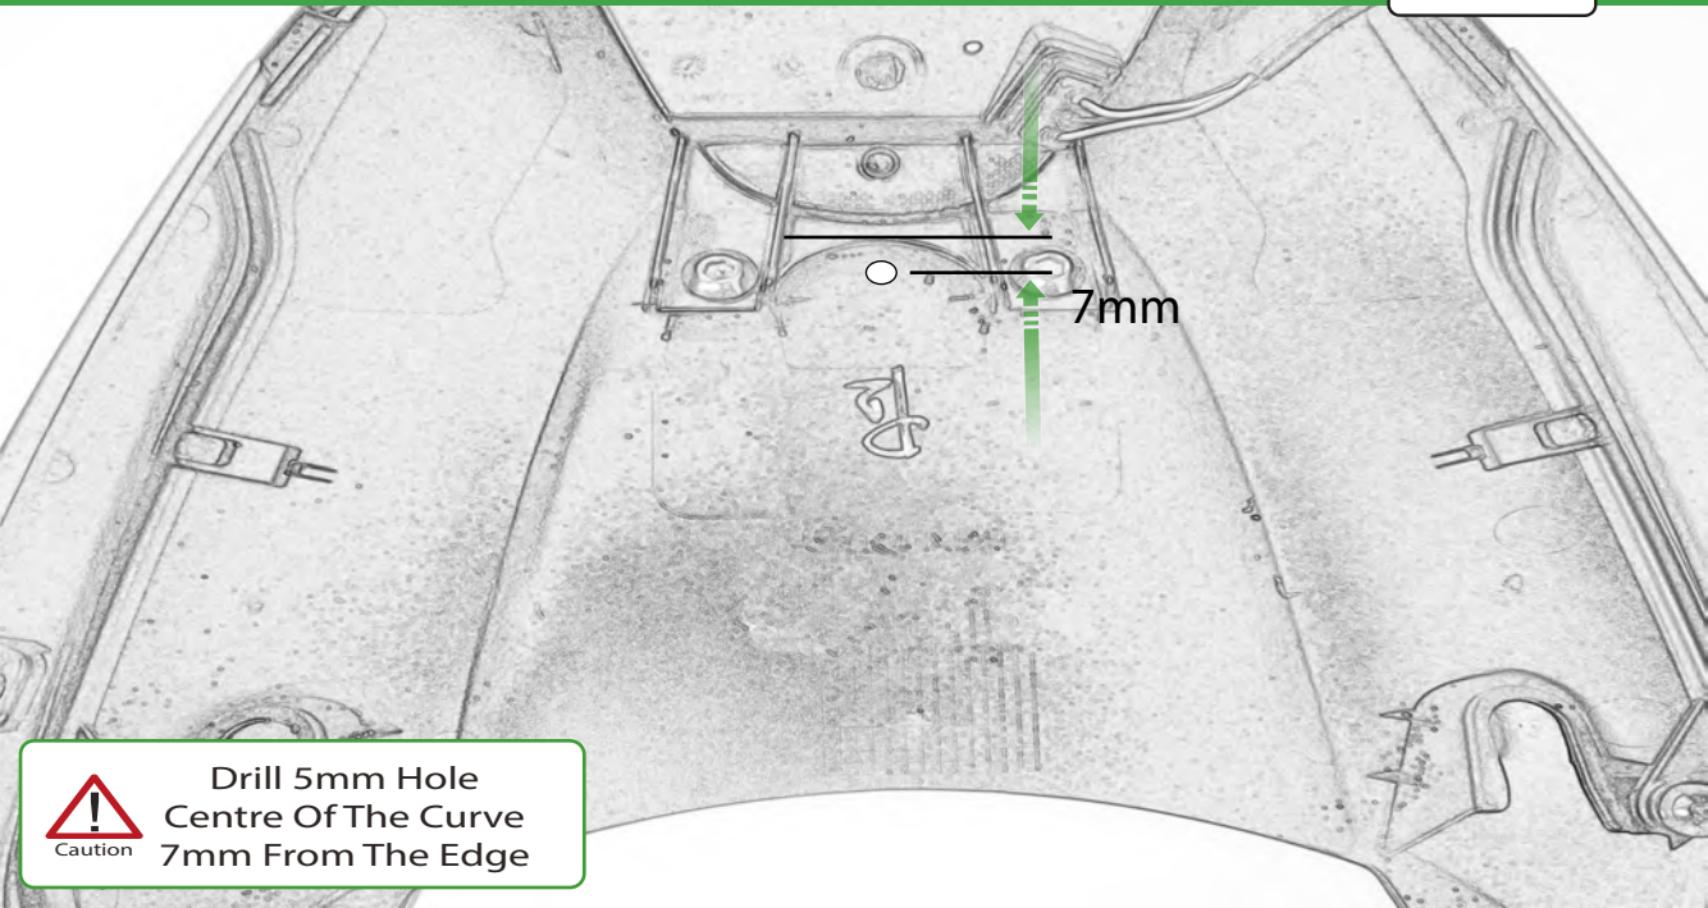


Caution
Drill 5mm Hole
Centre Of The Curve
7mm From The Edge

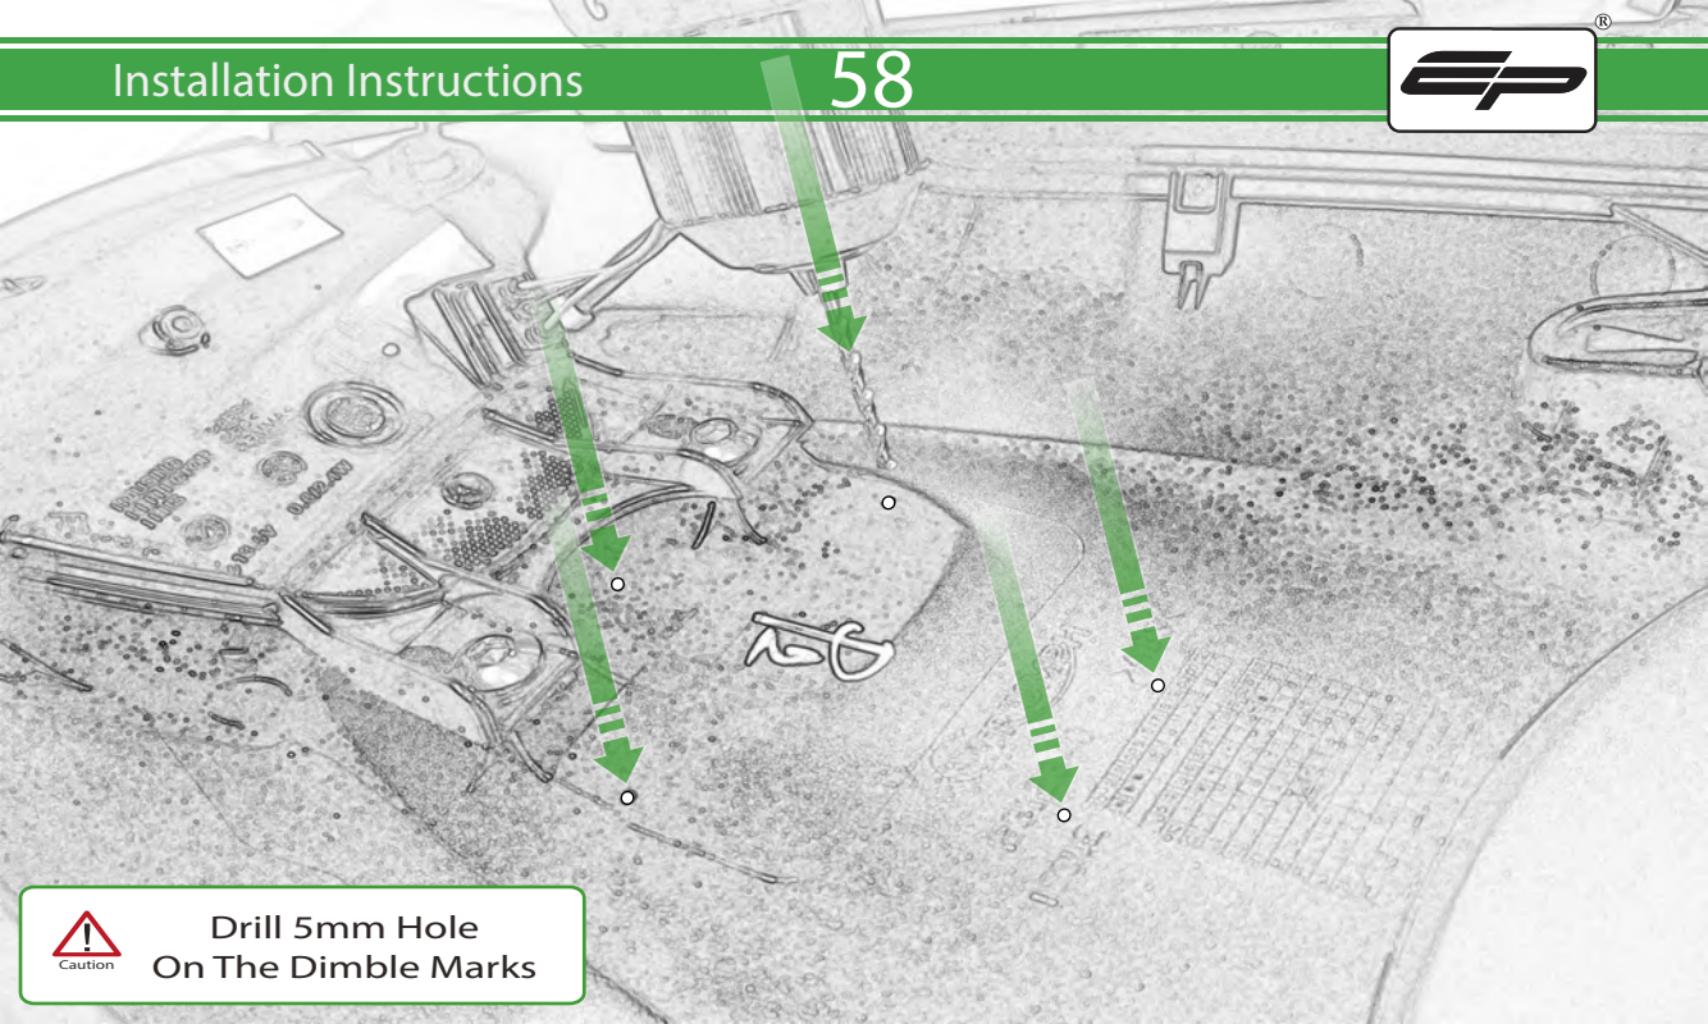



Caution
Drill 5mm Hole
On The Dimble Marks

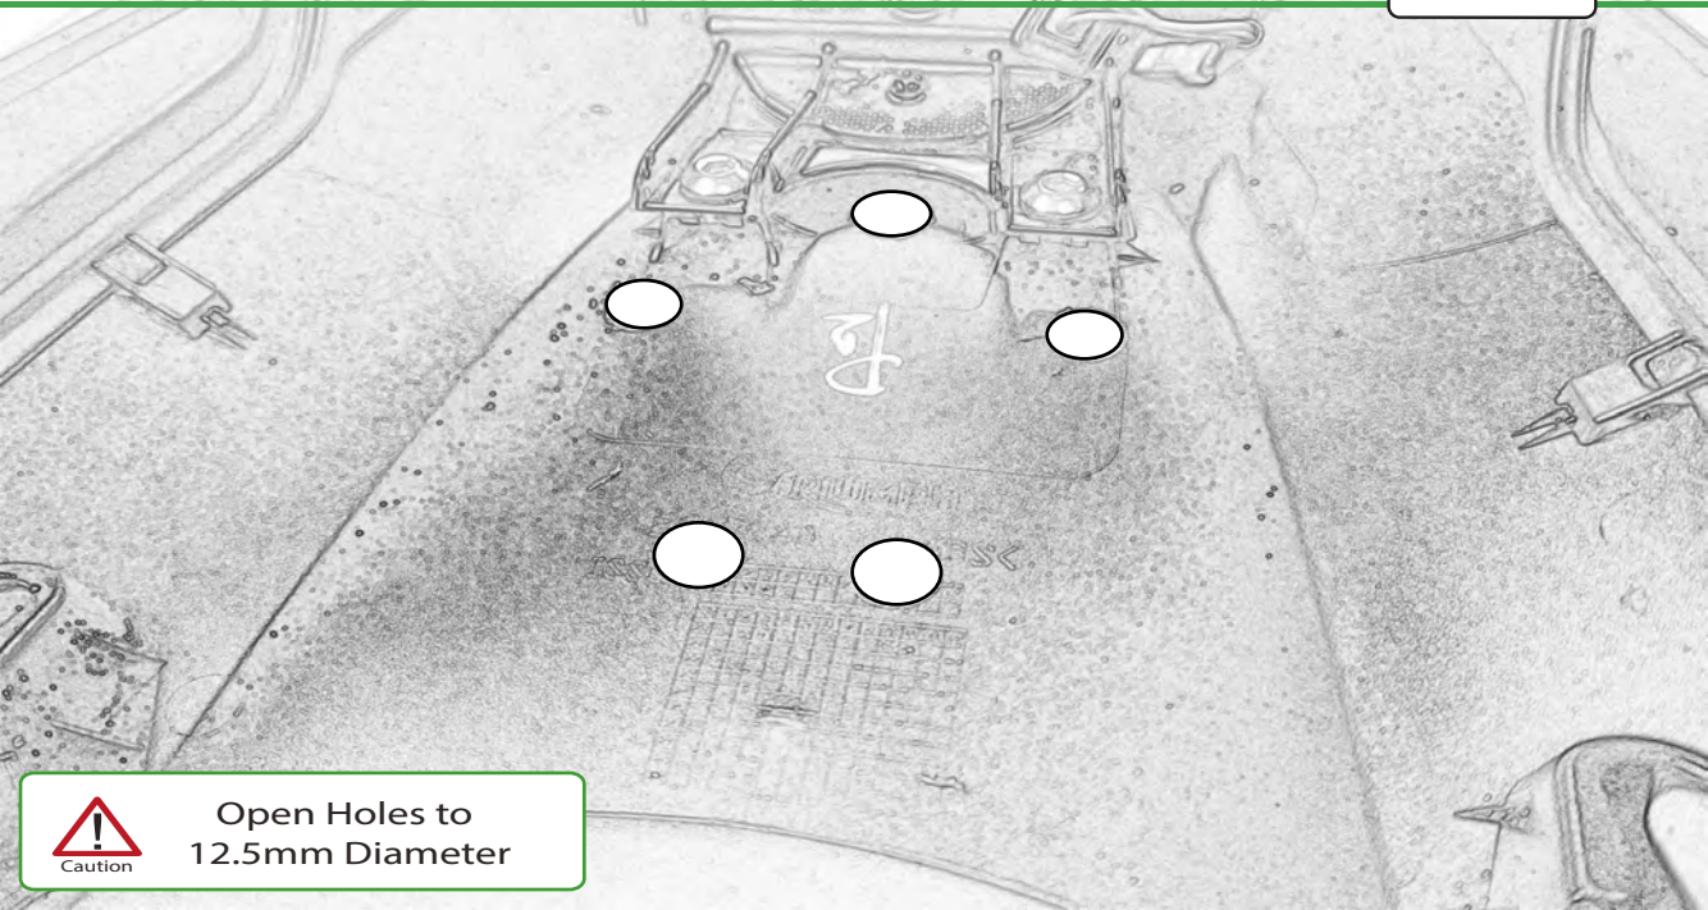



Caution
Open Holes to
12.5mm Diameter

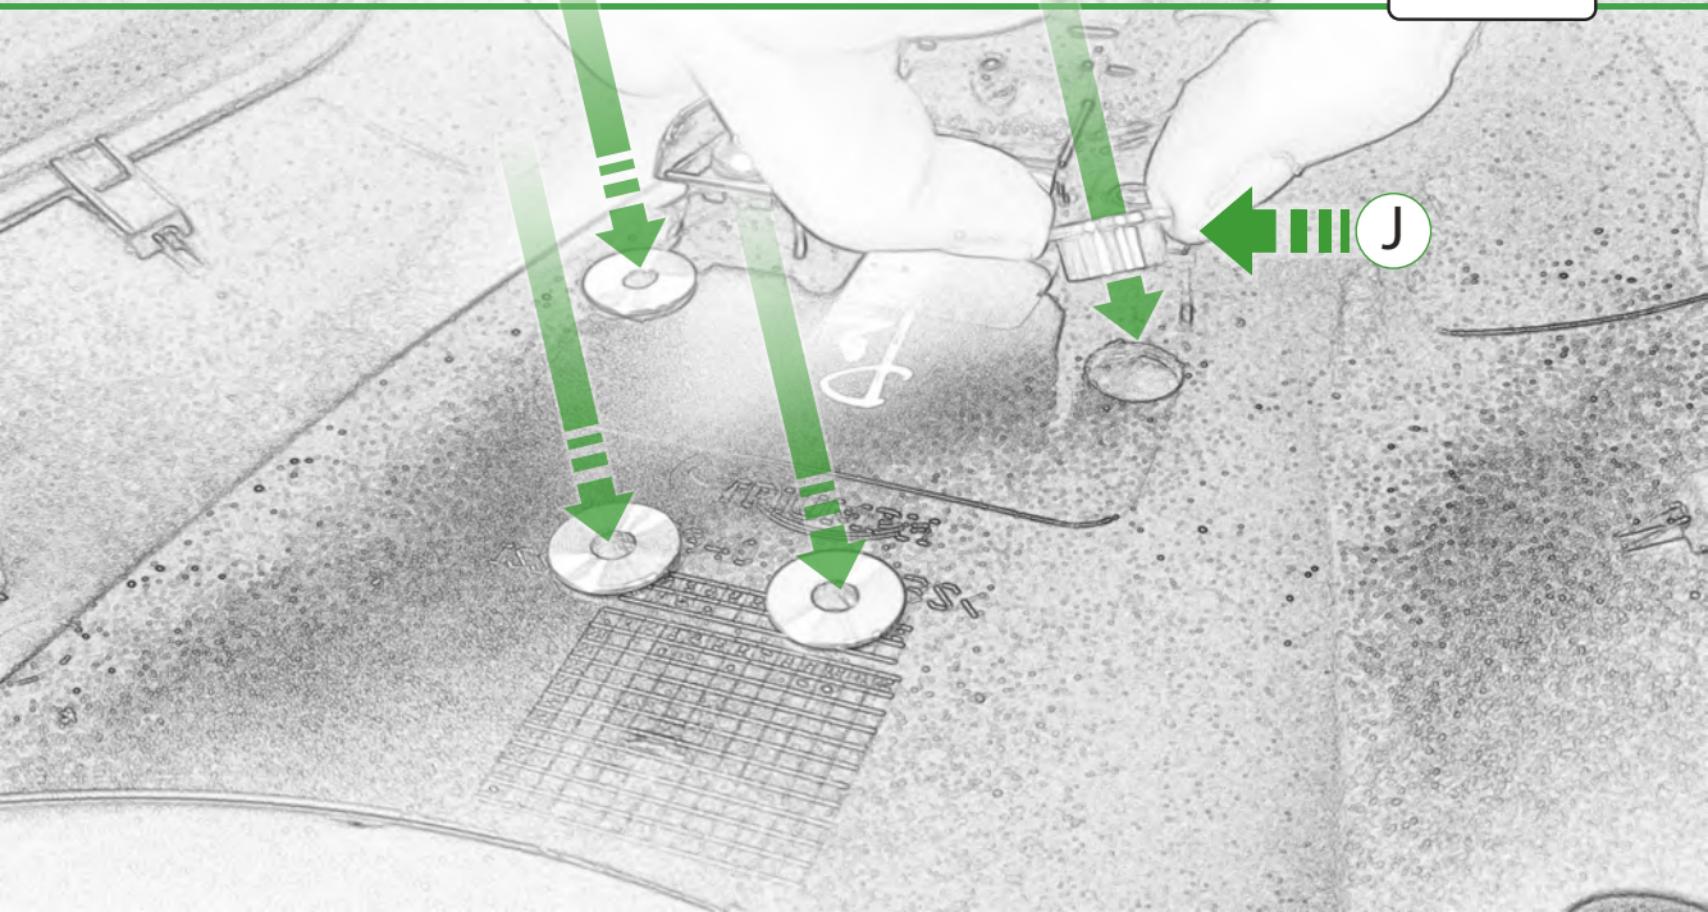

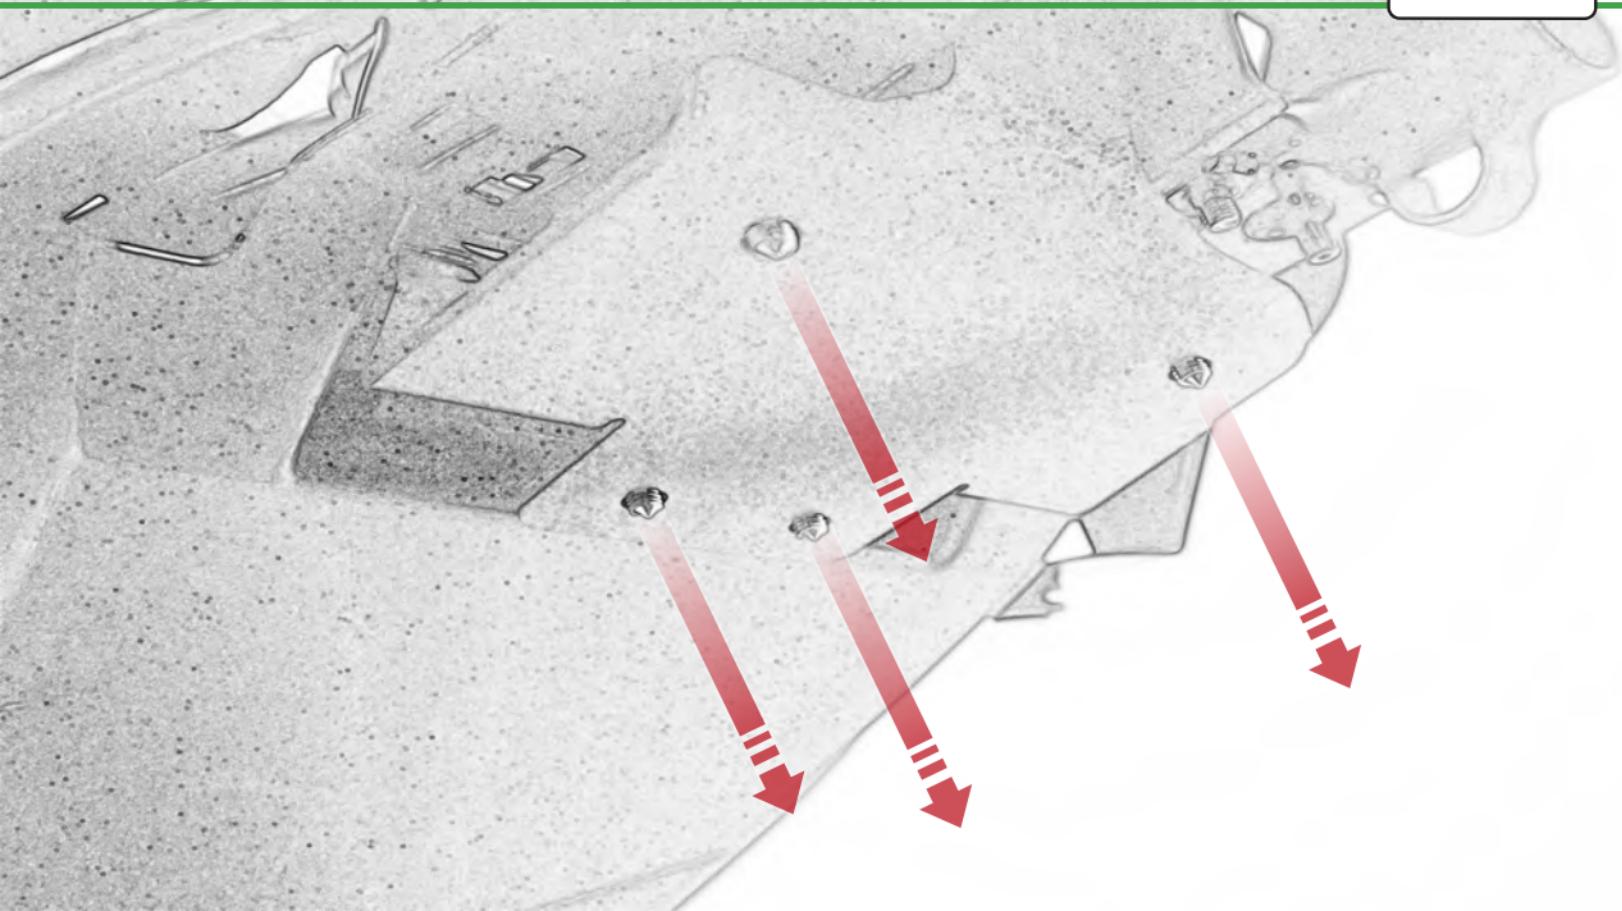


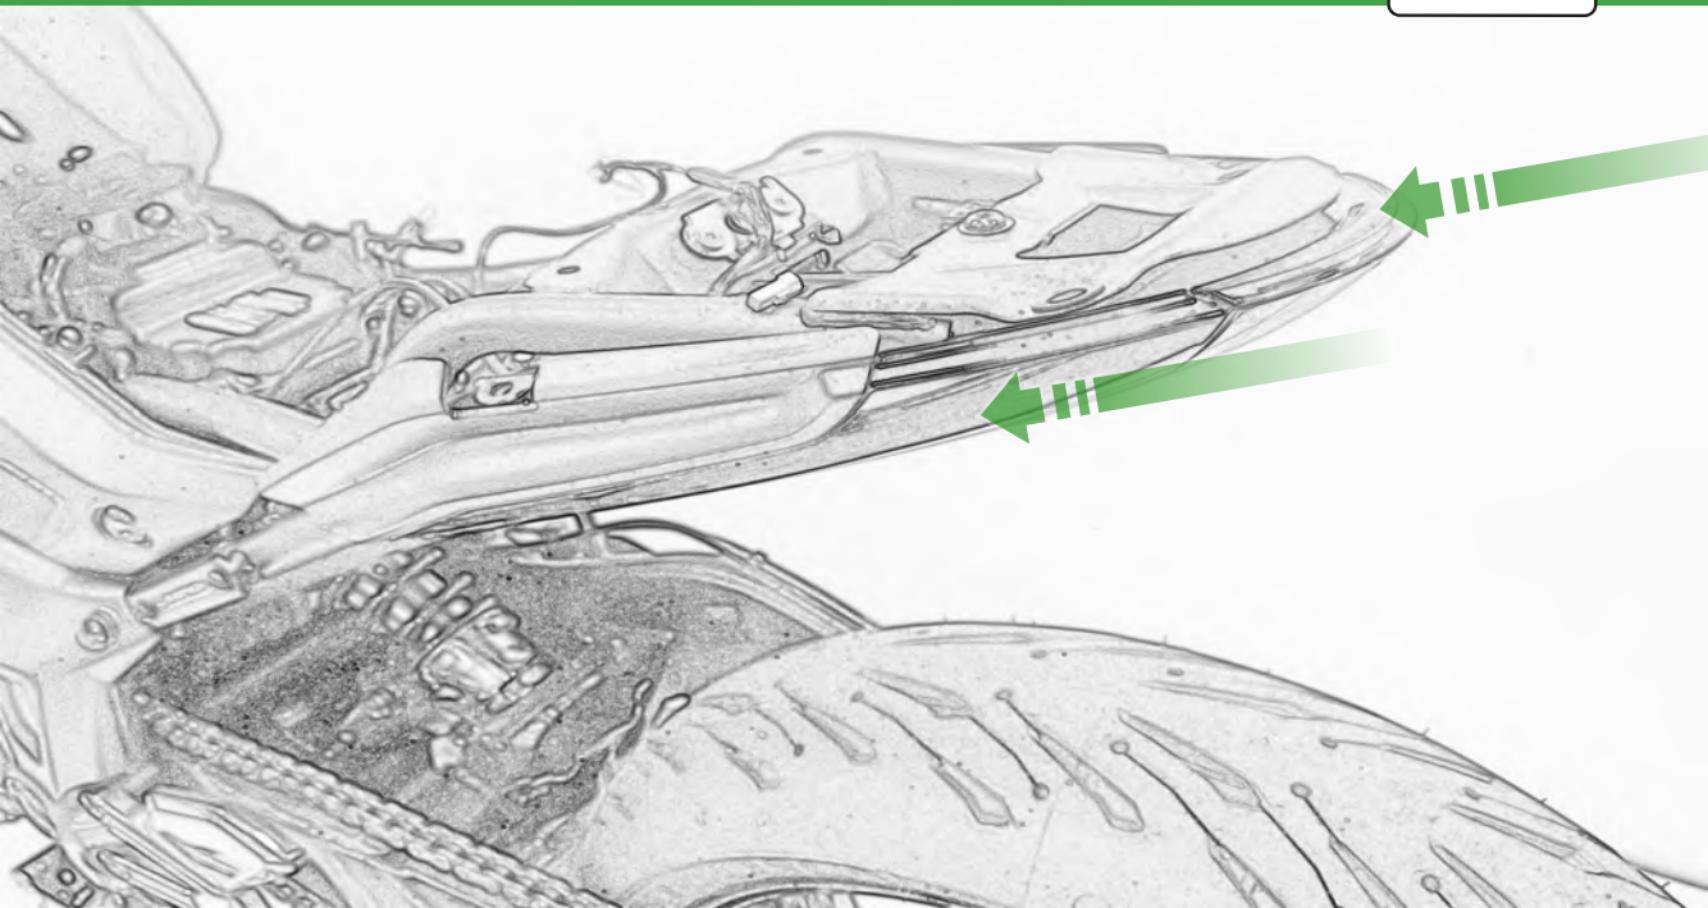

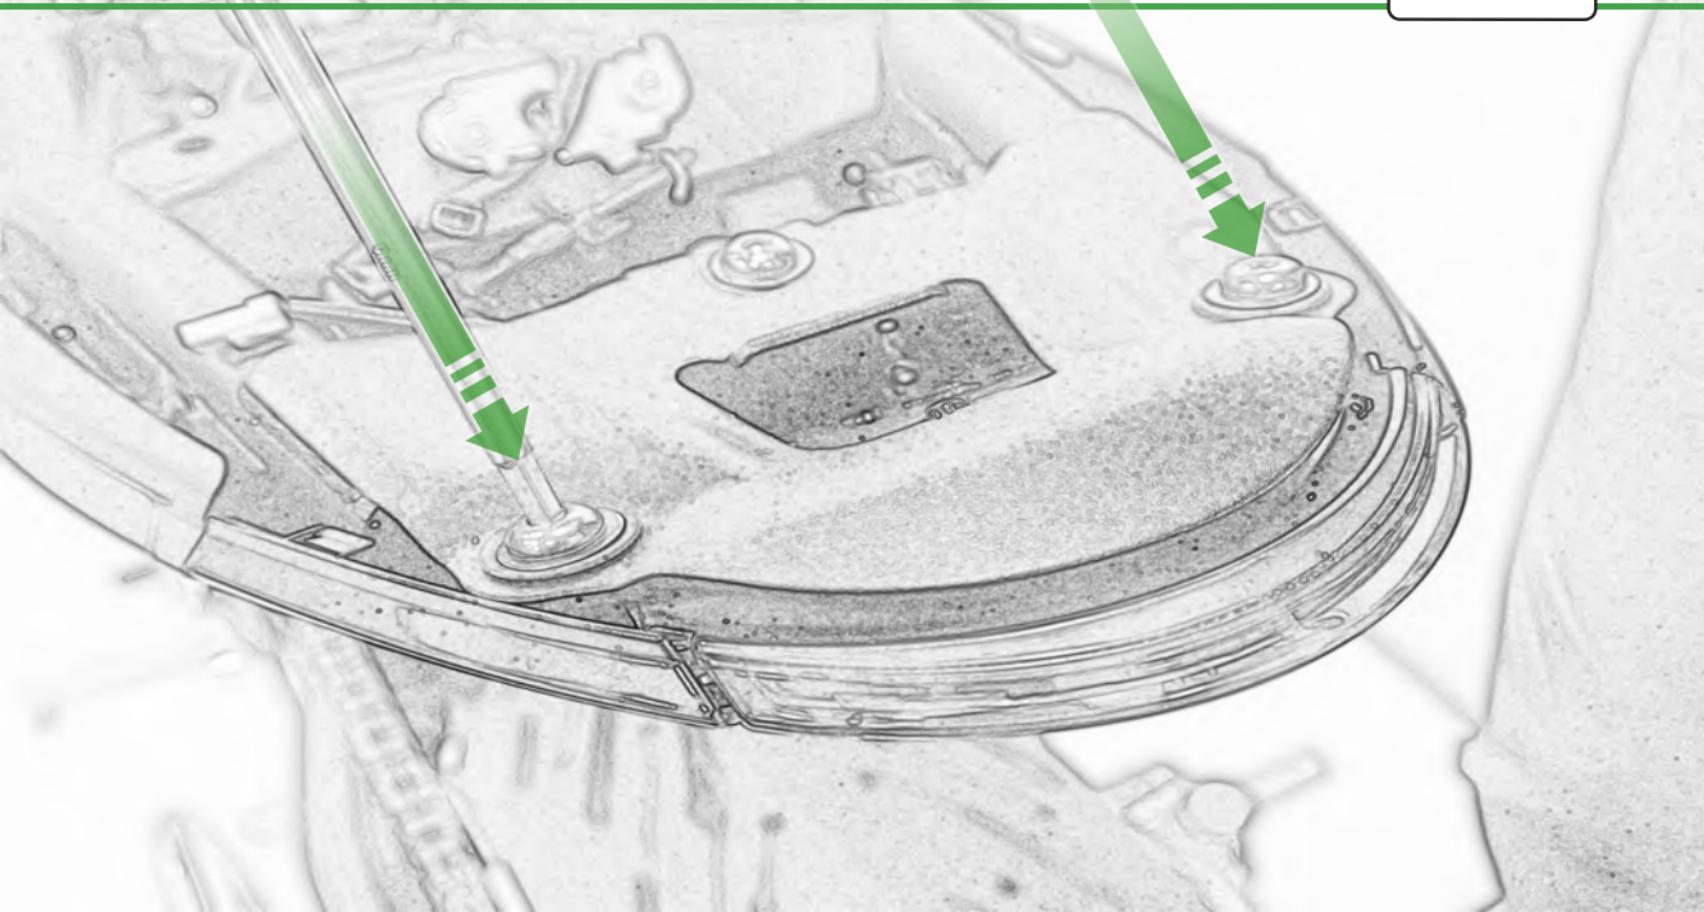


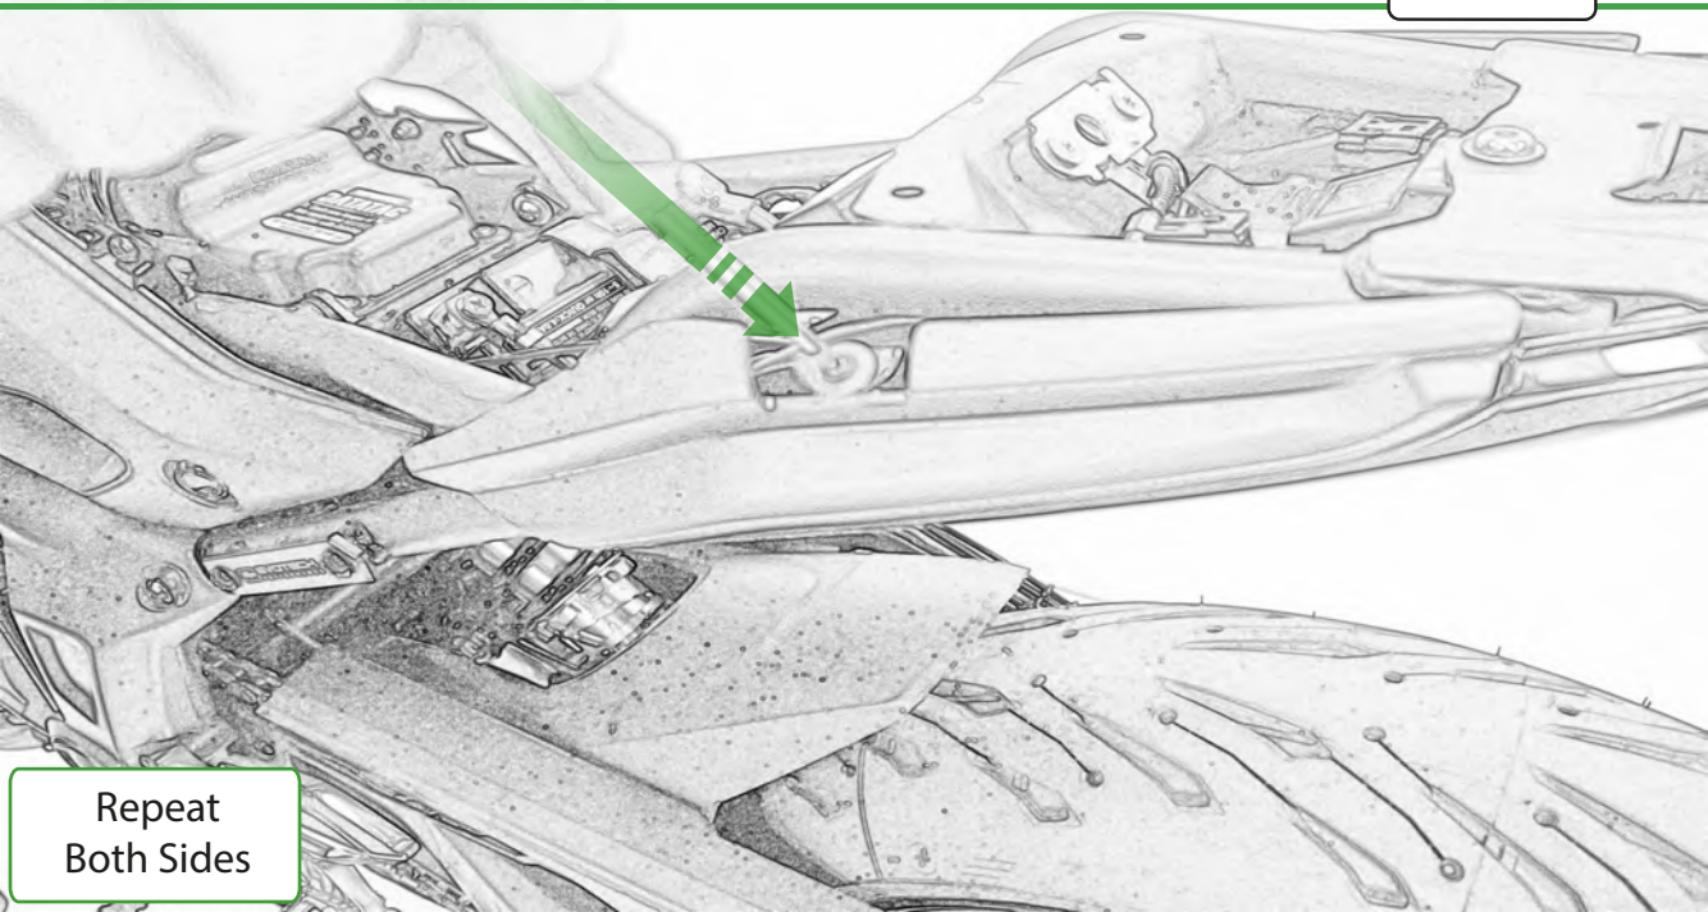


Repeat
Both Sides

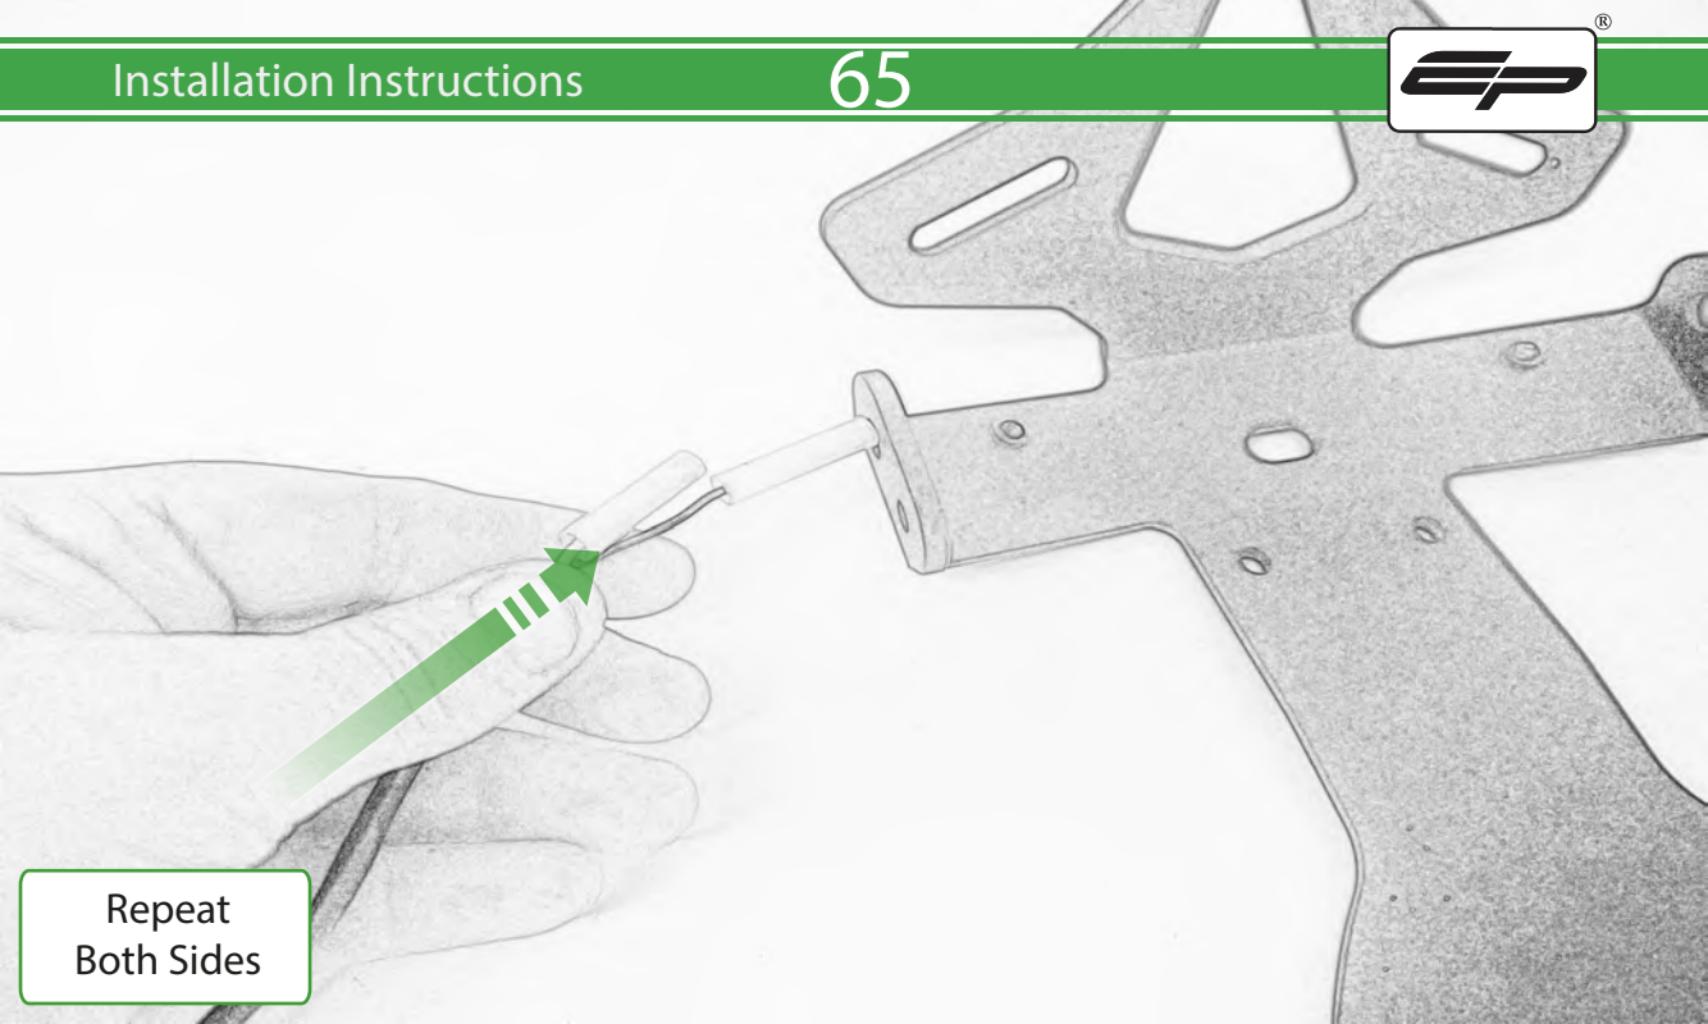


Repeat
Both Sides

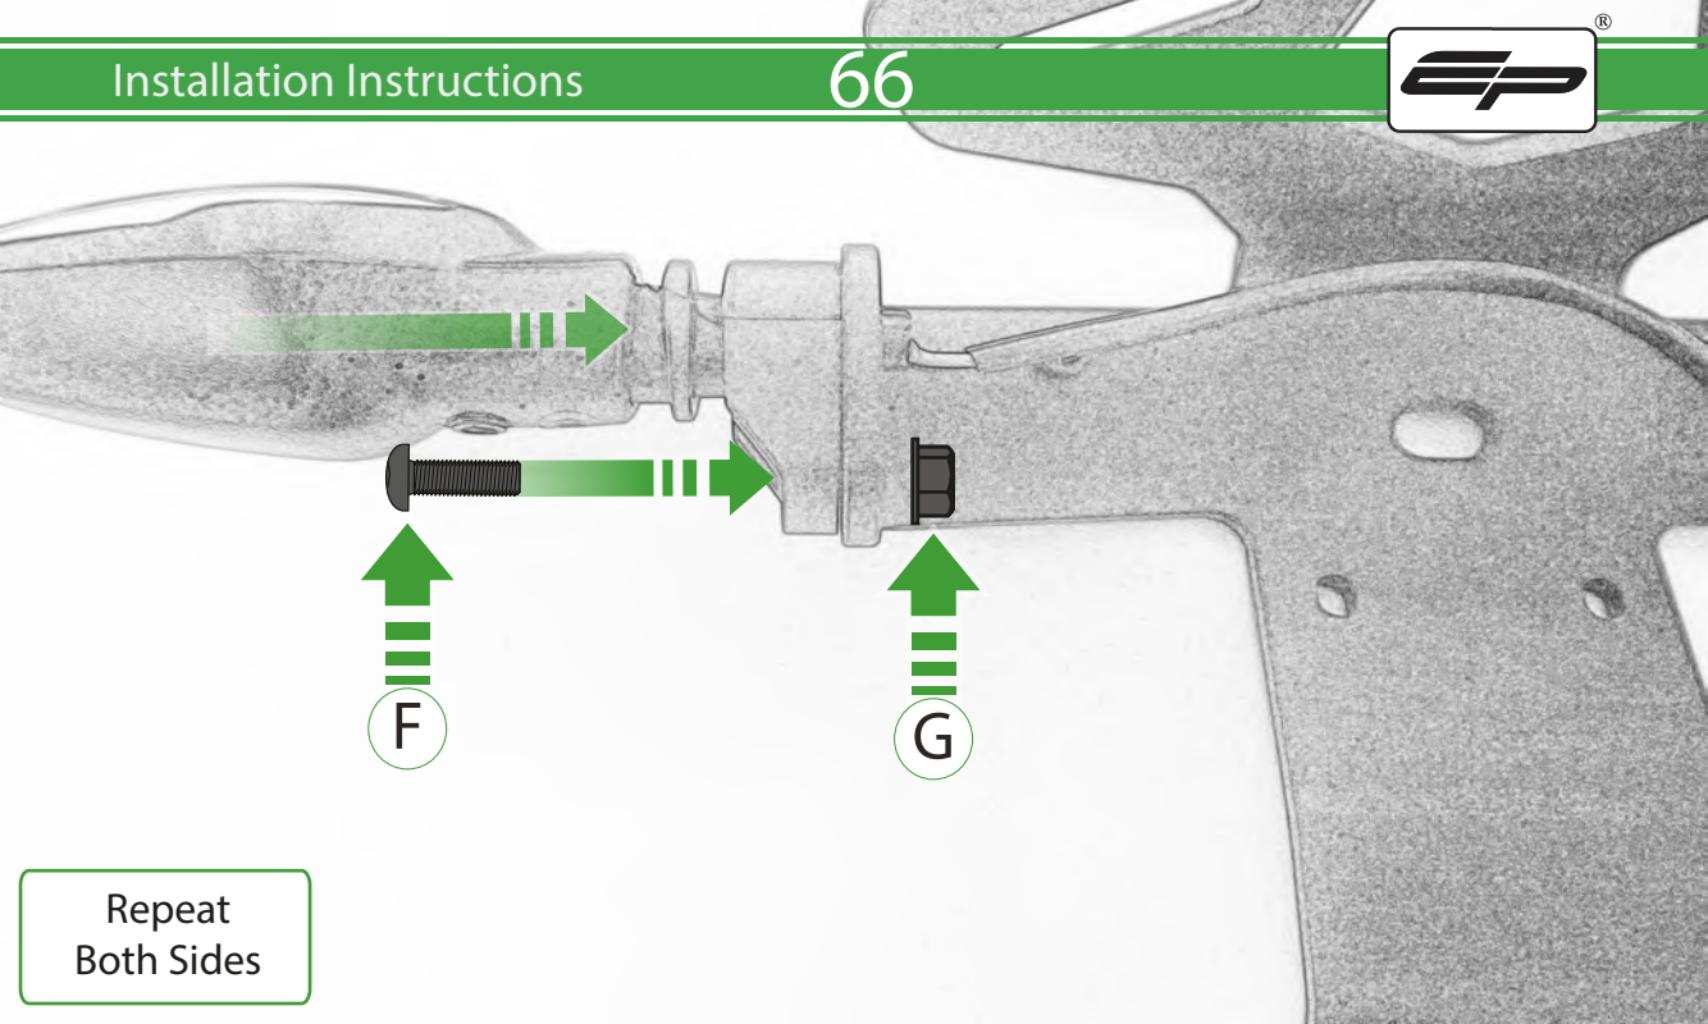


Repeat
Both Sides

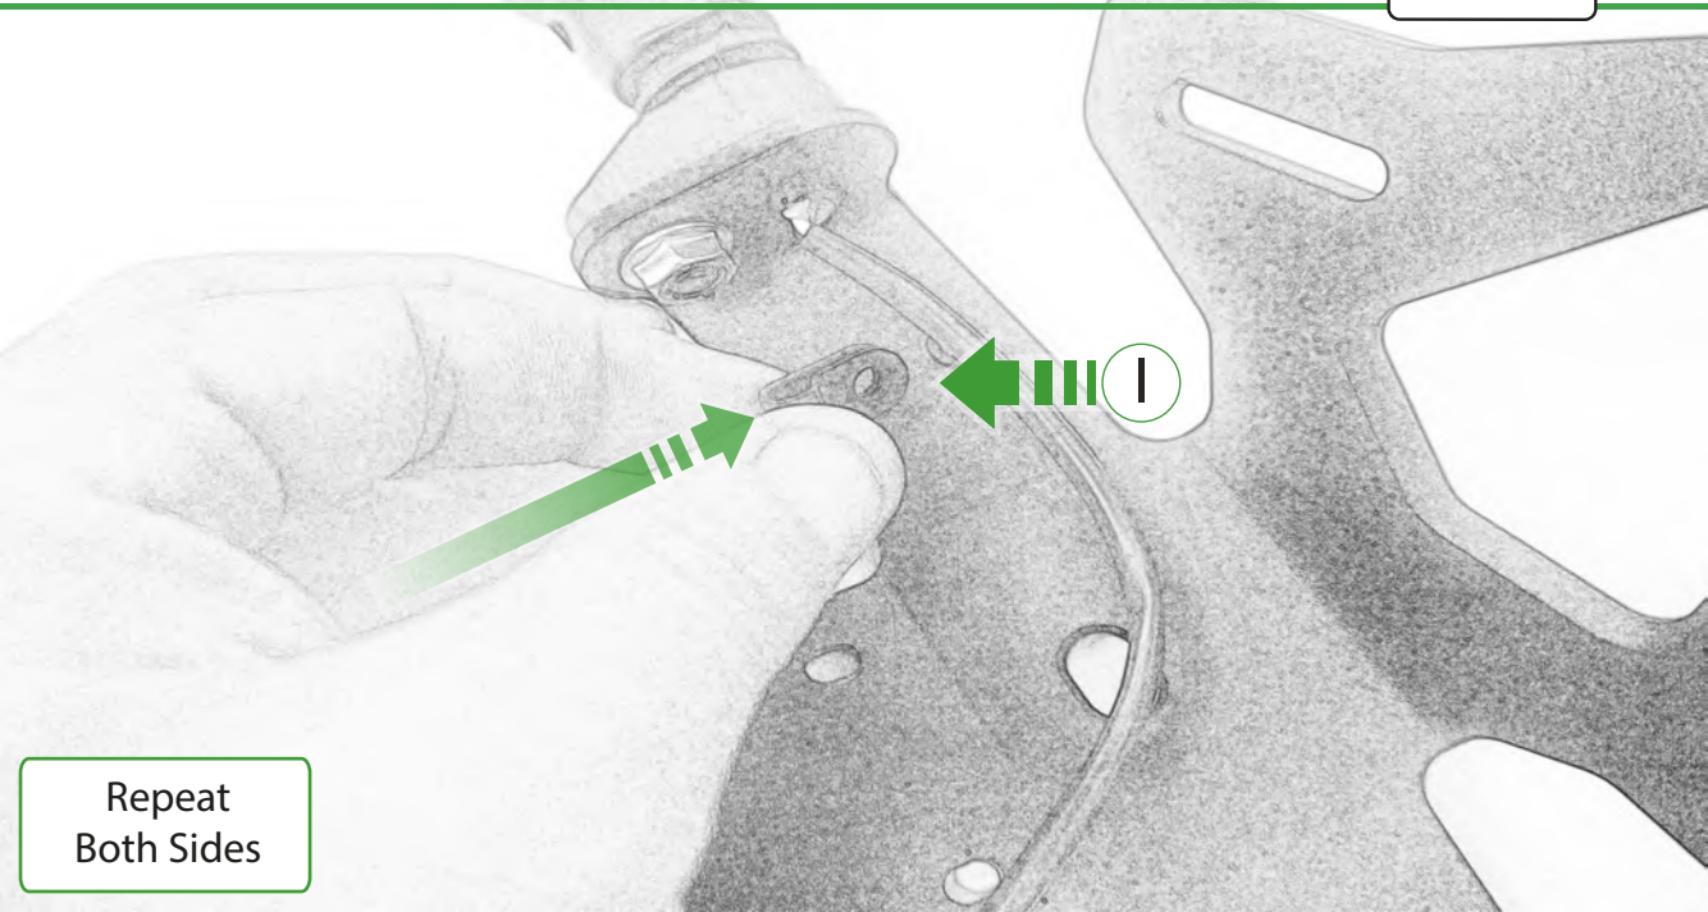


Repeat
Both Sides

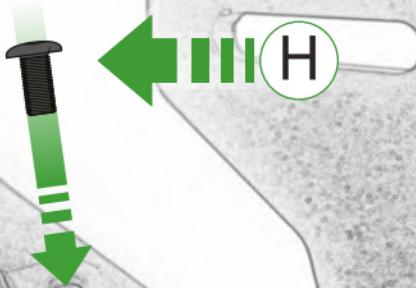



Repeat
Both Sides

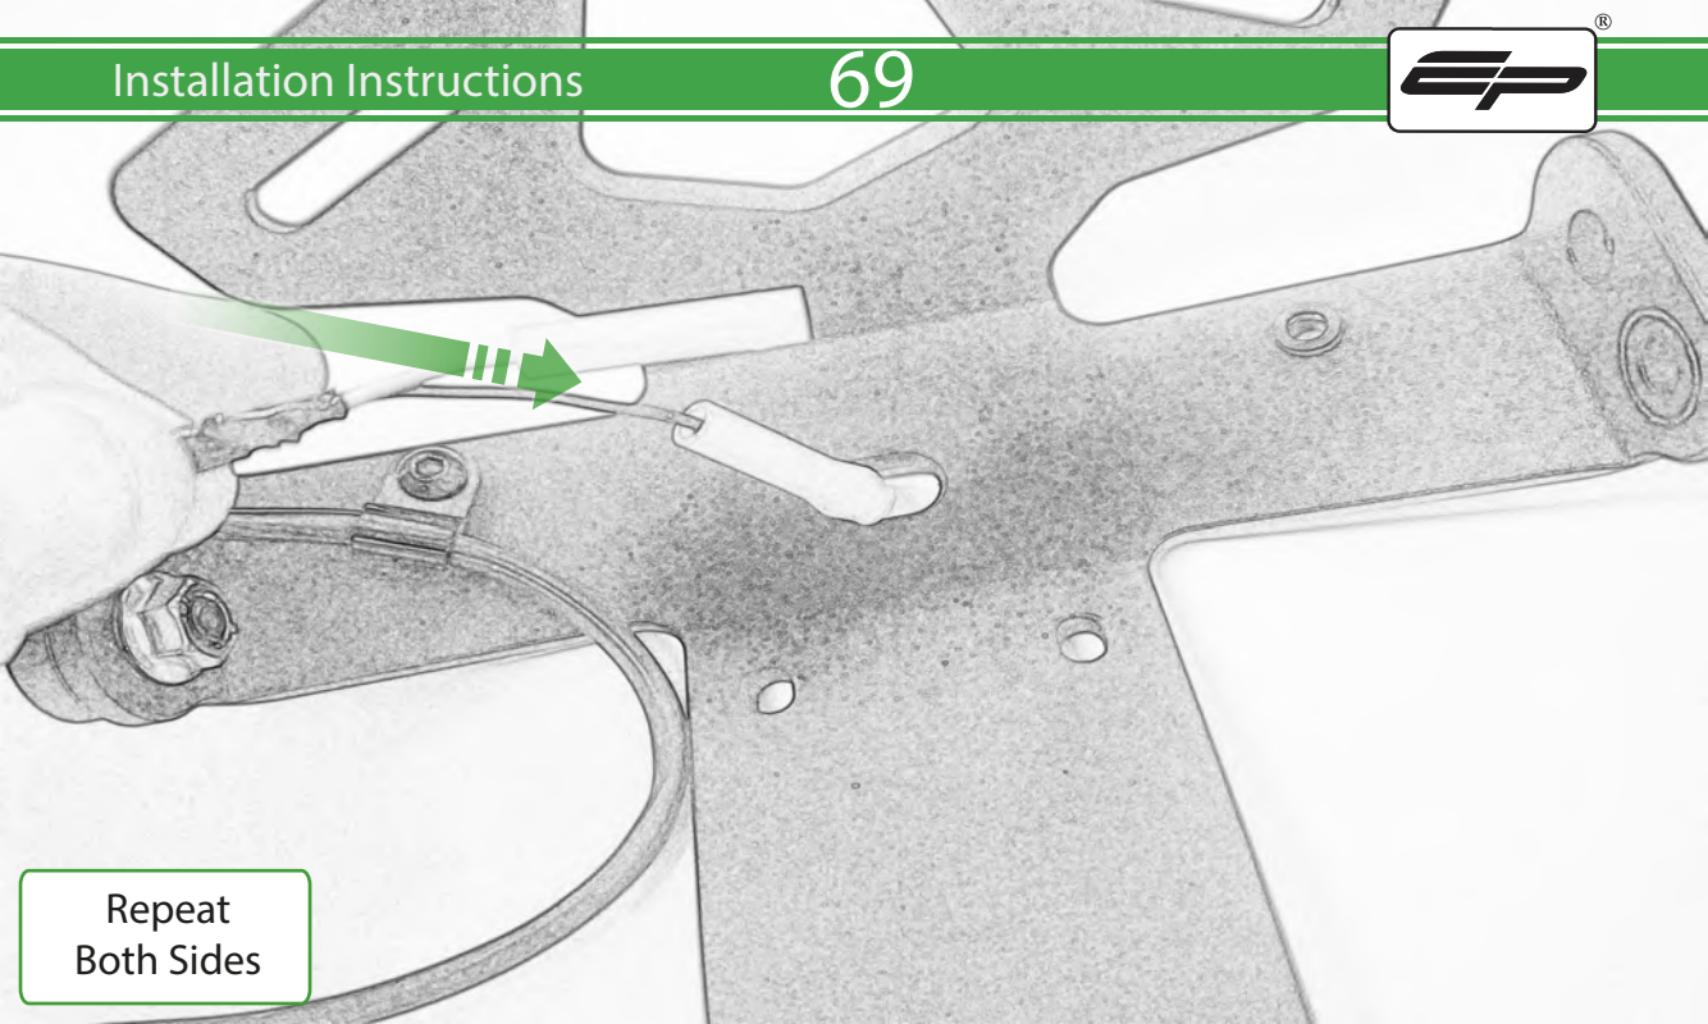



Repeat
Both Sides

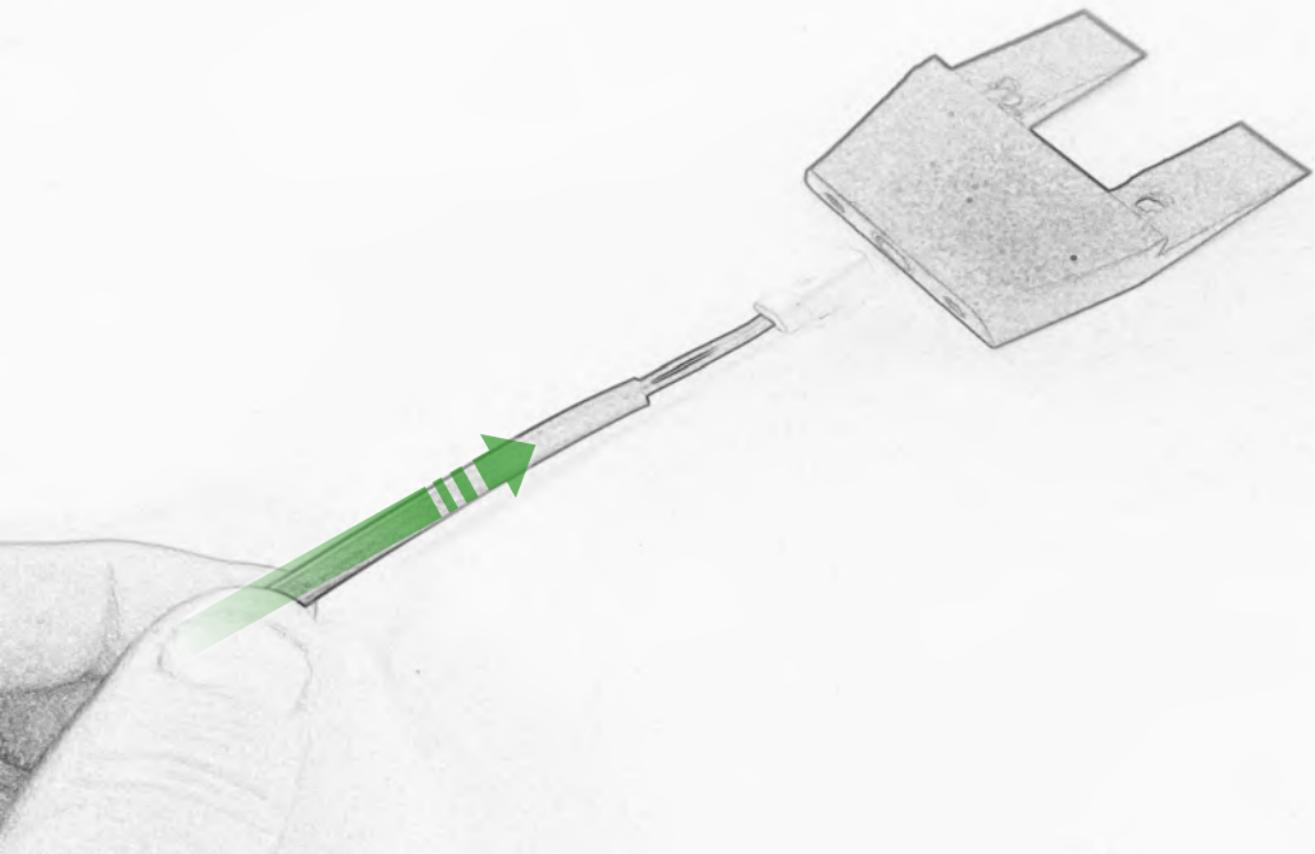


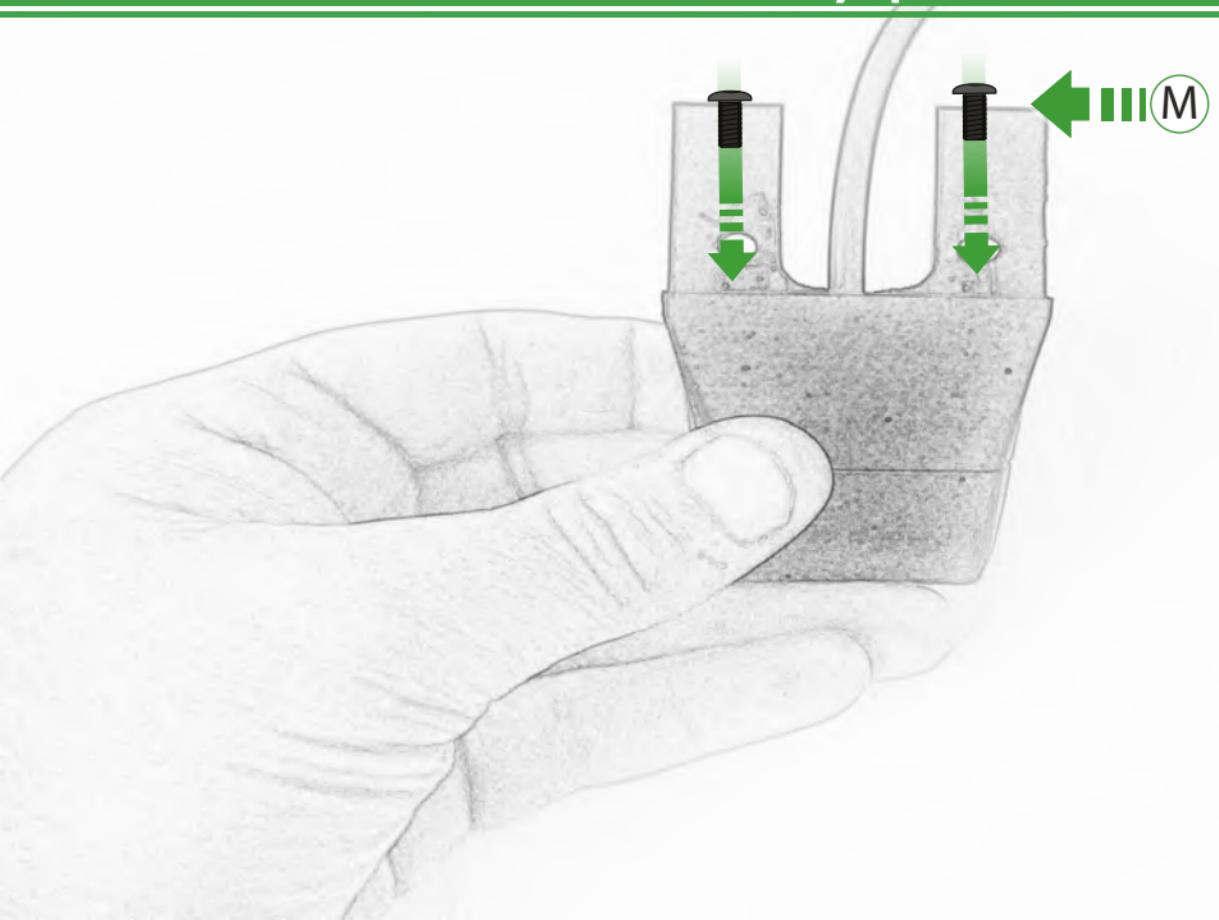


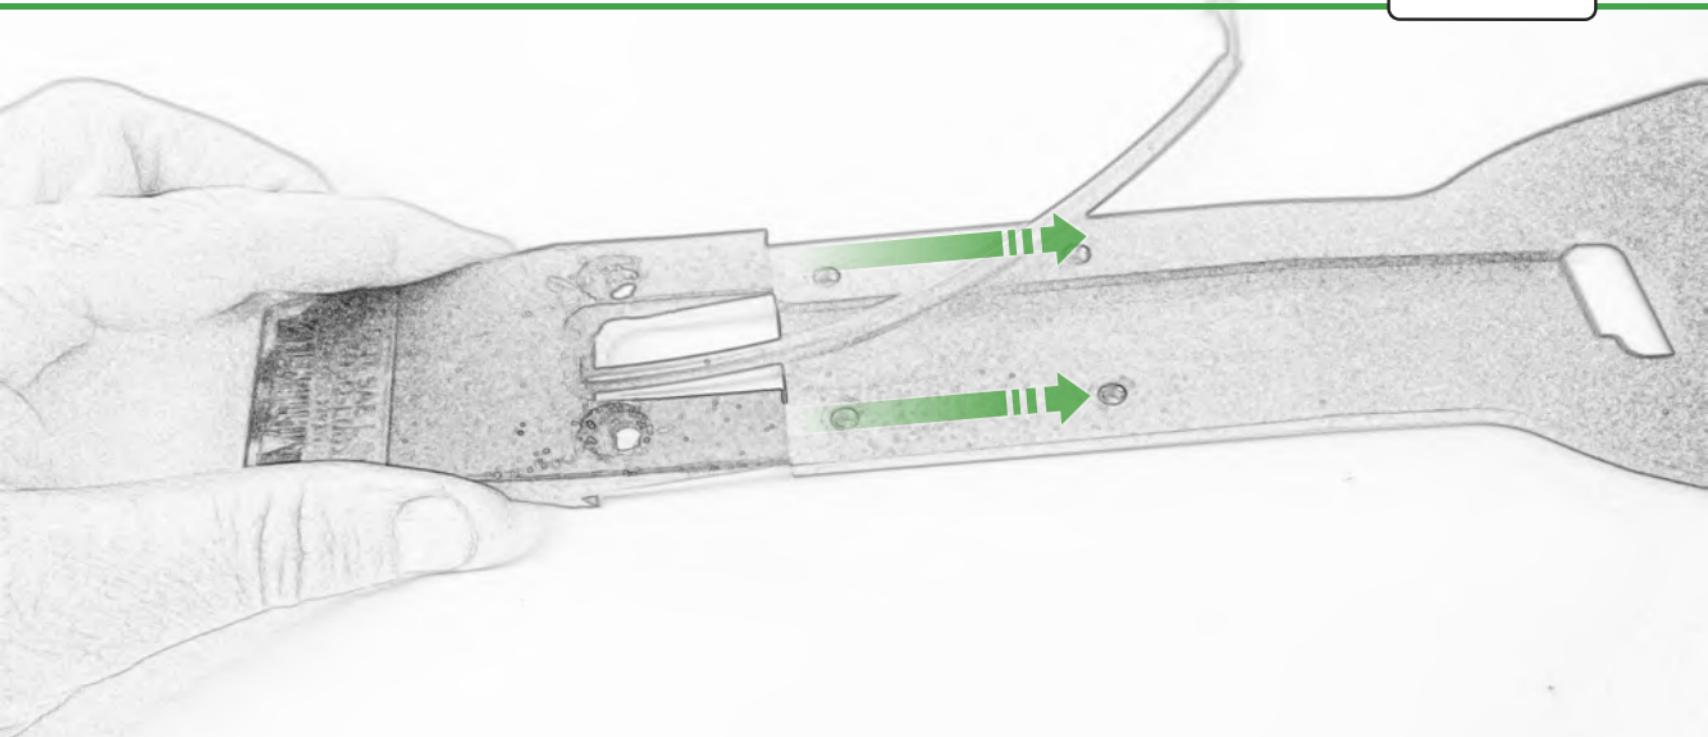


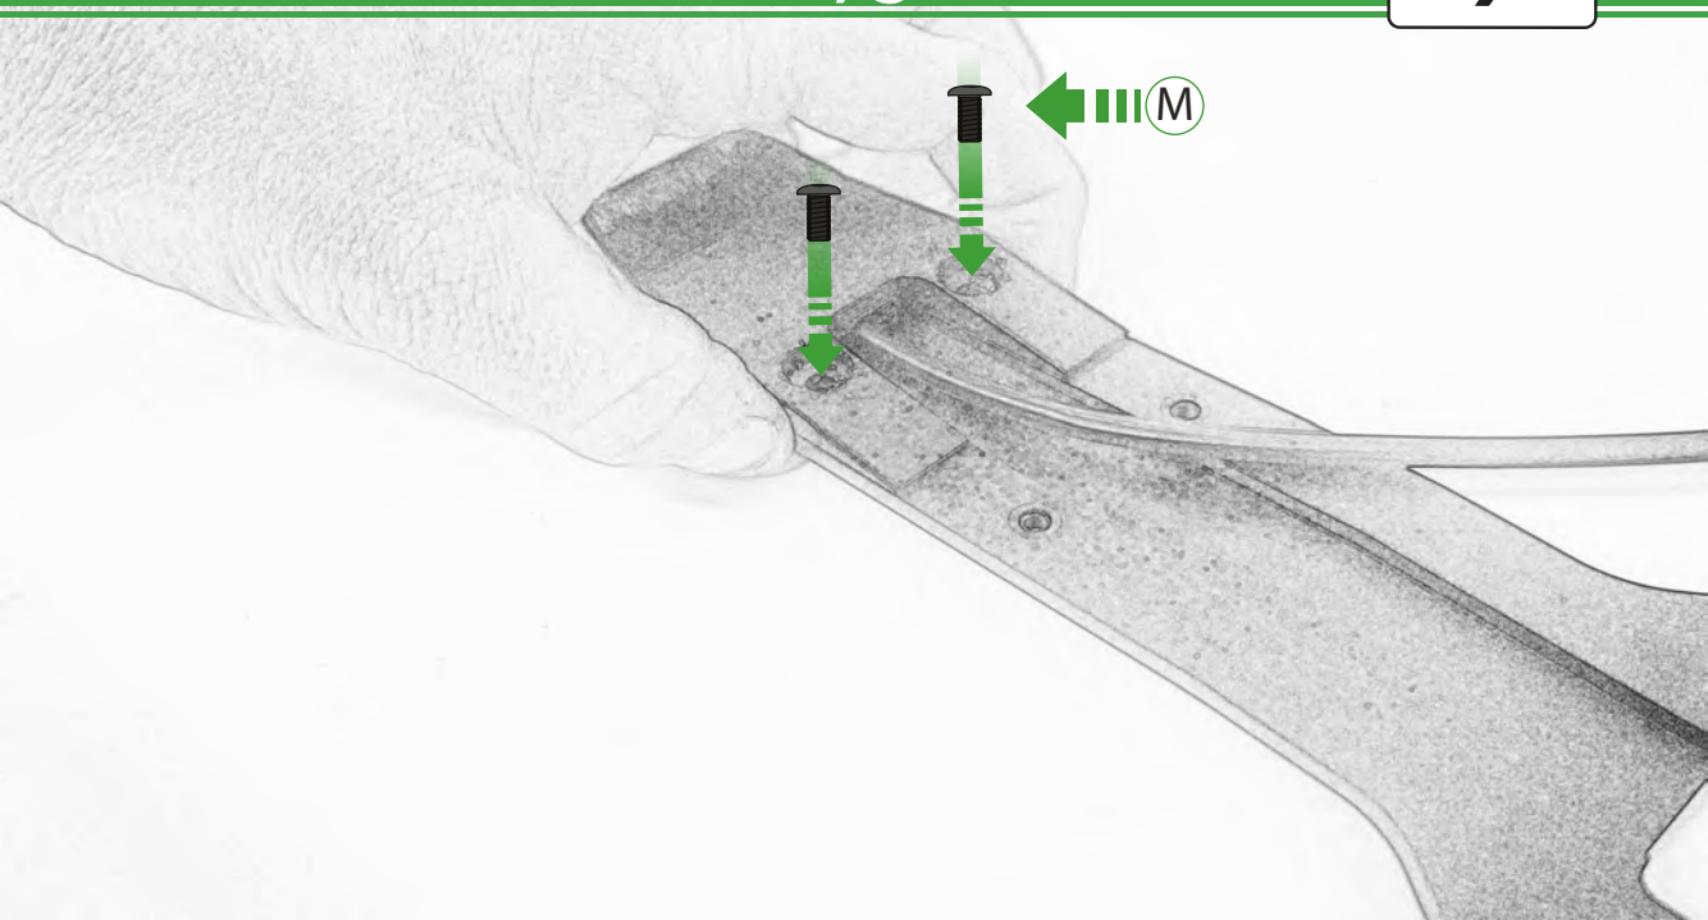

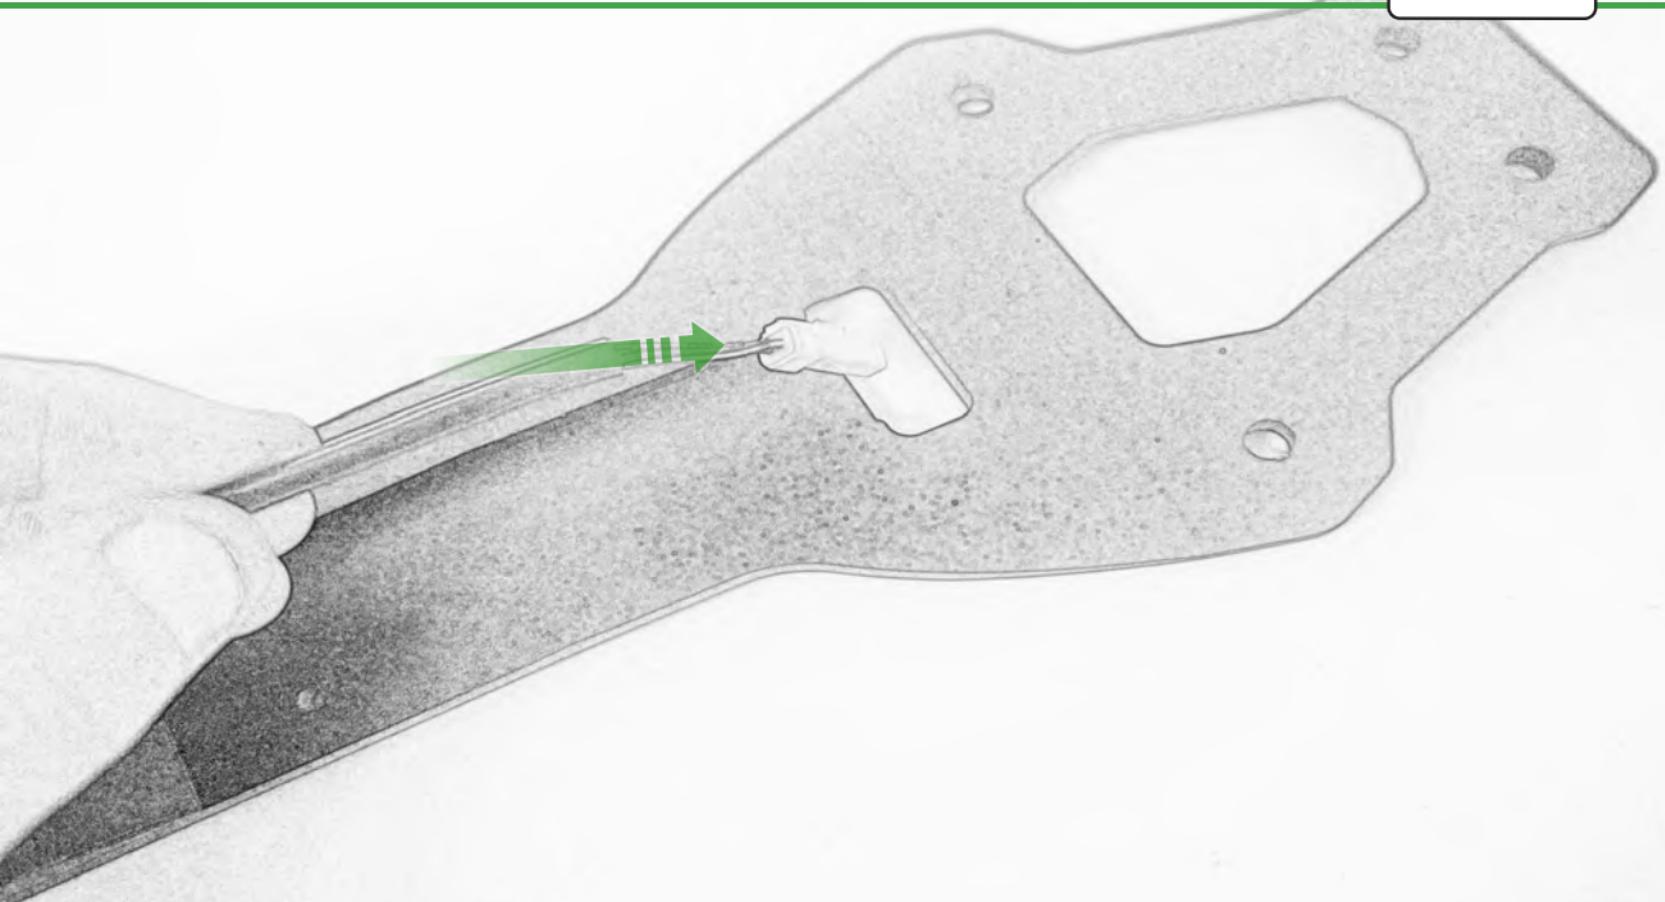

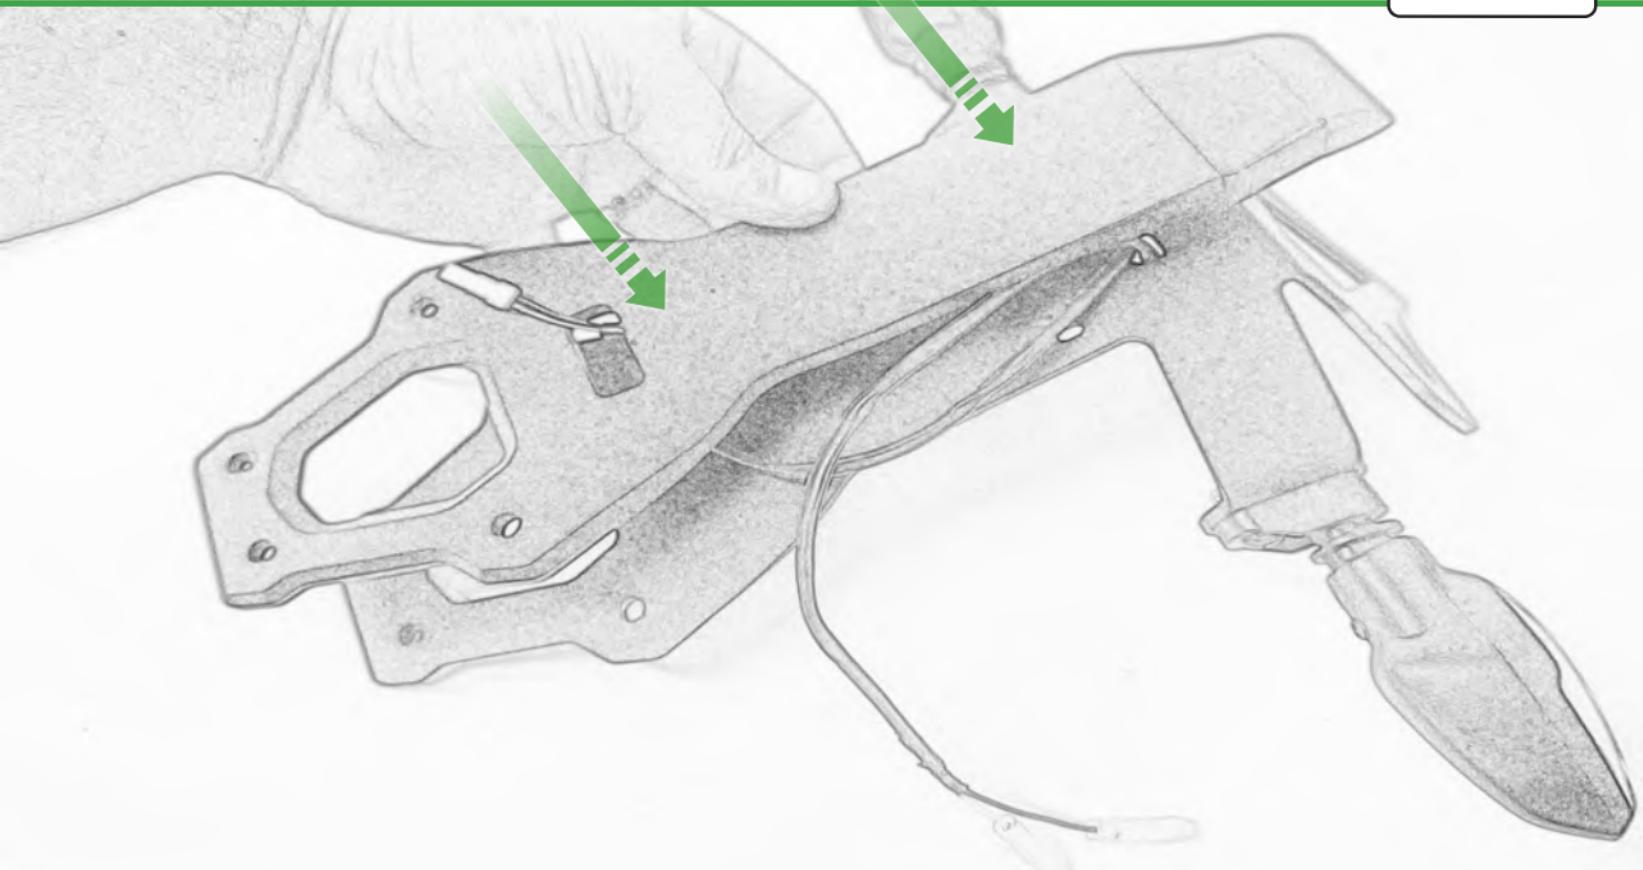


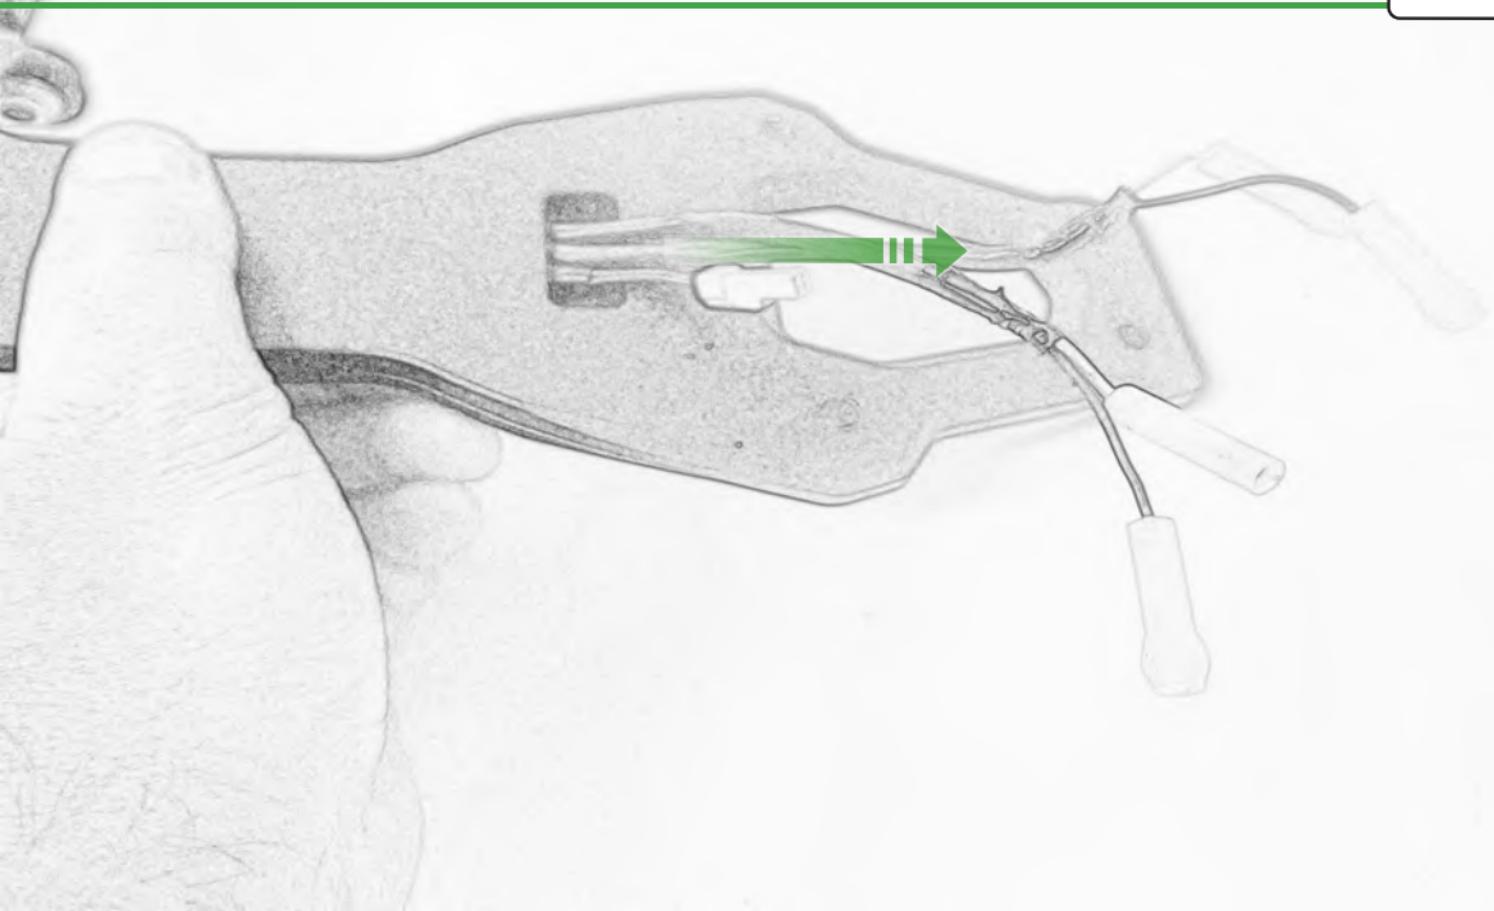


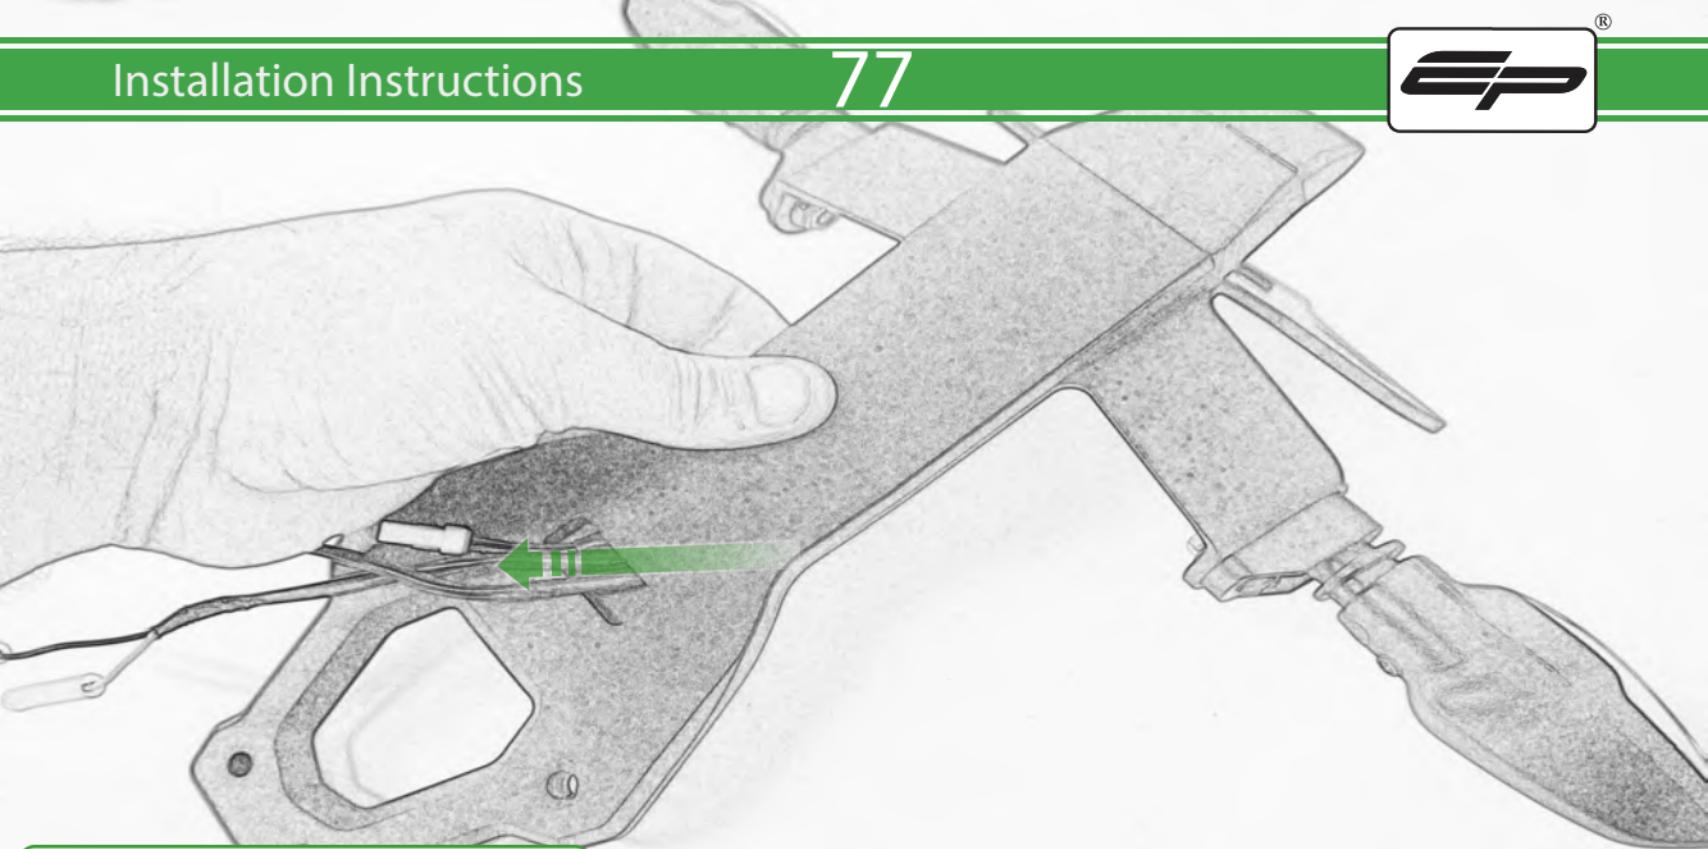


Caution


Run wires neatly down the channel
in both parts ensuring they
do not get trapped or squashed

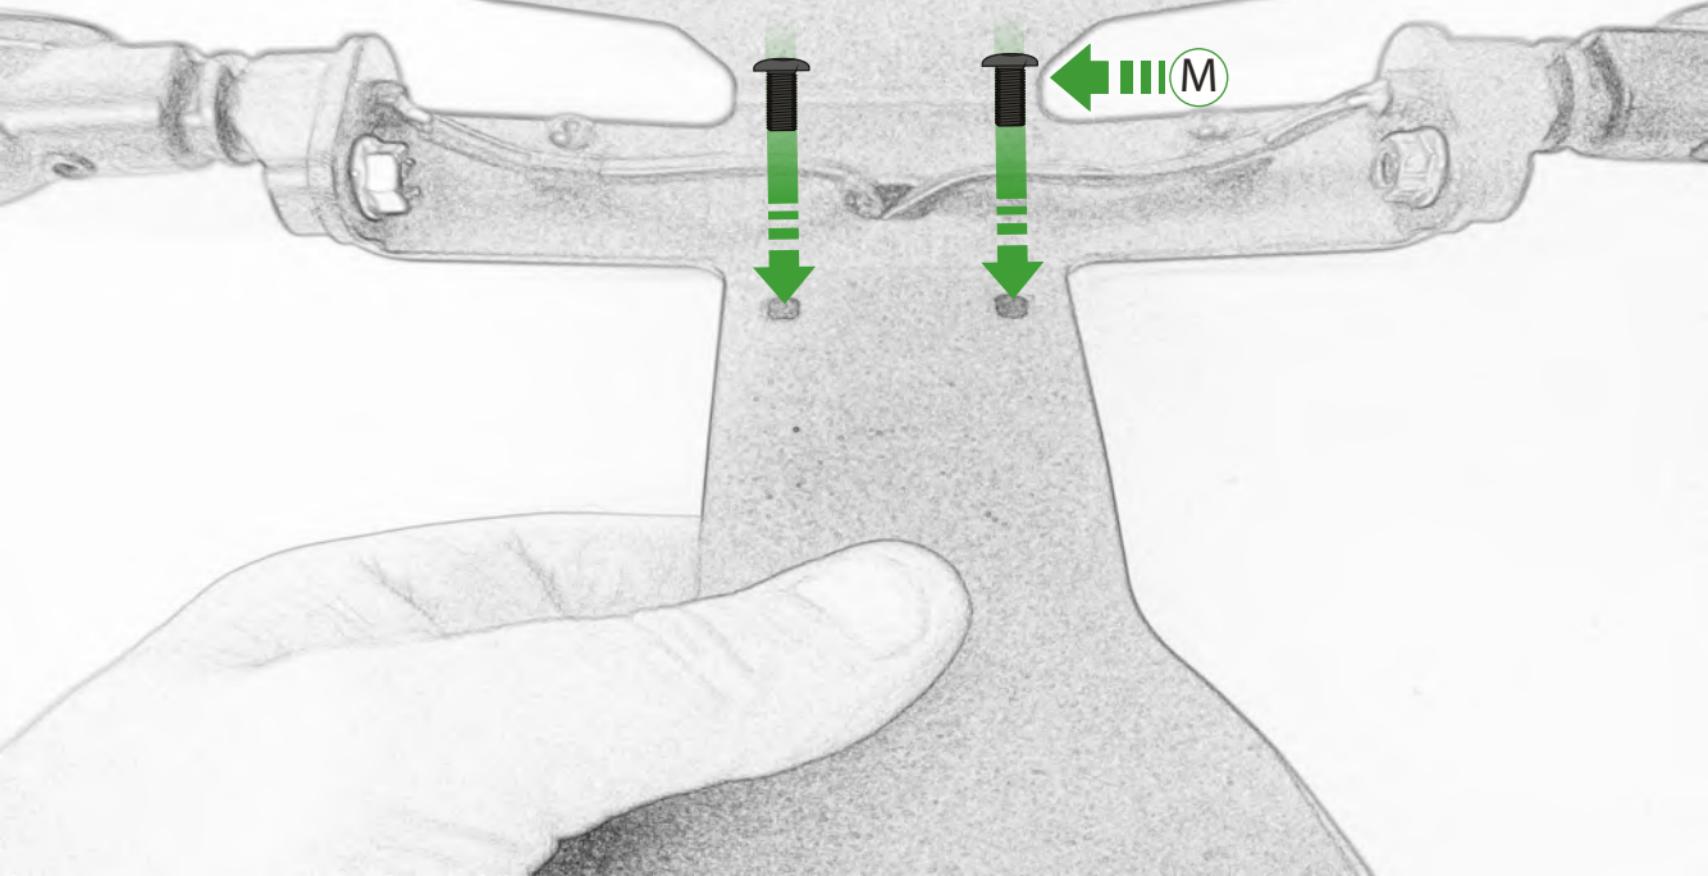

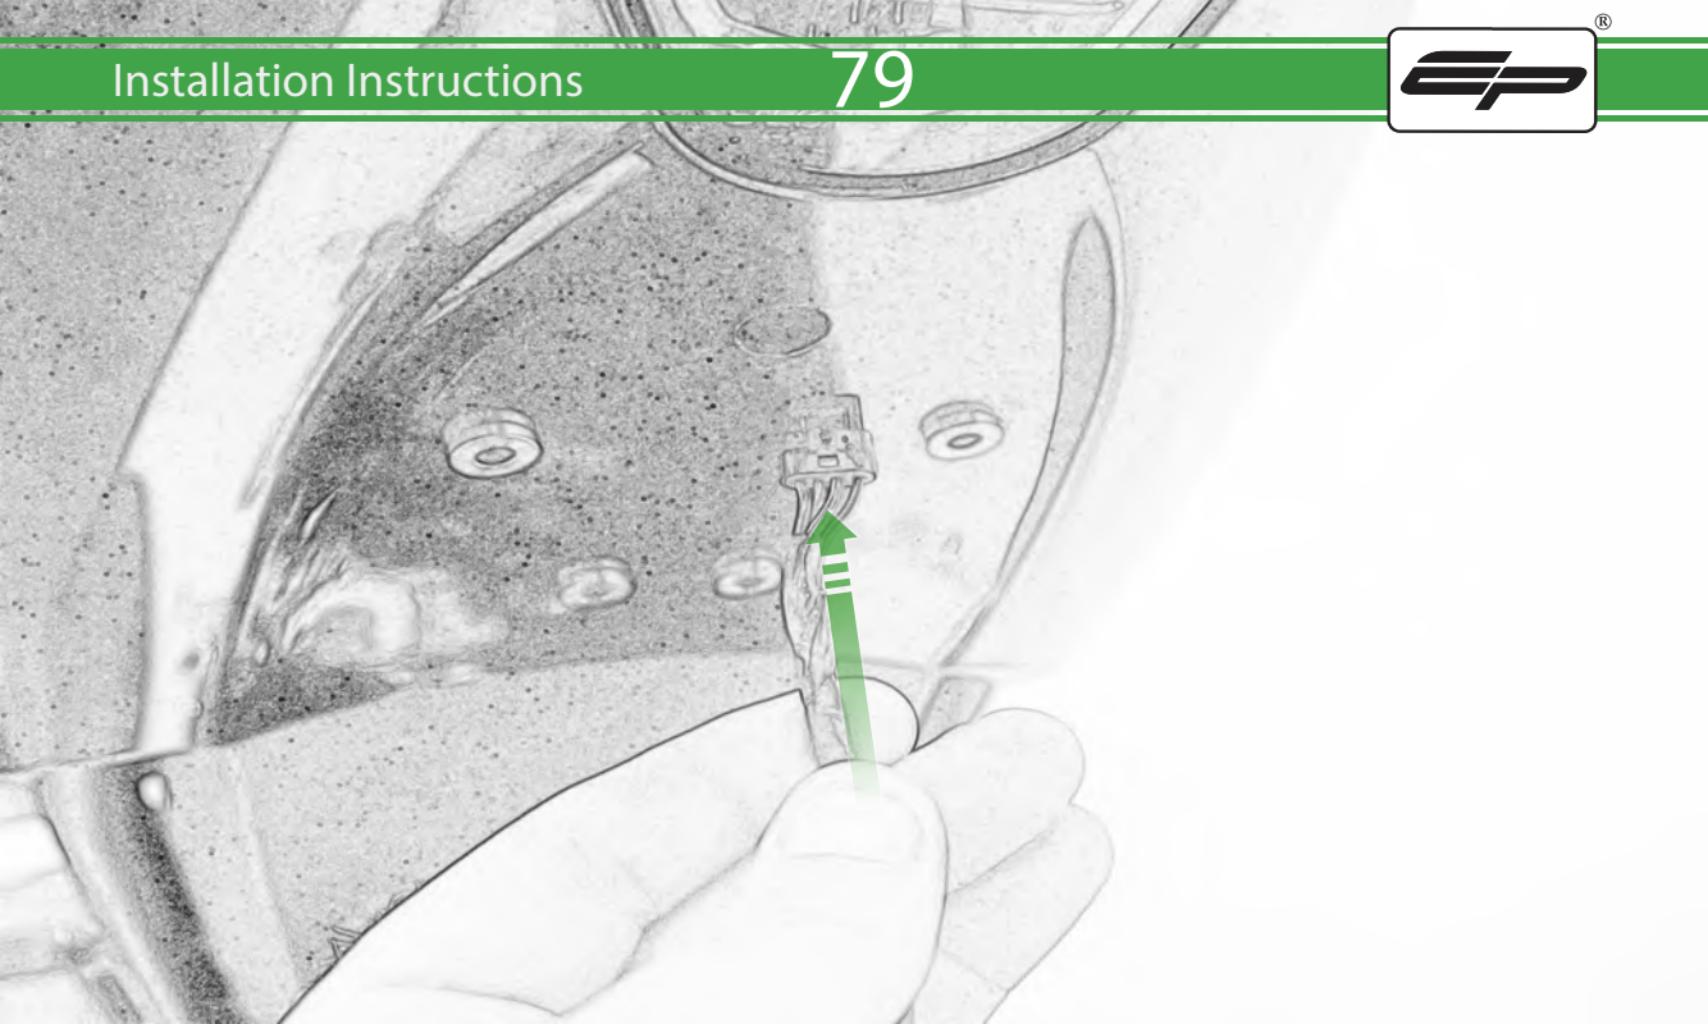




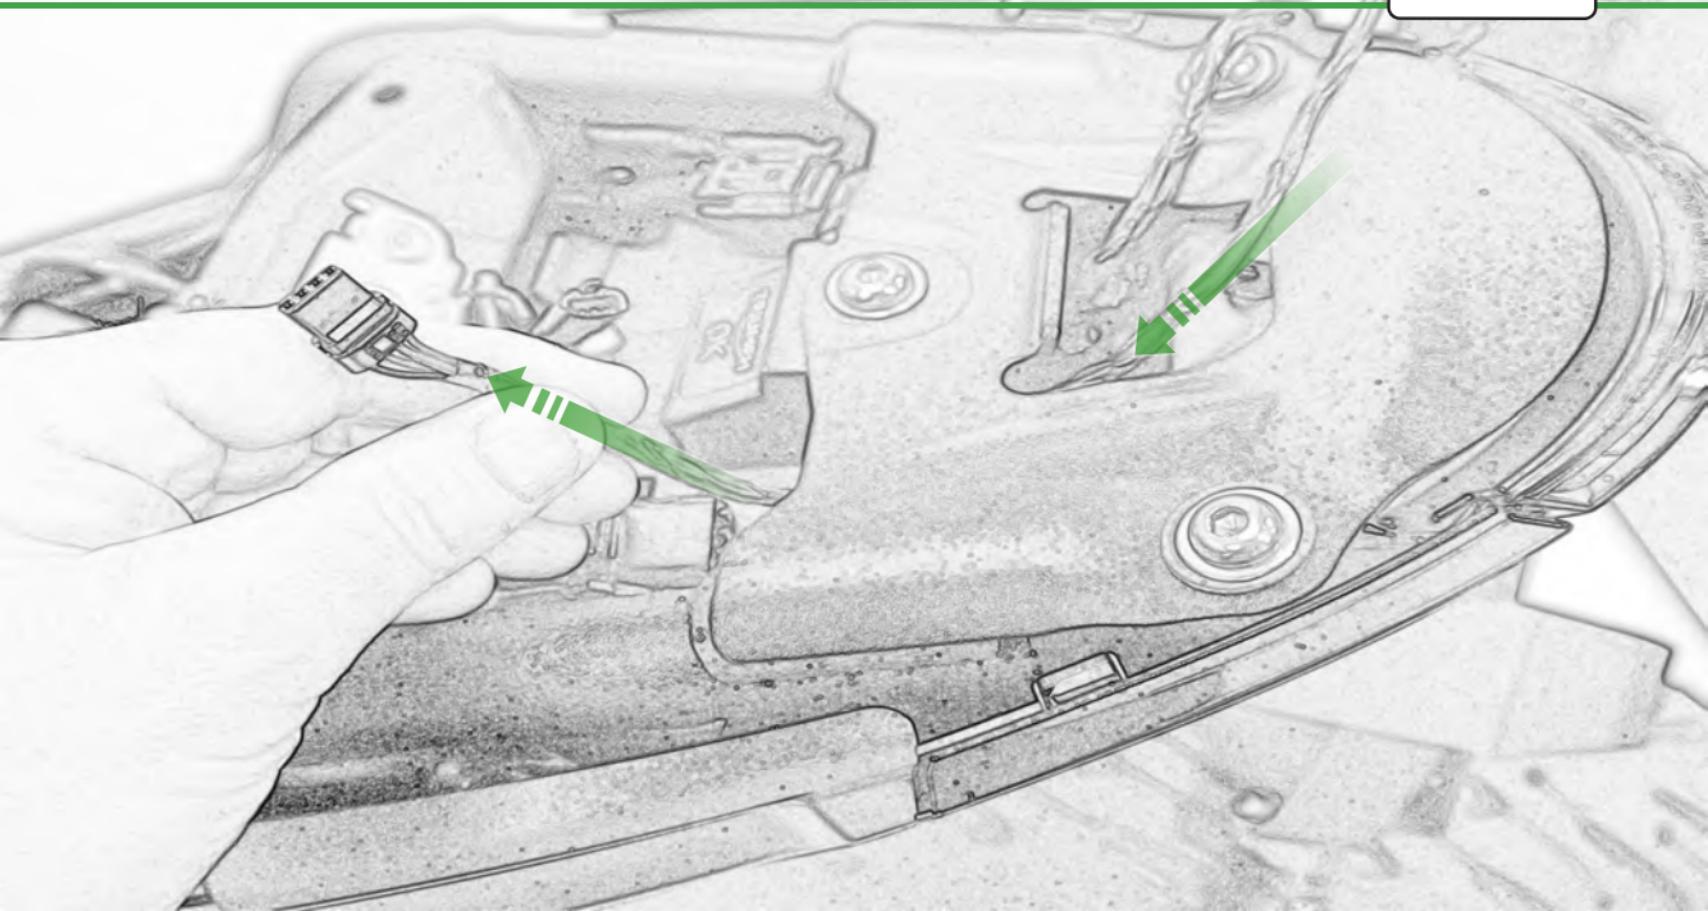



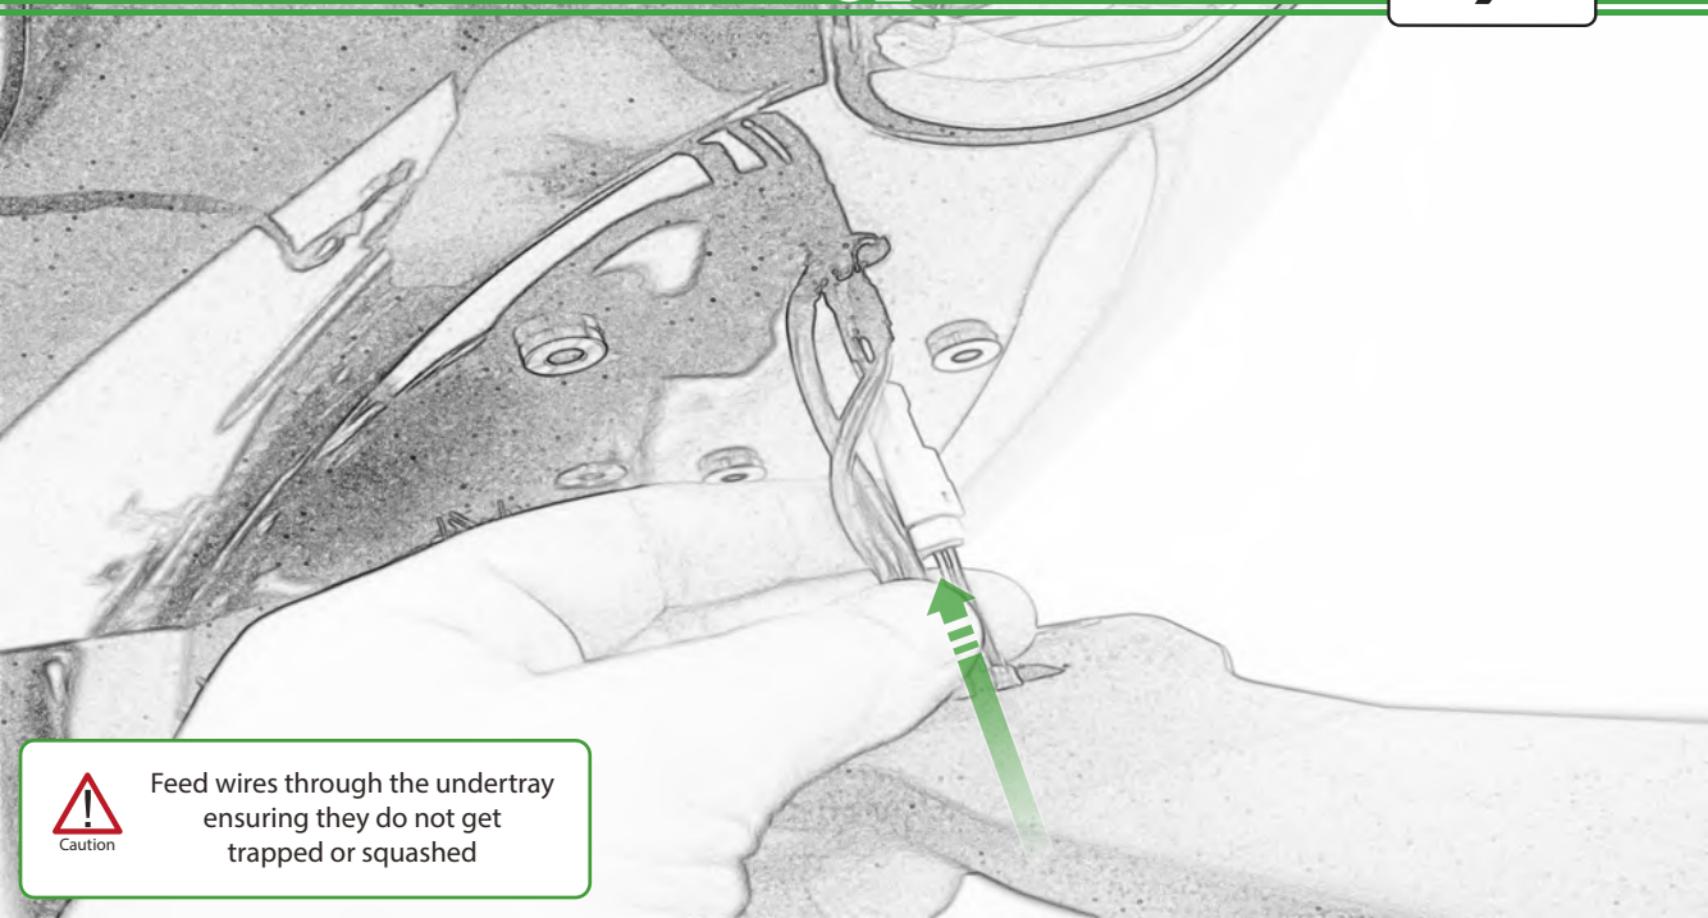


Caution
Feed wires through the undertray
ensuring they do not get
trapped or squashed

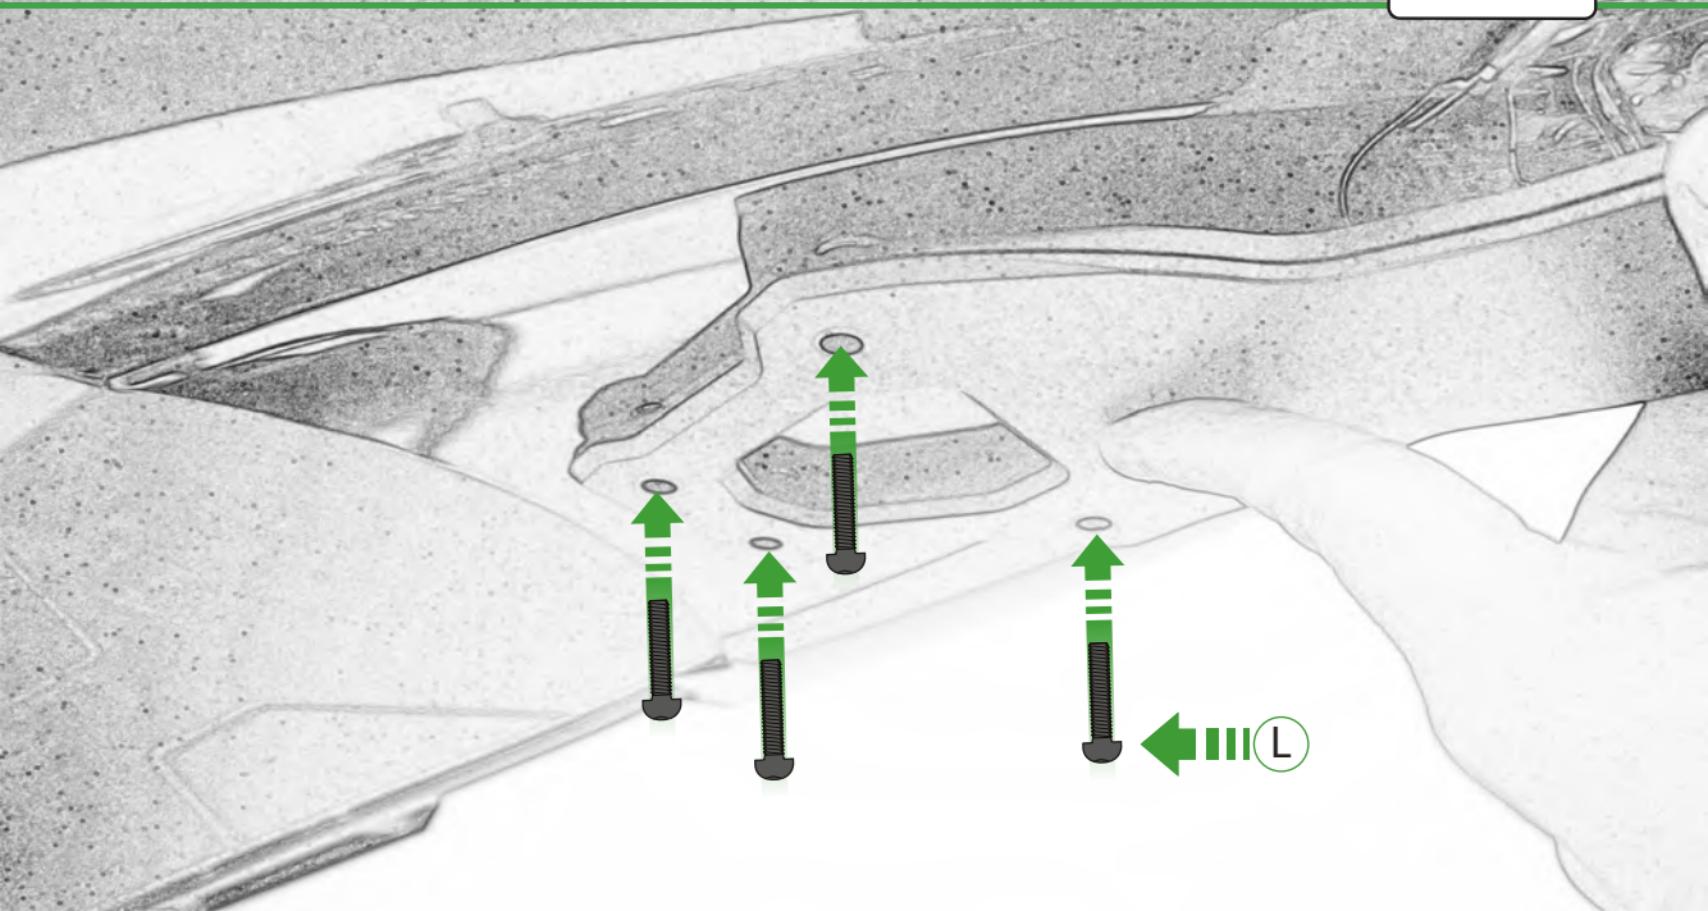




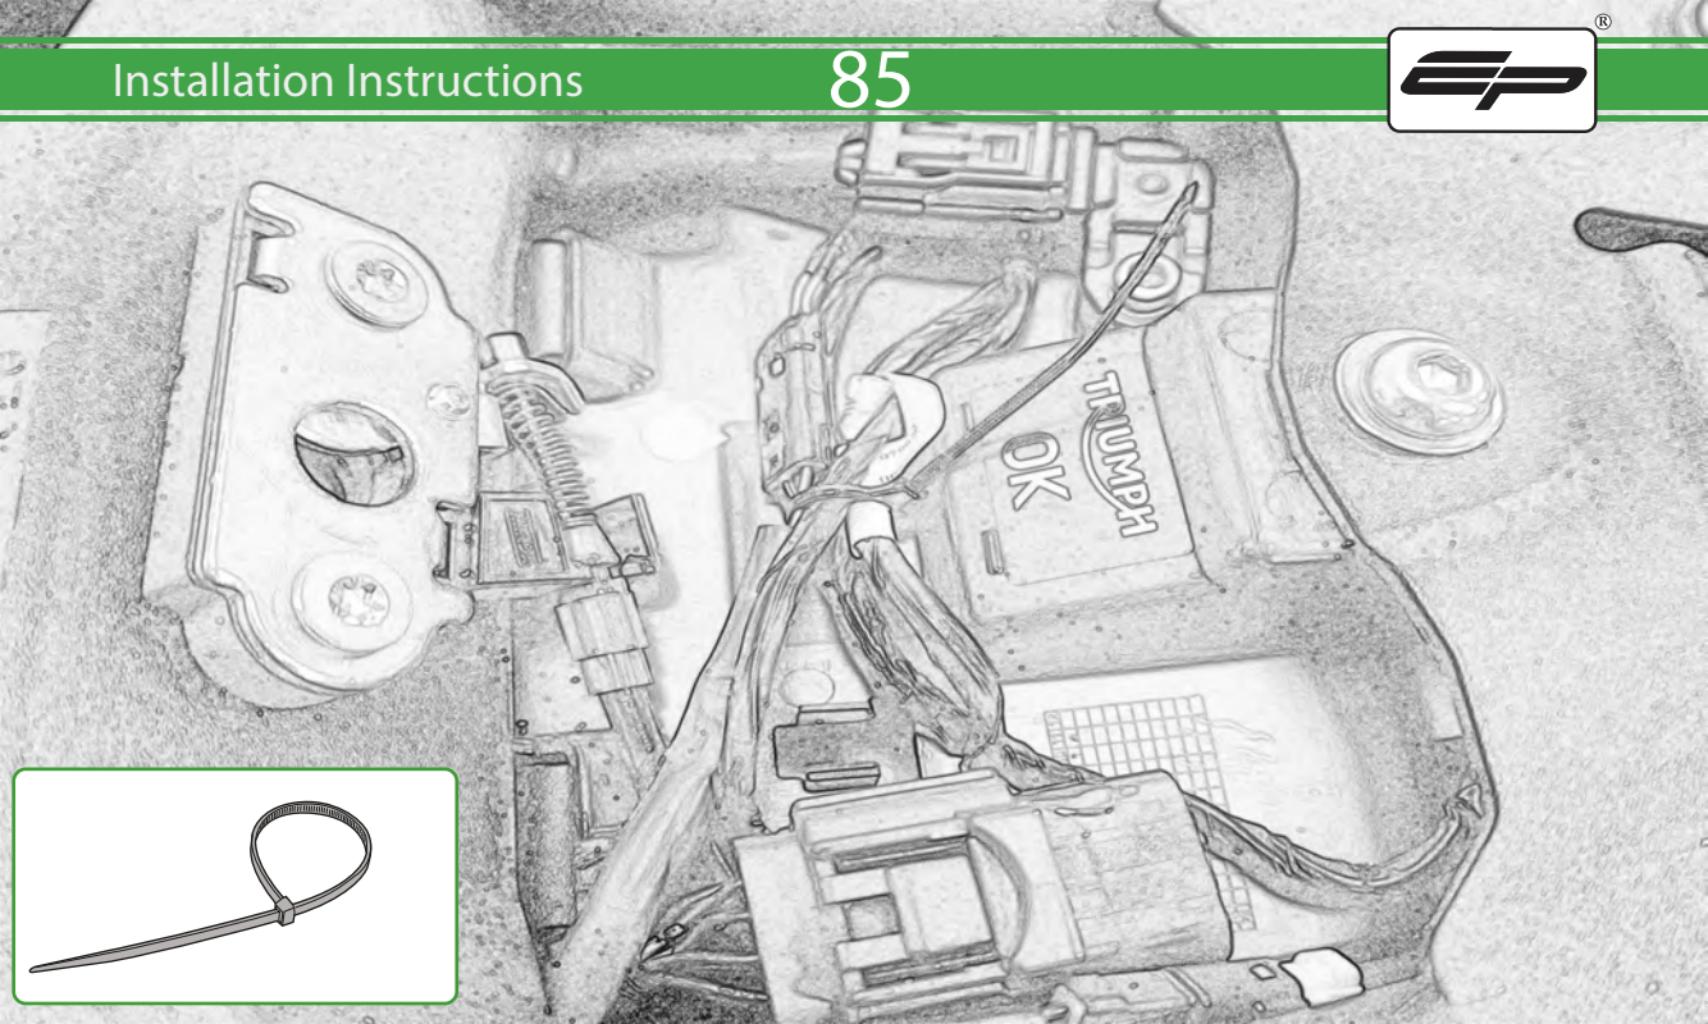


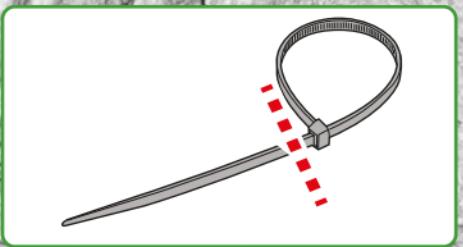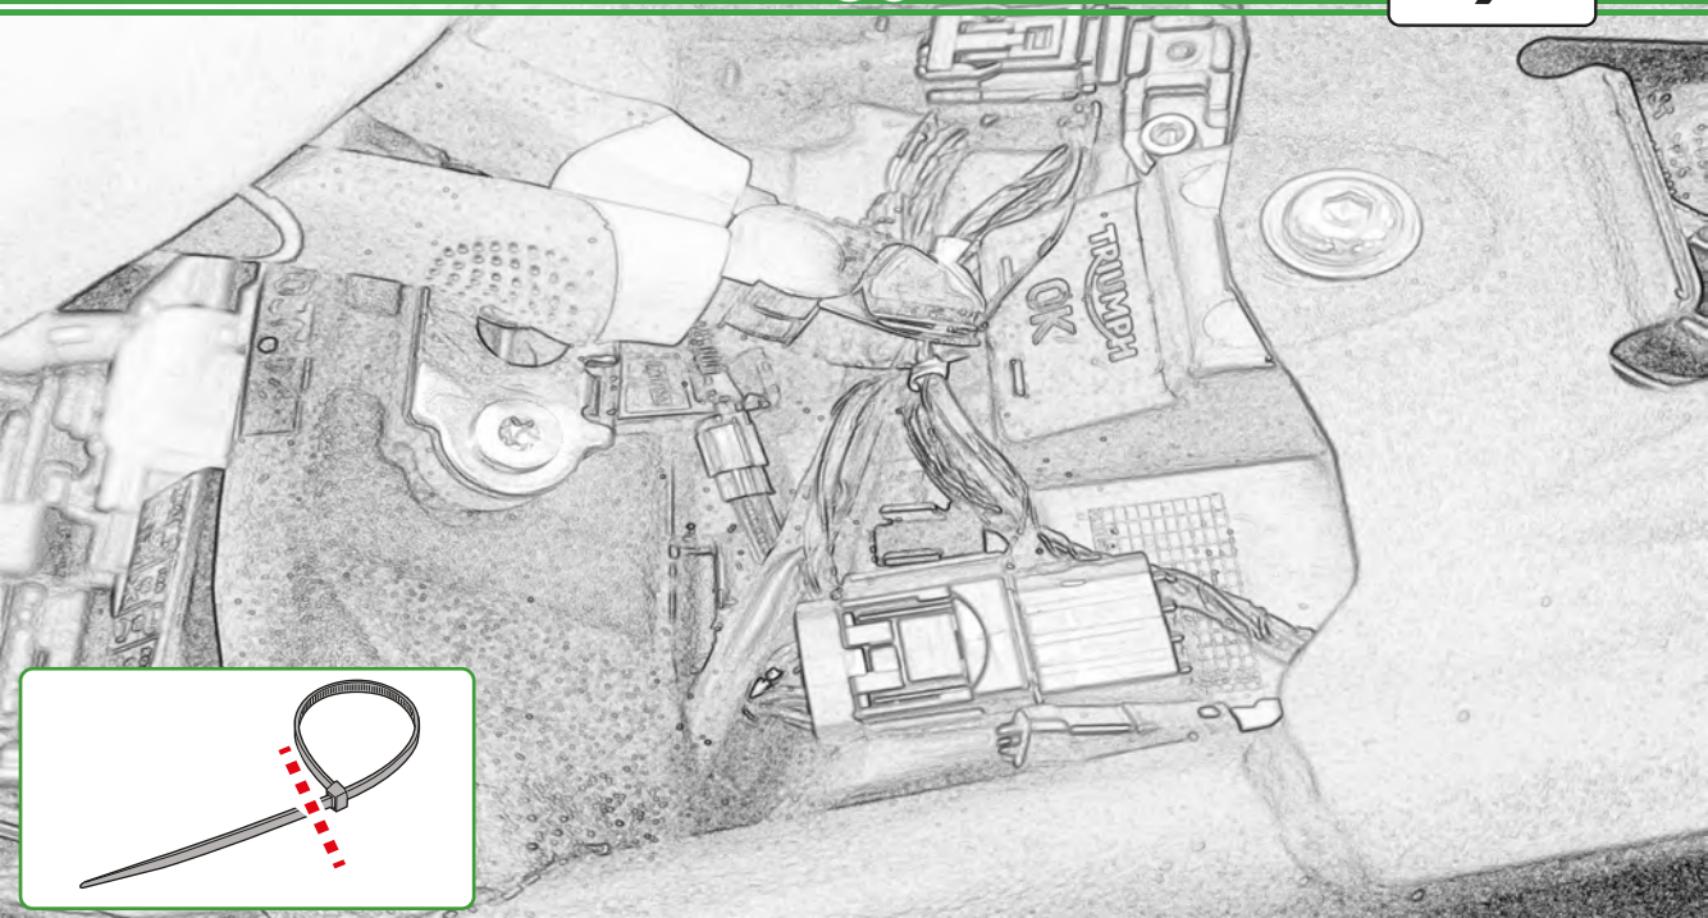







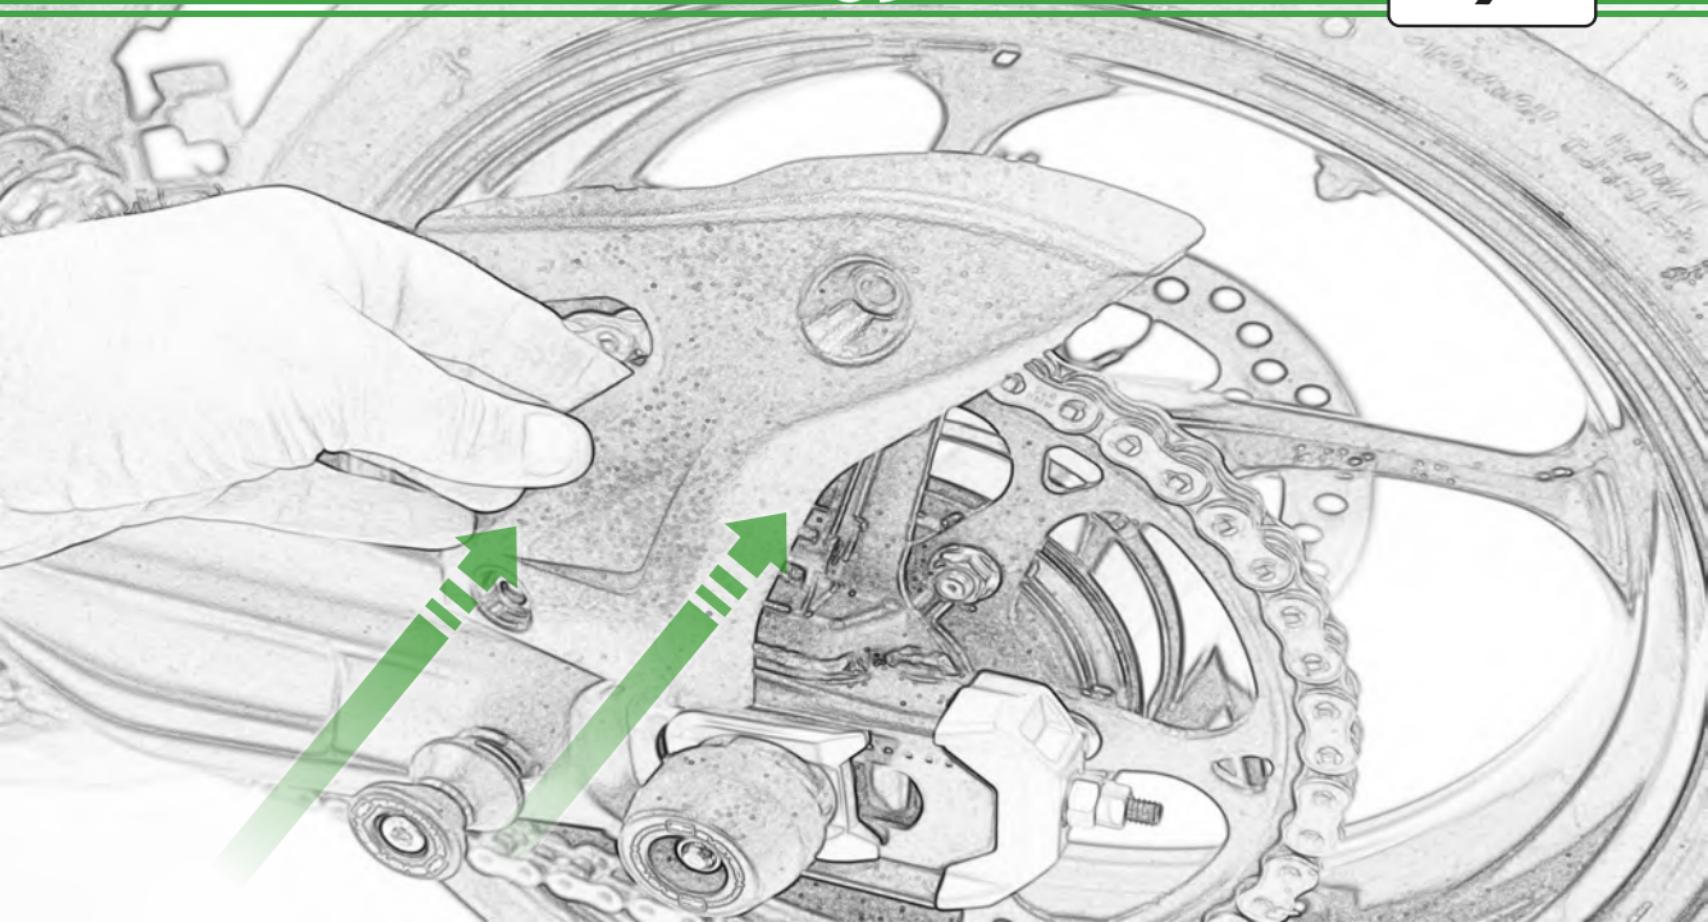


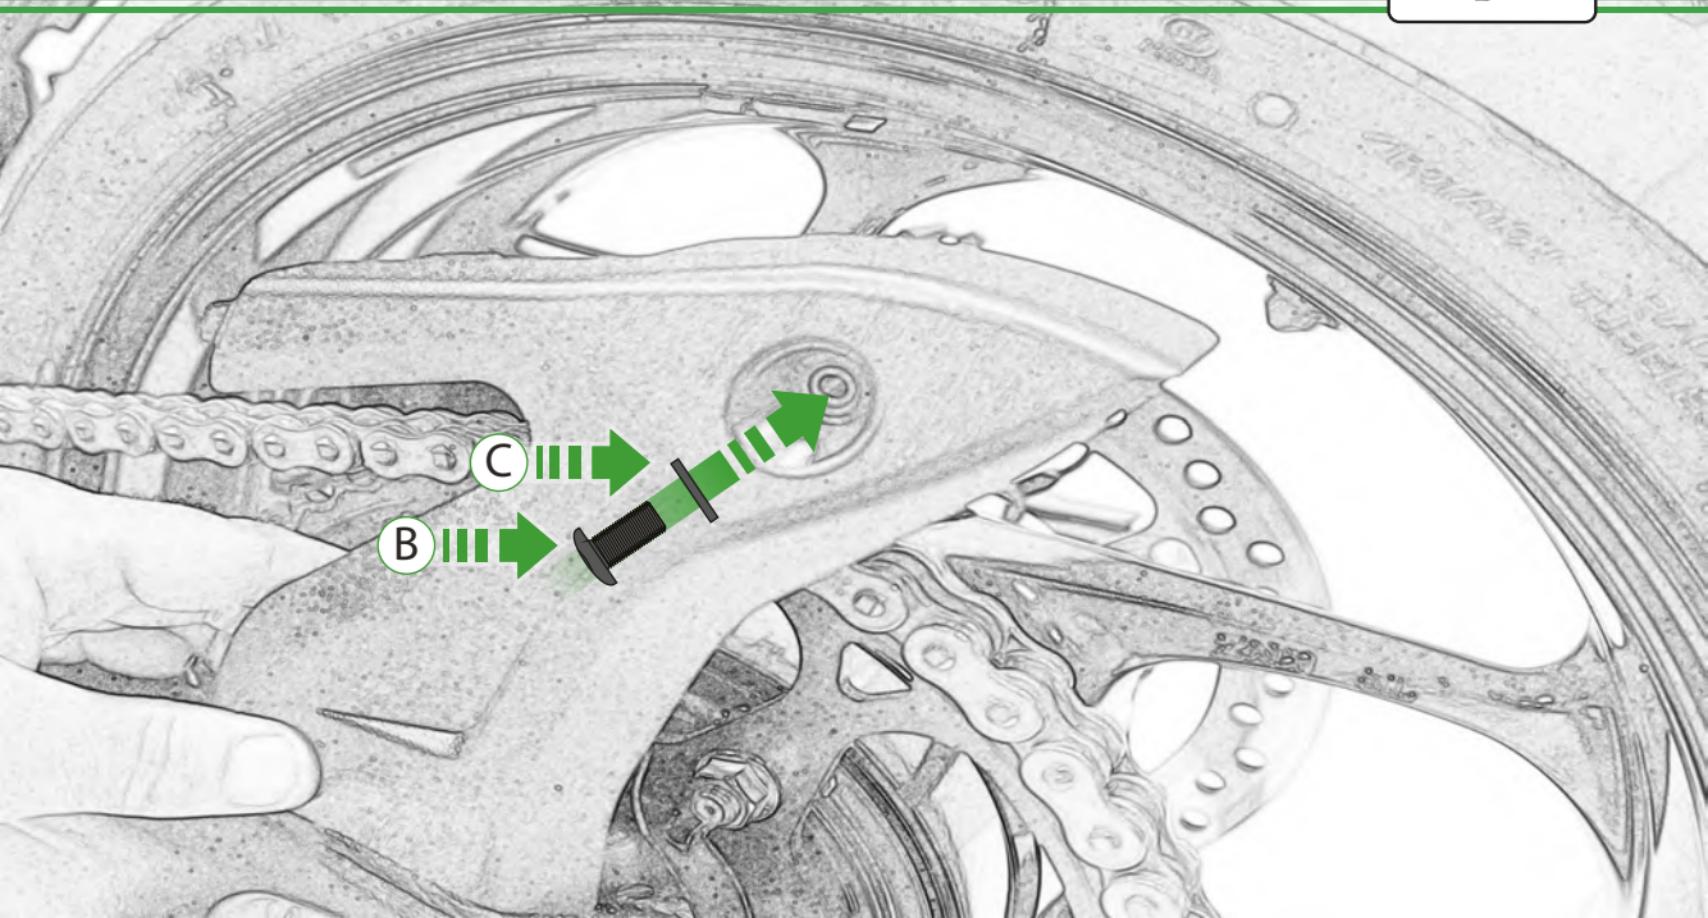


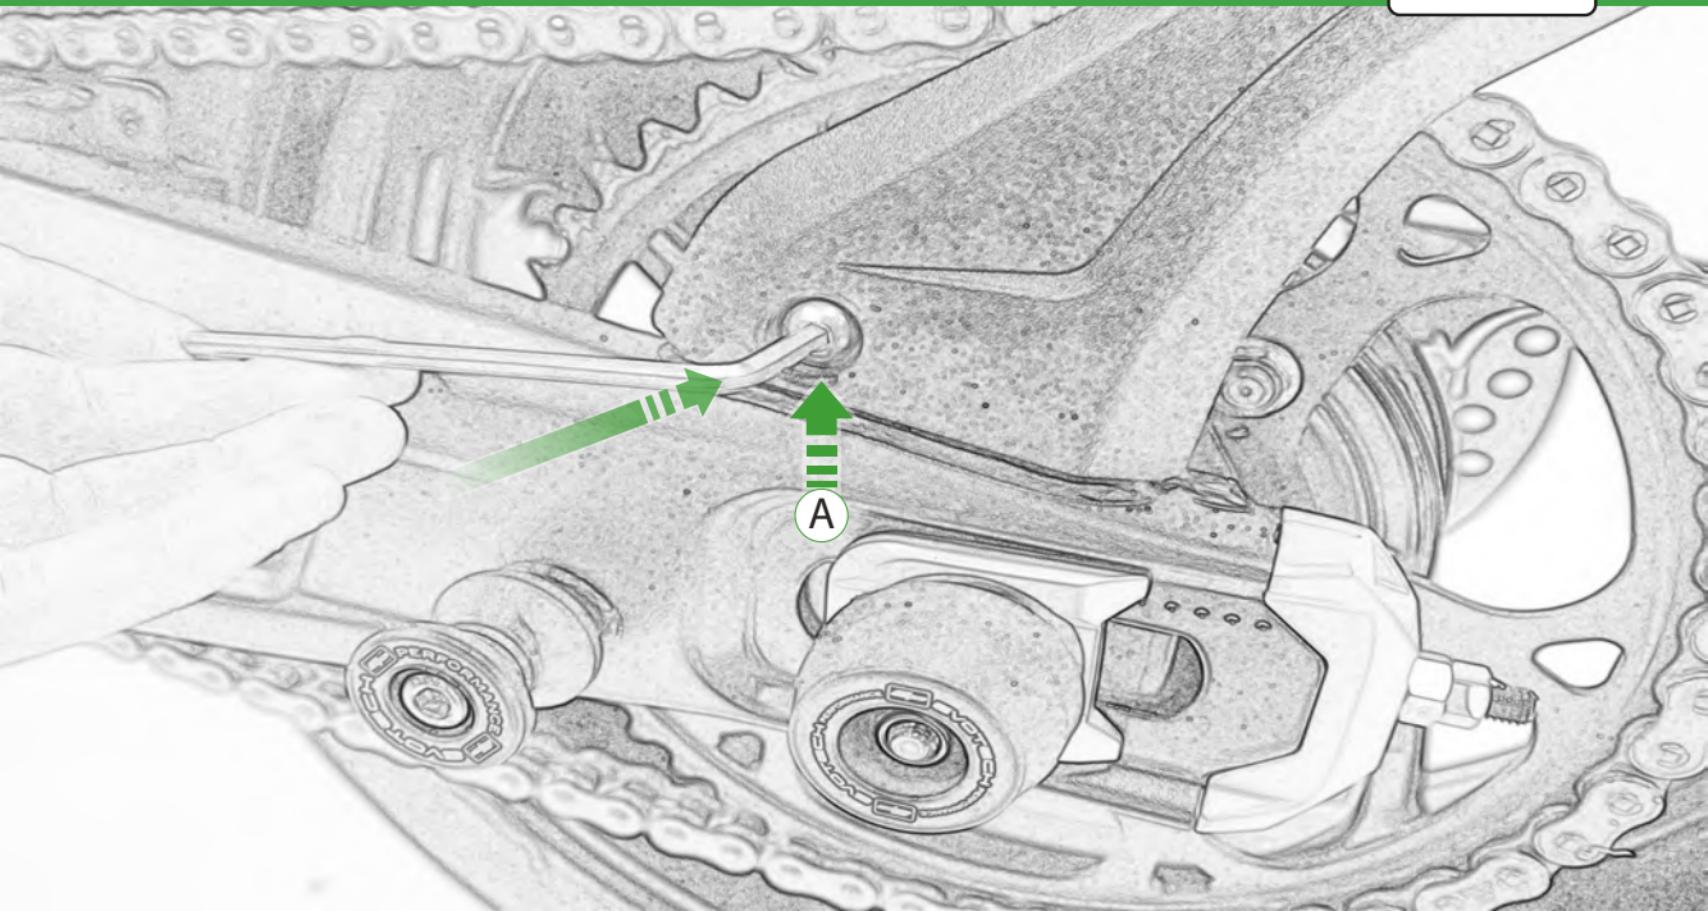


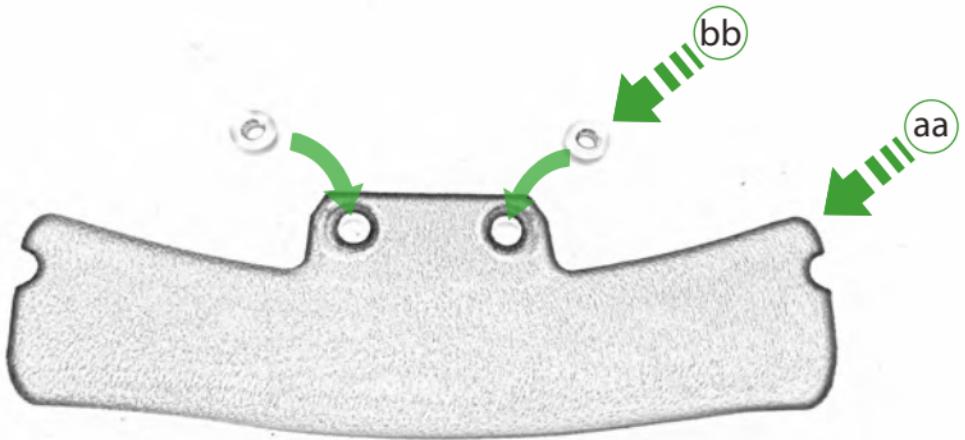



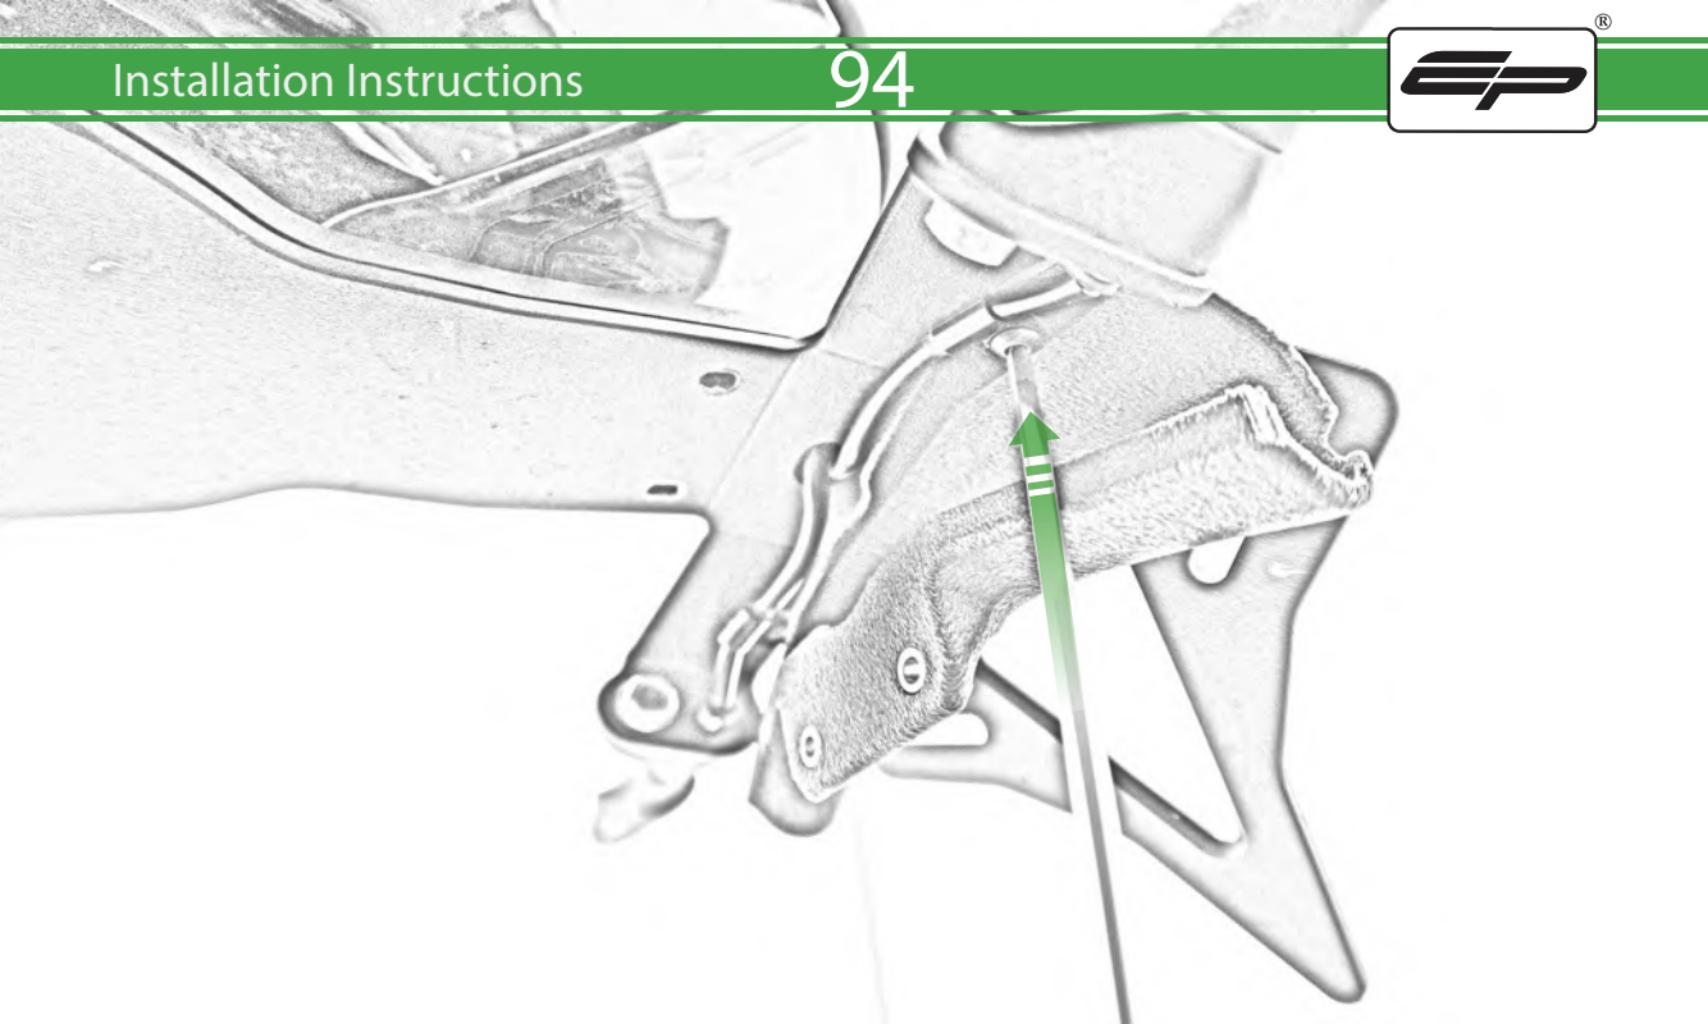

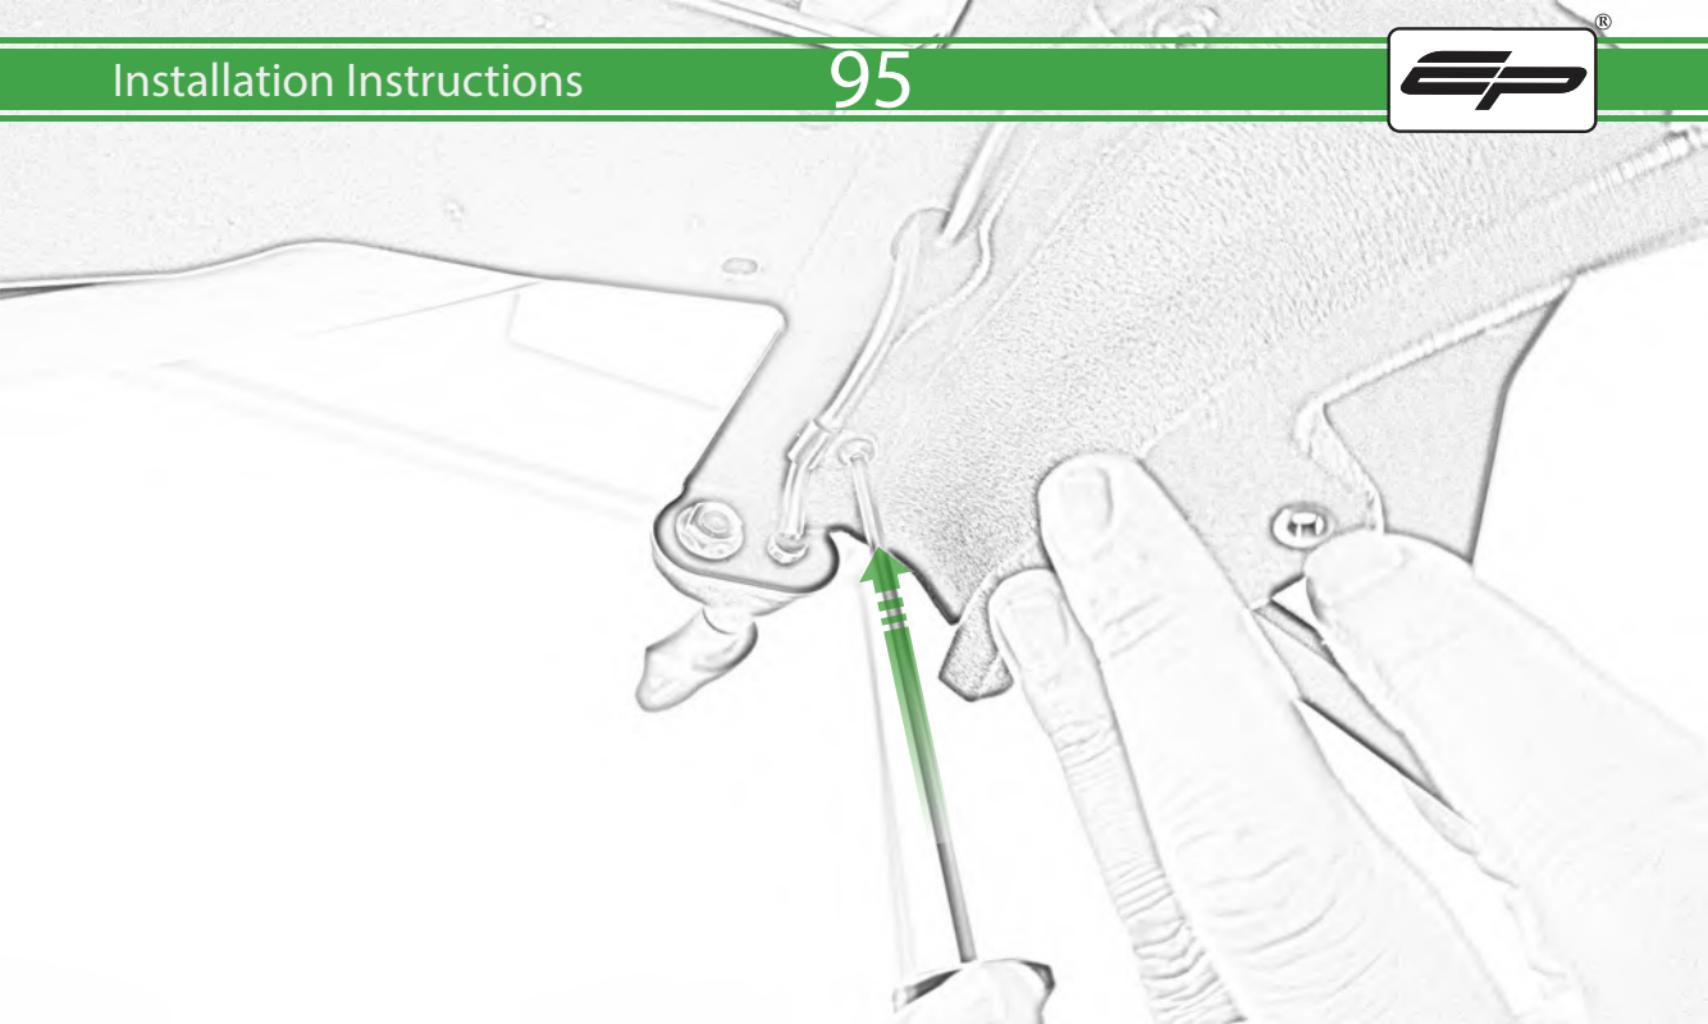

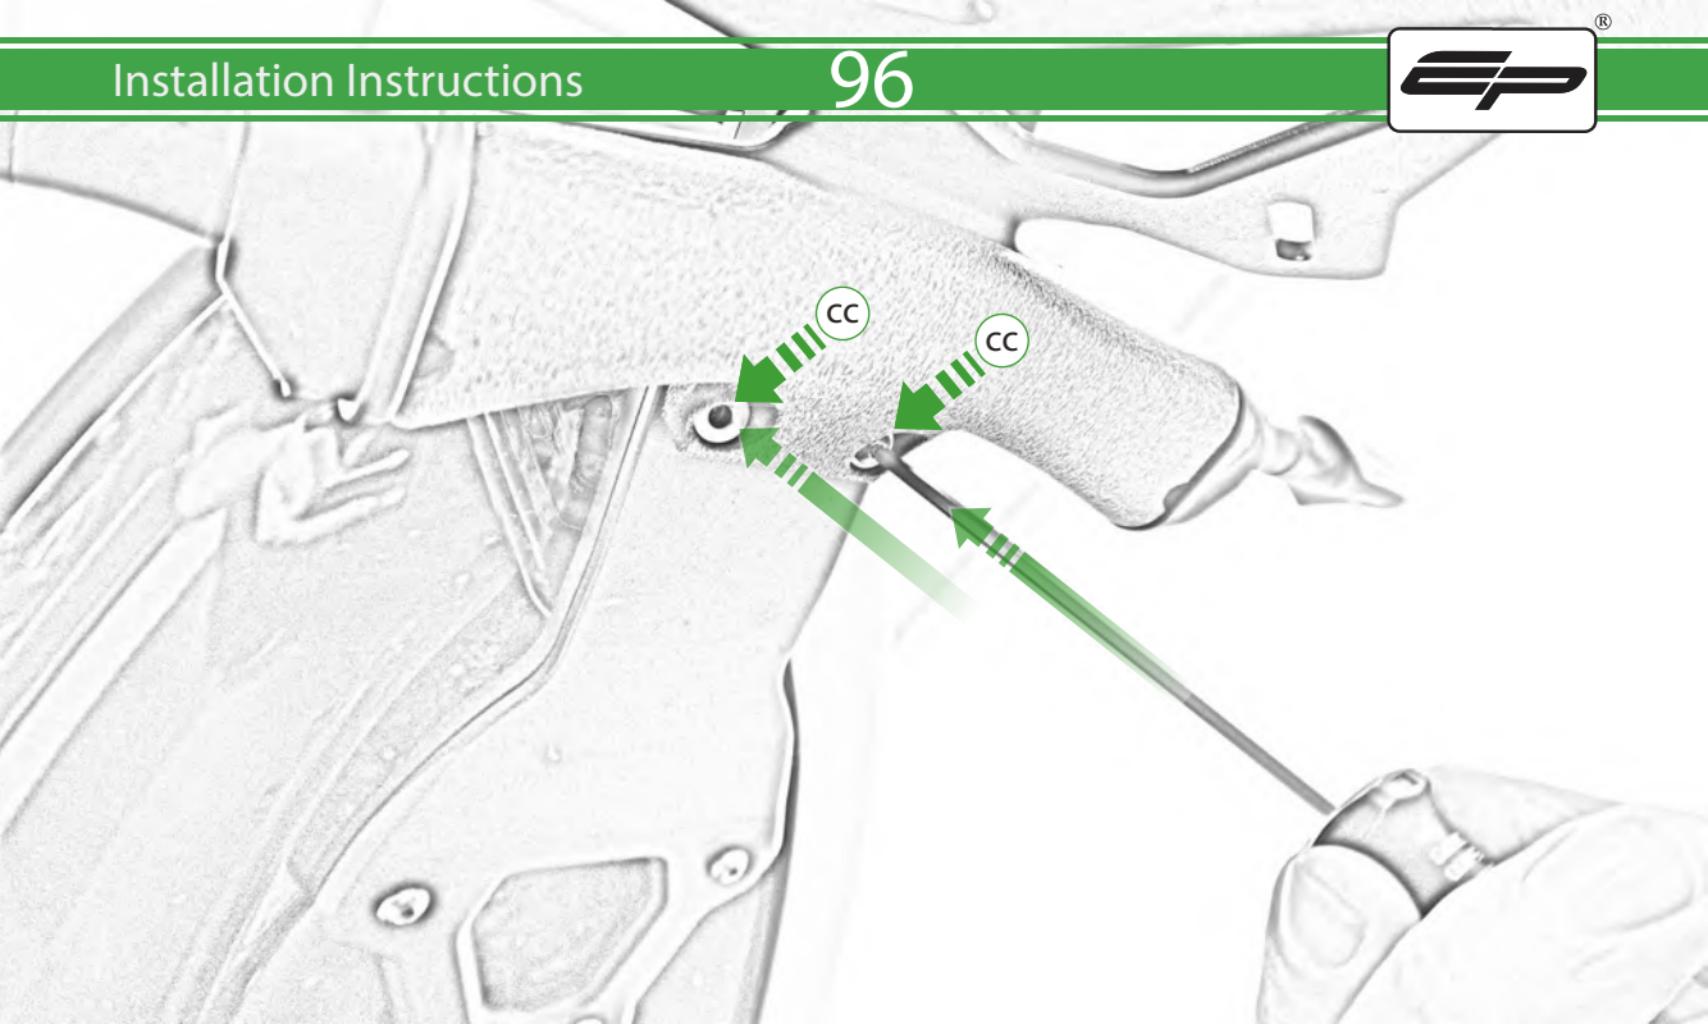




 Reverse Stages
31 - 28



 Reverse Stages
43 - 41

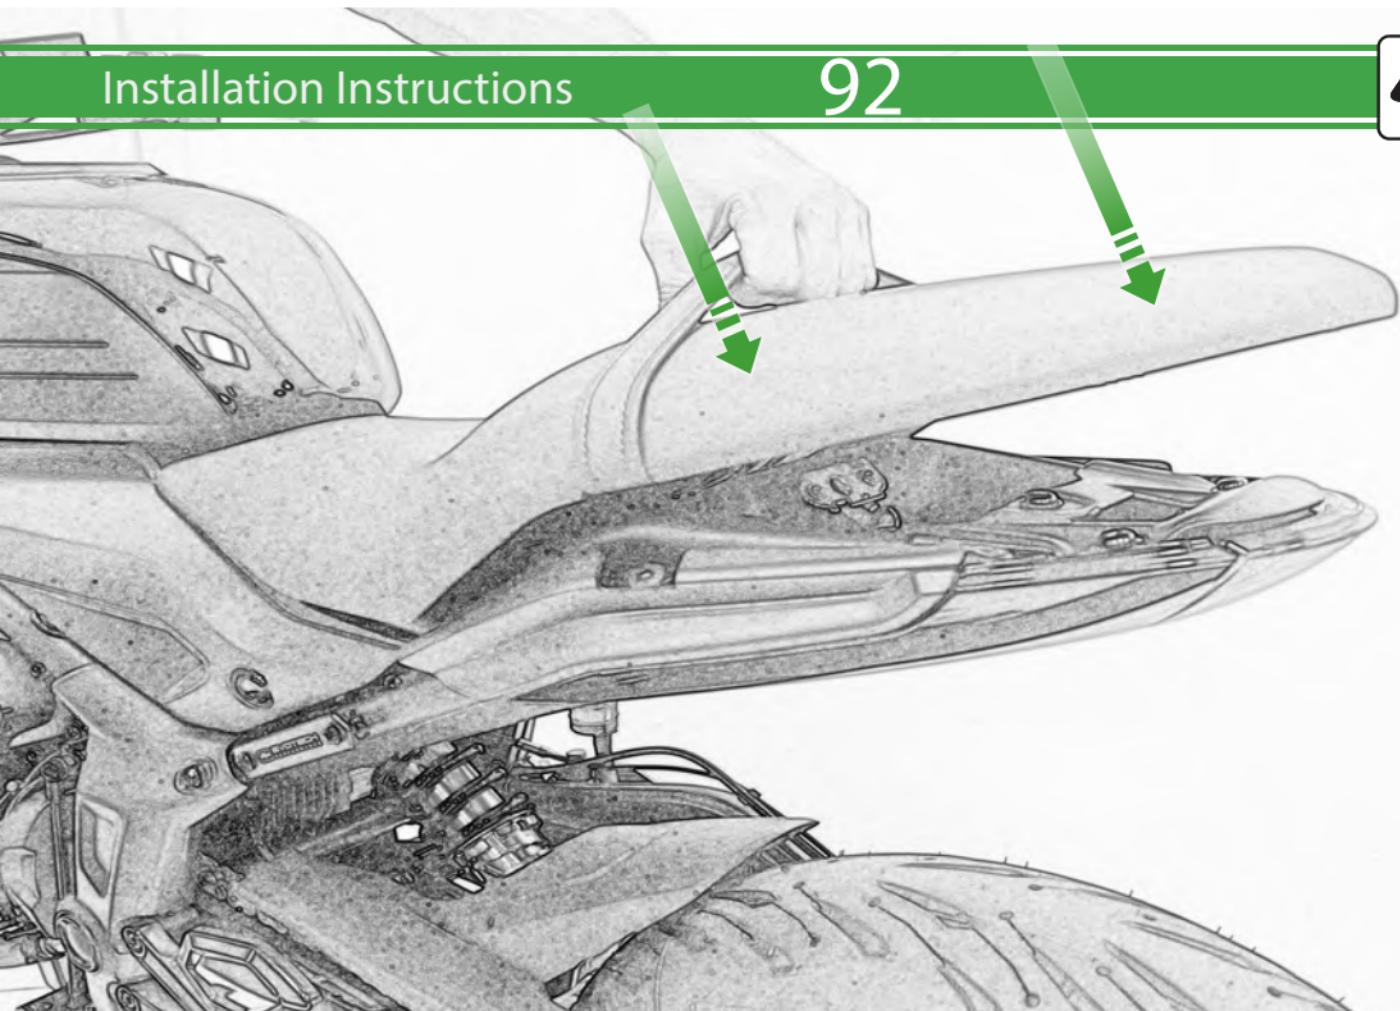




⚠ ESSENTIAL CHECKS ⚠

After installation of your tail tidy ensure that the licence plate does not contact the rear tyre when suspension is fully compressed.

Ensure all electrics including indicators, tail light, brake light and licence plate light lights are working correctly before riding the motorcycle.


It is recommended that periodic inspections are made to ensure that all fixings are fully tightened.

Installation Instructions

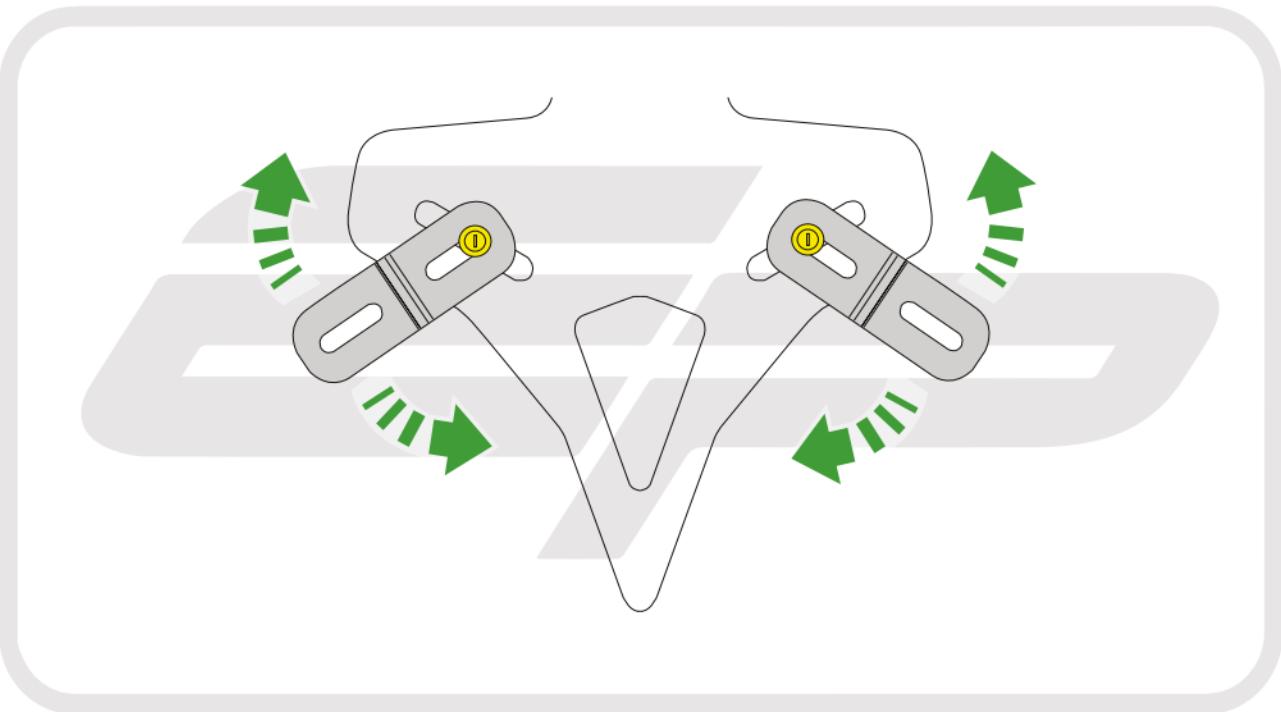

EVOTECH[®]
PERFORMANCE

Installation Instructions

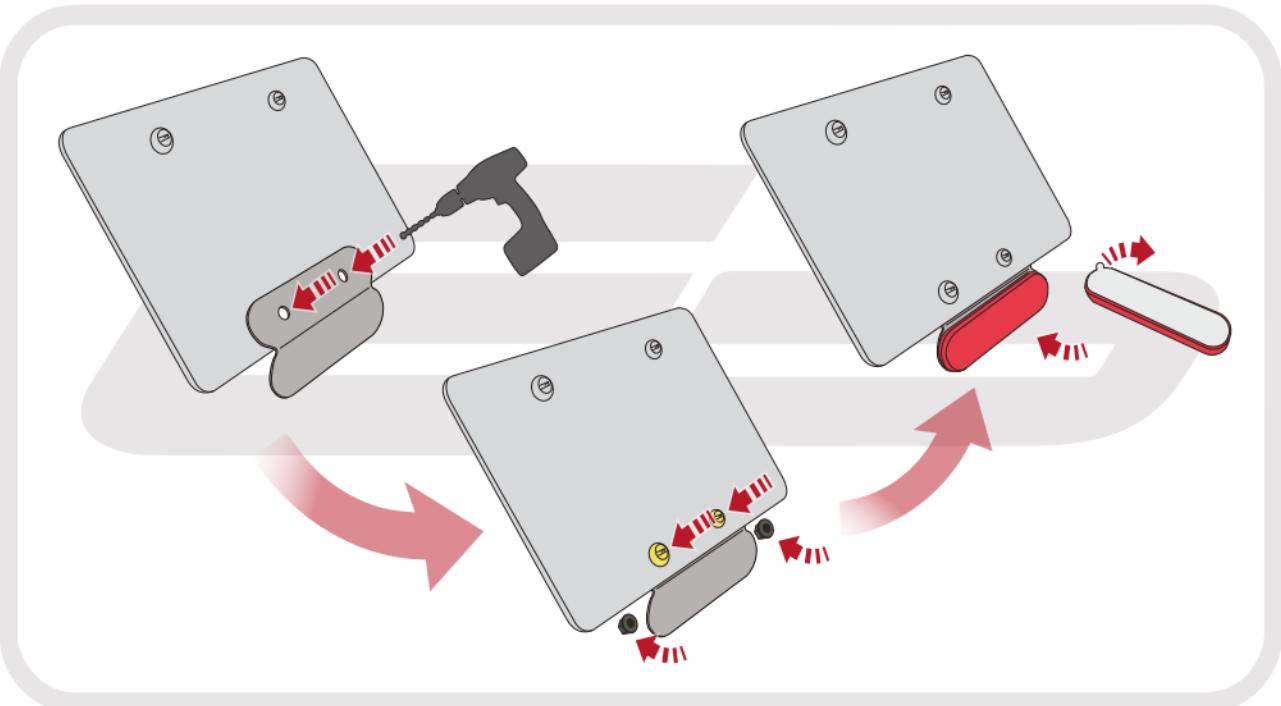

EVOTECH[®]
PERFORMANCE



EVOTECH[®]
P E R F O R M A N C E

www.evotech-performance.com