




## **FITTING INSTRUCTIONS FOR CP0221BL AERO CRASH PROTECTORS APRILIA 750 SHIVER 07'**

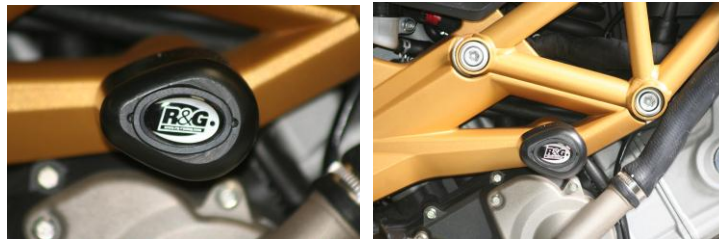

**PLEASE NOTE THAT THE WAY THE KIT IS PACKED DOES NOT NECESSARILY REPRESENT THE WAY OF MOUNTING TO THE BIKE**

Please note that in cases where kits are packed with rubber washers holding the components onto the bolt – *the rubber washers should be thrown away!*

- Undo the engine bar located mid engine.
- Take R&G replacement engine bar, and with a soft mallet use it to remove the OEM engine bar leaving equal amounts protruding from either side of the frame.
- Fit the two extensions onto either end of tie bar and tighten.
- Fit the protectors (see pictures above for orientation) making sure that you place the flat washer onto the bolt up to the bolt head followed by the shake proof washer. Tighten bolt until you feel some compression from inside the protector. Turn a little more so that you feel the compression increase slightly. Then apply a quarter turn. Do not overtighten as damage can occur to the bike. Do not exceed 40nm of torque.
- Fit the caps to the protectors.

*Due to the risk of cross-threading of bolts etc; we always recommend that our products be fitted by one of our official dealers or a qualified mechanic.*

### **CONSUMER NOTICE**

The catalogue description and any exhibition of samples are only broad indications of the Products and R&G may make design changes which do not diminish their performance or visual appeal and supplying them in such state shall conform to the order. The Buyer acknowledges no representation or warranty (other than as to title) has been given or will apply to the Products other than those in R&G's order or confirmation and the Buyer confirms it has chosen the Products as being of merchantable quality and suitable for its particular purposes. Where R&G fits the Products or undertakes other services it shall exercise reasonable skill and care and rectify any fault free of charge unless the workmanship has been disturbed. The Buyer is responsible for ensuring that the warranty on the motorcycle is not affected by the fitting of the Products. On return of any defective Products R&G shall at its option either supply a replacement or refund the purchase money but shall not be liable if the Products have been modified or used or maintained otherwise than in accordance with R&G's or manufacturer's instructions and good engineering practice or if the defect arises from accident or neglect. Other than identified above and subject to R&G not limiting its liability for causing death and personal injury, it shall not be liable for indirect or consequential loss and otherwise its liability shall be limited to the amounts paid by the Buyer for the Products or the fitting or service concerned. These terms do not affect the Buyer's statutory rights.

### **R&G RACING RETURNS POLICY (NON-FAULTY GOODS)**

Returns must be pre-authorized (if not pre-authorized the return will be rejected). Goods may only be returned direct to us if they were purchased direct from us (customer must prove if necessary). Otherwise to be returned to original vendor. Goods must be in re-sellable condition, in the opinion of R&G Racing. All returns are subject to a 25% restocking and handling fee (25% of the gross value exc. P&P – at the prevailing price at time of purchase). The customer must pay any and all carriage charges. No returns of discontinued products, unless within 14 days of purchase. This policy does not affect your statutory rights and does not refer to faulty goods.

R&G Racing

Unit 5K, Blacknest Industrial Park, Blacknest Road, Alton, Hampshire, GU34 4PX

Tel: +44 (0)870 220 6380 Fax: +44 (0)1420 521101 [www.rg-racing.com](http://www.rg-racing.com) Email: [info@rg-racing.com](mailto:info@rg-racing.com)



**FRANCE**  
**INSTRUCTIONS DE MONTAGE DES POTECTIONS**  
**CP0221BL AERO**  
**APRILIA 750 SHIVER 07'**

**LA PRESENTATION DES PIECES R&G DANS L'EMBALLAGE N'EST PAS TOUJOURS IDENTIQUE AU SENS DE MONTAGE.**

**Merci de noter que dans le cas où les protections sont assemblées avec une bague en caoutchouc, merci de bien vouloir le retirer lors du montage des pièces sur la moto.**

- Enlever la barre de fixation moteur localisée au milieu de la moto.
- Remplacer la barre d'origine par la barre livrée dans le kit.
- Fixer les deux pièces en inox sur la barre R&G et serrer le tout.
- Glisser une rondelle crantée et une rondelle lisse sur les vis R&G et glisser le tout dans les tampons.
- Fixer les tampons sur les extensions (voir les photos pour le positionnement des tampons).
- Serrer les vis jusqu'à ce que vous sentiez la compression à l'intérieur des tampons, Faire encore un quart de tours.
- Ne pas trop serrer, couple de serrage Maxi 40nm.
- Clipper les caches dans les tampons.